

1.4.0 ESR 1.2.0-1.2.1 1.4.0.

ESR-1000 1.4.0 1.2.0, 1.2.1. - 1.0.7, 1.1.0 1.2.1. 1.2.1 . 1.4.0. ESR-10 1.0.9.

ESR, VRRP softgre :

- 1. GRE .
 - wireless-controller ESR no peer-address. . ESR 1.4.0 wireless-controller .
 - ESR 1.4.0 , softgre .
- 2. softgre- , .

1.4.0 :

- 1. , , UP, DOWN. , DOWN - DOWN. , , DOWN . UP forced-up. :

```
esr-1000(config)# vlan 100
esr-1000(config-vlan)# force-up
esr-1000(config-vlan)# exit
```

- 2. SNMP community 8 128 . 1.4.0 / . , SNMP, . SNMP 8 128 , .

- 3. SNMP. :

```
esr-1000(config)# snmp-server system-shutdown
```

- 4. SNMP. . , TFTP-, . WiFi SoftWLC 1.9 ESR EMS.

:
copy [tftp://<IP tftp>:</>](#) system:firmware
:

```
copy tftp://101.0.0.24:/esr1000-1.4.0-build71.firmware system:firmware
```


:

```
esr-1000# show bootvar
```

Image	Version	Date	Status	After reboot
1	1.4.0 build 71[840918484c]	date 06/02/2018 time 15:48:54	Not Active	
2	1.2.1 build 30[4a4d60fda2]	date 12/12/2017 time 09:21:10	Active	*

, . :

```
esr-1000# boot system image-1
Do you really want to set boot system image? (y/N): y
```


:

```
esr-1000# reload system
Do you really want to reload system ? (y/N): y
```


.
.

. 1.4.0 1.2.1 1.2.0 () . , .