

1.4.0 ESR 1.2.0-1.2.1 1.4.0.

ESR-1000 1.4.0 1.2.0, 1.2.1. - 1.0.7, 1.1.0 1.2.1. 1.2.1 . 1.4.0. ESR-10 1.0.9.

ESR, VRRP softgre :

1. GRE .

- *wireless-controller* ESR *no peer-address*. . ESR 1.4.0 wireless-controller .
- ESR 1.4.0 , softgre .

2. softgre- , .

1.4.0 :

1. , , UP, DOWN. , DOWN - DOWN. , , DOWN . UP forced-up. :

```
esr-1000(config)# vlan 100
```

```
esr-1000(config-vlan)# force-up
```

```
esr-1000(config-vlan)# exit
```

2. SNMP community 8 128 . 1.4.0 / . , SNMP, . SNMP 8 128 , .

3. SNMP. :

```
esr-1000(config)# snmp-server system-shutdown
```

4. SNMP. , , TFTP-, . WiFi SoftWLC 1.9 ESR EMS.

:

copy <http://<IP tftp->:< > system:firmware>

:

```
copy tftp://101.0.0.24:/esr1000-1.4.0-build71.firmware system:firmware
```

:

```
esr-1000# show bootvar
```

Image	Version	Date	Status	After reboot
-------	---------	------	--------	--------------

1	1.4.0 build	date 06/02/2018 time	Not Active	
---	-------------	----------------------	------------	--

71[840918484c]	15:48:54			
----------------	----------	--	--	--

2	1.2.1 build	date 12/12/2017 time	Active	*
---	-------------	----------------------	--------	---

30[4a4d60fda2]	09:21:10			
----------------	----------	--	--	--

, . :

```
esr-1000# boot system image-1
```

```
Do you really want to set boot system image? (y/N): y
```

:

```
esr-1000# reload system
```

```
Do you really want to reload system ? (y/N): y
```

.

.

. 1.4.0 1.2.1 1.2.0 () . , .