## [NTU-RG-5XXX / NTU-52X] Port Triggering


Port Triggering	, .						
: Services Fire	wall Port Trigg	ering					
Trigger start port Protocol - (TCP, Incoming start por	UDP, TCP and U	JDP).	NT .				
Port Triggering	Configuration	n					
entries in this tak	ole are used to	open a por	t automatically for	incoming	traffic after a p	oort has been ac	cessed by outgoing traffic
Port Triggering:	O Disable 💿	Enable Ap	ply Changes				
Comment	Trigger	start port	Trigger end port	Protocol	Incoming sta	rt port Incomin	g end port Interface
CSGO	27015		27030	TCP ✓	27036	27037	nas0_0 <b>~</b>
Add							
current port trigg	ering table						
Select C	omment	Protocol	Trigger port		Incoming po	rt Interface	e
	CSGO	TCP	27015-27030		27036-2703	7 nas0_0	
Delete Selected	Delete All						

## NTU-52W

: Services Firewall Port Triggering

## **Port Triggering Configuration**

entries in this table are used to open a port automatically for incoming traffic after a port has been accessed by outgoing traffic

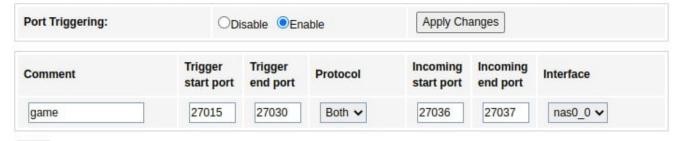

Add

current port triggering table								
Select	Comment	Protocol	Trigger port	Incoming port	Interface			
	game	TCP+UDP	27015-27030	27036-27037	nas0_0			

Delete Selected Delete All