

# IP Helper MES5312/53xxA/5400-xx

IP Helper UDP- .

└ DHCP (67,68) DHCP Relay.

.

VLAN 10 UDP- (49). 20.20.20.1, VLAN 20.

:

```
console(config)# interface vlan 10
```

```
console(config-if)# ip address 10.10.10.2 /24
```

```
console(config)# interface vlan 20
```

```
console(config-if)# ip address 20.20.20.2 /24
```

IP Helper:

```
console(config)# ip helper-address 10.10.10.2 20.20.20.1 49
```

,

10.10.10.2 - IP , UDP-. ALL.

20.20.20.1 - IP , . . .

49 - UDP , , , .

└ , 37,42,49,53,137,138.

└ DHCP (67,68) DHCP Relay.

└ , , ( ).

:

```
show ip helper-address
```

Interface	Helper Address	Udp port
10.10.10.2	20.20.20.1	49