

MES14xx, MES24xx, MES3400-xx, MES37

```
/
:
• ;
• IP- ;
:
•
.

SPAN RSPAN.

4 .

SPAN c gigabitethernet 0/1 gigabitethernet 0/2 gigabitethernet 0/3

console(config)# monitor session 1 source interface gigabitethernet 0/1 both
console(config)# monitor session 1 source interface gigabitethernet 0/2 both
console(config)# monitor session 1 dest interface gigabitethernet 0/3

RSPAN gigabitethernet 0/3 gigabitethernet 0/2 vlan 100

console(config)# monitor session 2 source interface gigabitethernet 0/3 both
console(config)# monitor session 2 destination interface gigabitethernet 0/2
console(config)# monitor session 2 destination remote vlan 100

remote VLAN MAC-.

MES14xx/24xx :
console(config)# vlan 100
console(config-vlan)# set unicast-mac learning disable
MES23xx/33xx/53xx:
console(config)# no mac address-table learning vlan 100
, VLAN , .

console# show monitor all
```