

# MES14xx, MES24xx, MES3400-xx, MES37

/

:

- IP- ;

:

.

SPAN RSPAN.

4 .

SPAN c gigabitethernet 0/1 gigabitethernet 0/2 gigabitethernet 0/3

```
console(config)# monitor session 1 source interface gigabitethernet 0/1 both
```

```
console(config)# monitor session 1 source interface gigabitethernet 0/2 both
```

```
console(config)# monitor session 1 dest interface gigabitethernet 0/3
```

RSPAN gigabitethernet 0/3 gigabitethernet 0/2 vlan 100

```
console(config)# monitor session 2 source interface gigabitethernet 0/3 both
```

```
console(config)# monitor session 2 destination interface gigabitethernet 0/2
```

```
console(config)# monitor session 2 destination remote vlan 100
```

remote VLAN MAC-.

MES14xx/24xx :

```
console(config)# vlan 100
```

```
console(config-vlan)# set unicast-mac learning disable
```

MES23xx/33xx/53xx:

```
console(config)# no mac address-table learning vlan 100
```

, VLAN , .

```
console# show monitor all
```