

## 1.8.7 VoIP



ESR-12V/12VF/14VF

- SIP
  - SIP-
    - sip profile
    - codec-packettime g711
    - codec-packettime g723
    - codec-packettime g729
    - conference type
    - conference uri address
    - conference uri port
    - conference uri user
    - description
    - dialplan pattern
    - echo-caceller
    - enable
    - fax protocol t38
    - fax protocol t38 redundant
    - ims call-holding
    - ims call-transfer
    - ims call-waiting
    - ims conference
    - ims hotline
    - ims type
    - payload dtmf
    - rtcp
    - rtcp extend-reports
    - rtcp keepalive
    - rtcp tx-period
    - session expires-timer
    - session keepalive
    - session timer disable
    - silence-detect
    - sip-domain address
    - sip-domain registration enable
    - sip-domain registration retry
    - source-address
    - transfer dtmf
    - transfer flash
  - SIP PROXY
    - proxy primary
    - proxy primary keepalive
    - proxy primary mode
    - proxy secondary
    - enable
    - ip address proxy-server
    - ip address registration-server
    - ip port proxy-server
    - ip port registration-server
    - registration
  - SIP
    - authentication mode
    - authentication name
    - authentication password
    - sip service
  - - description
    - dialplan pattern
    - enable
    - pattern
  - - prefix busy
    - prefix call-waiting
    - prefix dnd
    - prefix hotline
    - prefix no-answer
    - prefix-pickup
    - prefix unconditional
    - voice services
- SIP ALG
  - Service-voip routing
- PBX
  - PBX -

- enable
- expiry
- session-timer type
- session-timer expires
- session-timer min-se
- session-timer refresher
- profile
- register-server
- ruleset
- user
- transport protocol
- transport port
- fax
- **PBX**
  - password
  - profile
- **PBX**
  - description
  - rule
  - enable
  - pattern
  - description
- **PBX**
  - protocol
  - authentication password
  - username
  - ip address
  - ip port
  - domain
  - profile
  - enable
- **SIP PBX**
  - type
  - client
  - from-domain
  - security level
  - nat
  - codec allow
  - qualify
  - host-address
  - sip-port
  - authentication password
  - username
  - protocol
  - ruleset
  - in-band
  - rtp-media
  - group pickup
  - group calling
- **PBX**
  - show pbx peers
  - show pbx registrations

## SIP

### SIP-

#### **sip profile**

SIP- .

(no) SIP-.

[np] sip profile <NUM>

<NUM> – SIP-, 1 5.

10

CONFIG

```
esr(config)# sip profile 1
```

### **codec-packettime g711**

G711. – RTP-.

(no) .

```
codec-packettime g711 <PTIME> no codec-packettime g711
```

```
<PTIME> – , [10, 20, 30, 40, 50, 60].
```

20

10

CONFIG-SIP-PROFILE

```
esr(config-sip-profile)# codec-packettime g711 50
```

### **codec-packettime g723**

G723. – RTP-.

(no) .

```
codec-packettime g723 <PTIME> no codec-packettime g723
```

```
<PTIME> – , [30, 60, 90].
```

30

10

CONFIG-SIP-PROFILE

```
esr(config-sip-profile)# codec-packettime g723 60
```

### codec-packettime g729

G729. – RTP-.

(no) .

```
codec-packettime g729 <PTIME> no codec-packettime g729
```

<PTIME> – , [10, 20, 30, 40, 50, 60, 70, 80].

20

10

### CONFIG-SIP-PROFILE

```
esr(config-sip-profile)# codec-packettime g729 70
```

### conference type

no conf\_mode .

```
conference type <MODE> no conf_mode
```

<MODE> – . :

- local – «flash+3»;
- remote – : «flash+3» Invite , « ». , RFC4579.

local

10

### CONFIG-SIP-PROFILE

```
esr(config-sip-profile)# conference type remote
```

### conference uri address

SIP-URI: user@address:port.

(no) .

conference uri address <ADDR> conference uri address

<ADDR> – ipv4- .

IP-, AAA.BBB.CCC.DDD, [0..255]. – example.loc.

10

#### CONFIG-SIP-PROFILE

```
esr(config-sip-profile)# conference uri address sipnetwork.loc
```

#### conference uri port

SIP-URI: user@address:port.

(no) .

conference uri port <PORT> no conference uri port

<PORT> – TCP/UDP- c , [1..65535].

5060

10

#### CONFIG-SIP-PROFILE

```
esr(config-sip-profile)# conference uri port 5066
```

#### conference uri user

SIP-URI: user@address:port.

(no) .

conference uri user <USER> no conference uri user

```
<USER>- , 31 .
```

conf

10

CONFIG-SIP-PROFILE

```
esr(config-sip-profile)# conference uri user conference
```

### **description**

SIP-.

(no) SIP-.

```
description <DESCRIPTION> no description
```

```
<DESCRIPTION>- SIP-, 255 .
```

10

CONFIG-SIP-PROFILE

```
esr(config-sip-profile)# description "first sip profile"
```

### **dialplan pattern**

SIP-.

(no) .

```
dialplan pattern <DNAME> no dialplan pattern
```

```
<DNAME>- , 31 .
```

10

#### CONFIG-SIP-PROFILE

```
esr(config-sip-profile)# dialplan pattern dialplanName
```

#### **echo-caceller**

SIP-.

(no) .

[no] echo-canceller

Echo-canceller .

10

#### CONFIG-SIP-PROFILE

```
esr(config-sip-profile)# echo-canceller
```

#### **enable**

SIP-.

(no) SIP-.

[no] enable

.

10

#### CONFIG-SIP-PROFILE

```
esr(config-sip-profile)# enable
```

### **fax protocol t38**

T.38 – re-invite T.38 .

(no) T.38.

[no] fax protocol t38

t38 .

10

### CONFIG-SIP-PROFILE

```
esr(config-sip-profile)# fax protocol t38
```

### **fax protocol t38 redundant**

T.38, , T.38.

(no) T.38.

fax protocol t38 redundant <SIZE> no fax protocol t38 redundant

<SIZE> – , T.38, 0, 1, 2.

0

10

### CONFIG-SIP-PROFILE

```
esr(config-sip-profile)# fax protocol t38 redundant 2
```

### **ims call-holding**

« ». XML Notify, / « ». , «call-hold», :

<call-hold active="true"/>

```
:  
<call-hold active="false"/>  
(no) .
```

ims call-holding <NAME> no ims call-holding

<NAME> - « », 31 .

call-hold

10

#### CONFIG-SIP-PROFILE

```
esr(config-sip-profile)# ims call-holding hold
```

#### ims call-transfer

```
« ». XML Notify, / « ». , «call-transfer», :  
<call-transfer active="true"/>  
:  
<call-transfer active="false"/>  
(no) .
```

ims call-transfer <NAME> no ims call-transfer

<NAME> - « », 31 .

explicit-call-transfer

10

#### CONFIG-SIP-PROFILE

```
esr(config-sip-profile)# ims call-transfer transfer
```

#### ims call-waiting

```
« ». XML Notify, / « ». , «call-waiting», :
```

```
<call-waiting active="true"/>
:
<call-waiting active="false"/>
(no) .
```

ims call-waiting <NAME> no ims call-waiting

<NAME> - « », 31 .

call-waiting

10

#### CONFIG-SIP-PROFILE

```
esr(config-sip-profile)# ims call-waiting wait
```

#### ims conference

```
« »- XML Notify, / « ». , «three-party-conference», :
<three-party-conference active="true"/>
:
<three-party-conference active="false"/>
(no) .
```

ims conference <NAME> no ims conference

<NAME> - « », 31 .

three-party-conference

10

#### CONFIG-SIP-PROFILE

```
esr(config-sip-profile)# ims conference conf
```

#### ims hotline

```

« »- XML Notify, « ». ., «hot-line-service» 30001 6 - :
<hot-line-service>
<addr>30001</addr>
<timeout>6</timeout>
</hot-line-service>
(no) .

```

ims hotline <NAME> no ims hotline

<NAME>- « », 31 .

hot-line-service

10

CONFIG-SIP-PROFILE

```
esr(config-sip-profile)# ims hotline hot
```

### ims type

IMS.

(no) IMS.

ims type <MODE> no ims type

<MODE>- IMS, :

- implicit -- IMS (*IP Multimedia Subsystem*). « »( RFC4579), « », « », « »( , ) IMS Notify, / XCAP (- XML, RFC4825).  
SUBSCRIBE NOTIFY-, IMS, . « »- XML Notify, / « ». , «call-hold», :  
<call-hold active="true"/>  
:  
<call-hold active="false"/>
- explicit -- IMS (*IP Multimedia Subsystem*). « »( RFC 4579), « », « »( , ) IMS Notify, / XCAP (- XML , RFC4825).  
SUBSCRIBE , NOTIFY , IMS, .

IMS .

10

CONFIG-SIP-PROFILE

```
esr(config-sip-profile)# ims type implicit
```

## **payload dtmf**

RFC2833.

(no) .

```
payload dtmf <TYPE> no payload dtmf
```

<TYPE> – RFC2833, – [96..127].

96

10

## CONFIG-SIP-PROFILE

```
esr(config-sip-profile)# payload dtmf 101
```

## **rtcp**

RTCP .

(no) RTCP.

[no] rtcp

/ RTCP.

10

## CONFIG-SIP-PROFILE

```
esr(config-sip-profile)# rtcp
```

## **rtcp extend-reports**

RTCP Extended Reports RFC 3611.

(no) RTCP Extended Reports.

```
[no] rtcp extend-reports
```

RTCP Extended Reports .

10

CONFIG-SIP-PROFILE

```
esr(config-sip-profile)# rtcp extend-reports
```

### **rtcp keepalive**

RTCP, . . . RTCP-, ESR-12V/12VF/14VF .  
(no) .

```
rtcp keepalive <TIME> no rtcp keepalive
```

<TIME> – RTCP , [1..30].

5

10

CONFIG-SIP-PROFILE

```
esr(config-sip-profile)# rtcp keepalive 25
```

### **rtcp tx-period**

RTCP.  
(no) .

```
rtcp tx-period <TIME> no rtcp tx-period
```

<TIME> – RTCP , – [1..60].

5

10

#### CONFIG-SIP-PROFILE

```
esr(config-sip-profile)# rtcp tx-period 40
```

#### session expires-timer

RFC2028 ( 90 1800 , 120 ).

(no) .

session expires-timer <TIME> no session expires-timer

<TIME> - , [90..1800].

120

10

#### CONFIG-SIP-PROFILE

```
esr(config-sip-profile)# session expires-timer 180
```

#### session keepalive

(no) .

session keepalive <TIME> no session keepalive

<TIME> - , [90..80000].

1800

10

CONFIG-SIP-PROFILE

```
esr(config-sip-profile)# session keepalive 900
```

**session timer disable**

timer (RFC 4028).

(no) RFC4028.

```
[no] session timer disable
```

10

CONFIG-SIP-PROFILE

```
esr(config-sip-profile)# session timer disable
```

**silence-detect**

(no)

```
[no] silence-detect
```

10

CONFIG-SIP-PROFILE

```
esr(config-sip-profile)# silence-detect
```

### **sip-domain address**

SIP-, .  
(no) SIP-.

    sip-domain address <ADDRESS> no sip-domain address

    <ADDRESS> – SIP- , ipv4- .

10

### CONFIG-SIP-PROFILE

```
esr(config-sip-profile)# sip-domain address sip.network.com
```

### **sip-domain registration enable**

SIP Domain (SIP- Request-Line Register).  
(no) SIP Domain .

[no] sip-domain registration enable

SIP Domain .

10

### CONFIG-SIP-PROFILE

```
esr(config-sip-profile)# sip-domain registration enable
```

### **sip-domain registration retry**

, SIP- 2/3 .  
(no) .

    sip-domain registration retry <INTERVAL> no sip-domain registration retry

```
<INTERVAL> – , SIP- [30..10000].
```

1800

10

#### CONFIG-SIP-PROFILE

```
esr(config-sip-profile)# sip-domain registration retry 900
```

#### source-address

```
– NAT () (WAN) (NAT), ESR-12V/12VF/14VF.  
(no) .
```

```
source-address <IPv4 address> no source-address
```

```
<IPv4 address> – (WAN) (NAT), ESR-12V/12VF/14VF.
```

10

#### CONFIG-SIP-PROFILE

```
esr(config-sip-profile)# source-address 232.104.45.12
```

#### transfer dtmf

```
DTMF.  
(no) .
```

```
transfer dtmf <MODE> no transfer dtmf
```

```
<MODE> – DTMF, :
```

```
info – SIP INFO;  
inband – ;  
rfc-2833 – RFC2833 RTP.
```

## CONFIG-SIP-PROFILE

```
esr(config-sip-profile)# transfer dtmf inband
```

### transfer flash

Flash.

(no) .

```
transfer flash <MODE> no transfer flash
```

<MODE> – Flash, :

- ssc – SIP INFO. *flash Application /sscc event flashhook*.
- dtmf – SIP INFO. *flash Application /dtmf-relay signal =hf*.
- hook-flash – SIP INFO. *flash Application /Hook Flash signal =hf*.
- broadsoft – SIP INFO. *flash Application /Broadsoft event flashhook*.

hook-flash

## CONFIG-SIP-PROFILE

```
esr(config-sip-profile)# transfer flash dtmf
```

## SIP PROXY

### proxy primary

SIP-. (no) SIP-.

[no] proxy primary

10

#### CONFIG-SIP-PROFILE

```
esr(config-sip-profile)# proxy primary
```

#### **proxy primary keepalive**

(no) .

```
proxy primary keepalive <PERIOD> no proxy primary keepalive
```

```
<PERIOD> – SIP-, [10..3600].
```

30

10

#### CONFIG-SIP-PROFILE

```
esr(config-sip-profile)# proxy primary keepalive 60
```

#### **proxy primary mode**

SIP-.

(no) .

```
proxy primary mode <MODE> no proxy primary mode
```

```
<MODE> – SIP-, :
```

- parking – SIP- SIP-;
- homing – SIP- SIP-.

homing

10

#### CONFIG-SIP-PROFILE

```
esr(config-sip-profile)# proxy primary mode parking
```

### **proxy secondary**

SIP-.

(no) SIP-.

```
proxy secondary <NUM> no proxy secondary
```

```
<NUM> - SIP-, [1..4].
```

10

### **CONFIG-SIP-PROFILE**

```
esr(config-sip-profile)# proxy secondary 2
```

### **enable**

SIP-.

(no) SIP-.

```
[no] enable
```

SIP- .

10

### **CONFIG-VOIP-SIP-PROXY**

```
esr(config-voip-sip-proxy)# enable
```

### **ip address proxy-server**

IP- -.

(no) .

```
ip address proxy-server <ADDR> no ip address proxy-server
```

<ADDR>- -, ipv4- . ipv4- .

IP-, AAA.BBB.CCC.DDD, [0..255]. - example.loc.

10

CONFIG-VOIP-SIP-PROXY

```
esr(config-voip-sip-proxy)# ip address proxy-server 10.245.56.12
```

### **ip address registration-server**

(no) .

```
ip address registration-server <ADDR> no ip address registration-server
```

<ADDR>- , ipv4- . ipv4- .

IP-, AAA.BBB.CCC.DDD, [0..255]. - example.loc.

10

CONFIG-VOIP-SIP-PROXY

```
esr(config-voip-sip-proxy)# ip address registration-server 10.245.56.12
```

### **ip port proxy-server**

UDP- proxy-.

(no) .

```
ip port proxy-server <PORT> no ip port proxy-server
```

<PORT> – UDP- proxy , [1..65535].

5060

10

CONFIG-VOIP-SIP-PROXY

```
esr(config-voip-sip-proxy)# ip port proxy-server 5080
```

### **ip port registration-server**

UDP- .

(no) .

```
ip port registration-server <PORT> no ip port registration-server
```

<PORT> – UDP- , [1..65535].

5060

10

CONFIG-VOIP-SIP-PROXY

```
esr(config-voip-sip-proxy)# ip port registration-server 5080
```

### **registration**

SIP-. .

(no) SIP-. .

[no] registration

10

CONFIG-VOIP-SIP-PROXY

```
esr(config-voip-sip-proxy)# registration
```

## SIP

**authentication mode**

(no) .

authentication mode <MODE> no authentication mode

<MODE> - , :

- global - / ;
- user-defined - /.

user-defined

10

CONFIG-SIP

```
esr(config-sip)# authentication mode global
```

**authentication name**

, authentication mode global.

(no) .

authentication name <LOGIN> no authentication name

<LOGIN> - , 31 .

10

CONFIG-SIP

```
esr(config-sip)# authentication name esr12V
```

### **authentication password**

, authentication mode global.

(no) .

```
authentication password { <PASS> | encrypted <ENCRYPTED-PASS>} no authentication password
```

```
<PASS>- , 16;
```

```
<ENCRYPTED-PASS>-- sha512, [2..32].
```

10

CONFIG-SIP

```
esr(config-sip)# authentication password superpass
```

### **sip service**

SIP-.

(no) .

```
[no] sip services
```

10

CONFIG

```
esr(config)# sip services  
esr(config-sip)#
```

## **description**

(no) .

```
description <DESCRIPTION> no description
```

```
<DESCRIPTION>- , 255 .
```

10

## **CONFIG-DIAL-RULESET**

```
esr(config-dial-ruleset)# description first
```

## **dialplan pattern**

(no) .

```
dialplan pattern <NAME> no dialplan pattern
```

```
<NAME>- , 31 .
```

10

## **CONFIG**

```
esr(config)# dialplan pattern newplan
```

## **enable**

(no) .

[no] enable

10

## CONFIG-DIAL-RULESET

```
esr(config-dial-ruleset)# enable
```

## **pattern**

(no) .

pattern <REGEXP> no pattern

<REGEXP> - , . 1024 .

"S5, L5 ([xABCD\*#].S)"

10

## CONFIG-DIAL-RULESET

```
esr(config-dial-ruleset)# pattern "S5, L5 (41xx@{local} | 7383xxxxxxxx)"
```

## **prefix busy**

, , , “ ”.

(no) .

```
prefix busy <CODE> no prefix busy
```

```
<CODE>-, , « », [10..99].
```

.

10

## CONFIG-VOIP-SERVICES

```
esr(config-voip-services)# prefix busy 99
```

### **prefix call-waiting**

```
, , , « ».  
(no) .
```

```
prefix call-waiting <CODE> no prefix call-waiting
```

```
<CODE>-, , « », [10..99].
```

.

10

## CONFIG-VOIP-SERVICES

```
esr(config-voip-services)# prefix call-waiting 89
```

### **prefix dnd**

```
, , , « ».  
(no) .
```

```
prefix dnd <CODE> no prefix dnd
```

```
<CODE>-, , « », [10..99].
```

10

## CONFIG-VOIP-SERVICES

```
esr(config-voip-services)# prefix dnd 79
```

### **prefix hotline**

, , , «/».  
(no) .

```
prefix hotline <CODE> no prefix hotline
```

```
<CODE>-, , «/», [10..99].
```

10

## CONFIG-VOIP-SERVICES

```
esr(config-voip-services)# prefix hotline 69
```

### **prefix no-answer**

, , , « ».  
(no) .

```
prefix no-answer <CODE> no prefix no-answer
```

```
<CODE>-, , « », [10..99].
```

10

CONFIG-VOIP-SERVICES

```
esr(config-voip-services)# prefix no-answer 59
```

### **prefix-pickup**

, , , « ».

(no) .

```
prefix pickup <CODE> no prefix pickup
```

```
<CODE>-, , « », [10..99].
```

10

CONFIG-VOIP-SERVICES

```
esr(config-voip-services)# prefix pickup 49
```

### **prefix unconditional**

, , , « ».

(no) .

```
prefix unconditional <CODE> no prefix unconditional
```

```
<CODE>-, , « », [10..99].
```

10

CONFIG-VOIP-SERVICES

```
esr(config-voip-services)# prefix unconditional 39
```

## **voice services**

(no) .

[no] voice services

10

## CONFIG

```
esr(config)# voice services
```

## **SIP ALG**

### **Service-voip routing**

VoIP PBX .

(no) .

[no] service-voip routing

10

CONFIG-E1

CONFIG-IF-GI

CONFIG-MULTILINK

CONFIG-PORT-CHANNEL

CONFIG-GRE

CONFIG-IP4IP4

CONFIG-PPPOE

CONFIG-PPTP

CONFIG-VTI

CONFIG-BRIDGE

```
esr(config-if-gi)# service-voip routing
```

## PBX

### PBX -

#### enable

PBX.

(no) PBX .

[no] enable

10

### CONFIG-PBX

```
esr (config-pbx)# enable
```

#### expiry

(no) .

[no] expiry [min|max] <EMIN>

Min – ;

Max – ;

<EMIN> – [60...64800] .

Min – 60 ;

Max – 3600 .

10

### CONFIG-PBX

```
esr (config-pbx)# expiry min 60
```

### session-timer type

(no) .

[no] session-timer type <TTIME>

<TTIME> - [originate, accept, refuse];

originate - ;

accept - ;

refuse - .

refuse

10

CONFIG-PBX

```
esr (config-pbx)# session-timer type accept
```

### session-timer expiries

(no) .

[no] session-timer expiries <ETIME>

<ETIME> - , [90-80000].

1800 .

10

CONFIG-PBX

```
esr (config-pbx)# session-timer expiries 600
```

## **session-timer min-se**

(no) .

[no] session-timer min-se <MTIME>

<MTIME> - , [90-1800].

90 .

10

CONFIG-PBX

```
esr (config-pbx)# session-timer min-se 100
```

## **session-timer refresher**

(no) .

[no] session-timer refresher <RTIME>

<RTIME> - , (uac|uas);

uac - , ;

uas - , .

uas

10

CONFIG-PBX

```
esr (config-pbx)# session-timer refresher uas
```

## **profile**

SIP PBX.

(no) .

```
[no] profile <PNAME
```

```
<PNAME>- , 1 31 .
```

10

CONFIG-PBX

```
esr (config-pbx)# profile sip_phones
```

### **register-server**

PBX.

(no) .

```
[no] register-server <REGNAME>
```

```
<REGNAME>- 1 31 .
```

10

CONFIG-PBX

```
esr (config-pbx)# register-server ssw
```

### **ruleset**

PBX.

(no) .

```
[no] ruleset <RULNAME>
```

```
<RULNAME>- 1 31 .
```

10

CONFIG-PBX

```
esr (config-pbx)# ruleset local
```

## user

, PBX.

(no) .

[no] user <UNAME>

<UNAME>- , 1 31.

10

## CONFIG-PBX

```
esr(config-pbx)# user 1482
```

## transport protocol

, PBX.

(no) .

[no] transport protocol <PROTO>

<PROTO>- , { tcp | udp | both }.

udp

10

## CONFIG-PBX

```
esr (config-pbx)# transport protocol udp
```

## transport port

, PBX.

(no) .

[no] transport port <PORT>

```
<PORT>- , [1...65535].
```

5060

10

CONFIG-PBX

```
esr (config-pbx)# transport port 5060
```

### **fax**

PBX.

(no) .

```
[no] fax protocol t38 error-correction <FTYPE> datagram-size <SIZE>
```

```
<FTYPE>- , {fec | redundancy};
```

```
<SIZE>- , [272...512].
```

10

CONFIG-PBX

```
esr (config-pbx)# fax protocol t38 error-correction fec datagram-size 272
```

### **PBX**

#### **password**

PBX.

(no) .

```
password { <PASS> | encrypted <ENCRYPTED-PASS>} no password
```

```
<PASS>- , 16 ;
```

```
<ENCRYPTED-PASS>-- sha512, [2..32] .
```

10

CONFIG-PBX-USER

```
esr (config-pbx-user)# password 1234
```

### **profile**

SIP PBX.

(no) .

[no] profile <PNAME>

<PNAME> – SIP , 1 31 .

10

CONFIG-PBX-USER

```
esr (config-pbx-user)# profile sip_phones
```

## **PBX**

### **description**

PBX.

(no) .

[no] description <DESCR>

<DESCR>– , 1 255 .

10

CONFIG-PBX-RULESET

```
esr (config-pbx-ruleset)# description local_calls
```

### **rule**

(no) .

[no] rule <RIDX>

<RIDX>- , 1 1000.

10

CONFIG-PBX-RULESET

```
esr (config-pbx-ruleset)# rule 1
```

### **enable**

(no) .

[no] enable

10

CONFIG-PBX-RULE

```
esr (config-pbx-rule)# enable
```

### **pattern**

(no) .

[no] pattern <PSTR>

<PSTR>- , 1 256 .

(null)

10

## CONFIG-PBX-RULE

```
esr (config-pbx-rule)# pattern _XXX,1,Dial(SIP/${EXTEN})
```

### **description**

PBX.

(no) .

```
[no] description <DESCR>
```

```
<DESCR> - , 1 255 .
```

10

## CONFIG-PBX-RULE

```
esr (config-pbx-rule)# description local_calls
```

### **PBX**

### **protocol**

(no) .

```
[no] protocol <PROTO>
```

```
<PROTO> - , { tcp | udp }.
```

udp

10

## CONFIG-PBX-REG-SERVER

```
esr (config-pbx-reg-server)# protocol udp
```

## authentication password

(no) .

```
authentication password { <PASS> | encrypted <ENCRYPTED-PASS>} no authentication password
```

```
<PASS>= , 16;
```

```
<ENCRYPTED-PASS>-- sha512, [2..32].
```

10

## CONFIG-PBX-REG-SERVER

```
esr (config-pbx-reg-server)# authentication password 1234
```

## username

(no) .

```
[no] username <UNAME>
```

```
<UNAME>= .
```

10

## CONFIG-PBX-REG-SERVER

```
esr (config-pbx-reg-server)# username esr
```

## ip address

(no) .

```
[no] ip address <ADDR>
```

```
<ADDR> - , A.B.C.D, [0...255], 1 31 .
```

10

CONFIG-PBX-REG-SERVER

```
esr (config-pbx-reg-server)# ip address eltex-co.ru
```

### **ip port**

.

[no] ip port <PORT>

```
<PORT> - , [1...65535].
```

5060

10

CONFIG-PBX-REG-SERVER

```
esr (config-pbx-reg-server)# ip port 5060
```

### **domain**

SIP .

(no) .

[no] domain <DSTR>

```
<DSTR> - SIP , 1 31 .
```

10

CONFIG-PBX-REG-SERVER

```
esr(config-pbx-reg-server)# ssw3.11
```

## profile

```
SIP ,  
(no) .
```

```
[no] profile <PNAME>
```

```
<PNAME> - SIP , , 1 31 .
```

```
10
```

## CONFIG-PBX-REG-SERVER

```
esr (config-pbx-reg-server)# profile sip_phones
```

## enable

```
(no) .
```

```
[no] enable
```

```
10
```

## CONFIG-PBX-REG-SERVER

```
esr (config-pbx-reg-server)# enable
```

## SIP PBX

### type

```
, PBX SIP .  
(no) .
```

```
[no] type <TTYPE>
```

```
<TTYPE> - SIP , {local | remote};  
Local - ;  
Remote - .
```

10

#### CONFIG-PBX-PROFILE

```
esr (config-pbx-profile)# type local
```

#### client

```
, SIP .  
(no) .
```

```
[no] client <CTYPE>
```

```
<CTYPE> - , {peer | friend | user};  
• peer - ;  
• user - ;  
• friend - peer user.
```

peer

10

#### CONFIG-PBX-PROFILE

```
esr (config-pbx-profile)# client friend
```

#### from-domain

```
SIP .  
(no) .
```

```
[no] from-domain <FDSTR>
```

```
<FDSTR> - , 1 31 .
```

## CONFIG-PBX-PROFILE

```
esr (config-pbx-profile)# from-domain sip.domain
```

**security level**

(no) .

[no] security level <STYPE>

<STYPE> – {port | invite | invire-port | address | support};

Port – ip- ;

Invite – INVITE;

Invite-port – port invite;

Address – IP ;

Support – .

## CONFIG-PBX-PROFILE

```
esr (config-pbx-profile)# security level address
```

**nat**

NAT.

(no) .

[no] nat <NTYPE>

<NTYPE> – NAT, {comedia | force-port | both};

comedia – PBX, SDP;

force-port – rport, ;

Both – comedia force-port.

10

CONFIG-PBX-PROFILE

```
esr (config-pbx-profile)# nat comedia
```

### **codec allow**

, SIP.  
(no) .

[no] codec allow <ATYPE>

<ATYPE> – , {G711A | G711U | G722 | G726}.

10

CONFIG-PBX-PROFILE

```
esr (config-pbx-profile)# codec allow g722
```

### **qualify**

(no) .

[no] qualify <QTYPE>

<QTYPE> – , [100...100000].

1000

10

CONFIG-PBX-PROFILE

```
esr (config-pbx-profile)# qualify 100000
```

## host-address

,

(no) .

[no] host-address <ADDR>

<ADDR> - , A.B.C.D, [0...255] 1 31 .

dynamic

10

## CONFIG-PBX-PROFILE

```
esr (config-pbx-profile)# host-address 192.168.116.183
```

## sip-port

,

(no) .

[no] sip-port <PORT>

<PORT> - , 1 65535.

5060

10

## CONFIG-PBX-PROFILE

```
esr (config-pbx-profile)# sip-port 5062
```

## authentication password

,

(no) .

```
authentication password { <PASS> | encrypted <ENCRYPTED-PASS>} no authentication password  
  
<PASS>- , 16;  
<ENCRYPTED-PASS>-- sha512, [2..32].
```

10

#### CONFIG-PBX-PROFILE

```
esr (config-pbx-profile)# authentication password 1234
```

#### username

(no) .

```
[no] username <UNAME>
```

```
<UNAME>- , 1 31.
```

10

#### CONFIG-PBX-PROFILE

```
esr (config-pbx-profile)# username user
```

#### protocol

,  
(no) .

```
[no] protocol <PTYPE>
```

```
<PTYPE>- , {tcp | udp | both}.
```

udp

10

CONFIG-PBX-PROFILE

```
esr (config-pbx-profile)# protocol udp
```

**ruleset**

, .

(no) .

[no] ruleset <RNAME>

<RNAME>- , . 1 31 .

10

CONFIG-PBX-PROFILE

```
esr (config-pbx-profile)# ruleset local
```

**in-band**

in-band .

(no) .

[no] in-band <ITYPE>

<ITYPE>- { always | not | never };

- Always – in-band ;
- Not – in-band ;
- Never – in-band .

never

10

CONFIG-PBX-PROFILE

```
esr (config-pbx-profile)# in-band not
```

**rtp-media**

RTP .

(no) .

[no] rtp-media

10

## CONFIG-PBX-PROFILE

esr (config-pbx-profile)# rtp-media

**group pickup**

SIP .

(no) .

[no] group pickup &lt;GTYPE&gt;

&lt;GTYPE&gt; - , 1 31.

255

10

## CONFIG-PBX-PROFILE

esr (config-pbx-profile)# group pickup 16

**group calling**

SIP .

(no) .

[no] group calling &lt;GTYPE&gt;

&lt;GTYPE&gt; - , 1 31.

255

10

CONFIG-PBX-PROFILE

```
esr (config-pbx-profile)# group calling 16
```

## PBX

**show pbx peers**

, PBX.

show pbx peers

.

ROOT

```
esr# show pbx peers
```

**show pbx registrations**

PBX .

show pbx registrations

.

ROOT

```
esr# show pbx registrations
```