

RADIUS- MES23xx/33xx/35xx/5324

RADIUS , . RADIUS , . , RADIUS , .

MES2324.

1. ip- radius- key:

```
console(config)# radius-server host 192.168.10.5 key test
```

2. radius:

```
console(config)# aaa authentication login authorization default radius local
```

```
! 23xx, 33xx, 53xx break ( . ). 4.0.6 break/chain. chain - . 1000, 2000, 3000 .
```

3. :

```
console(config)# aaa authentication enable default radius enable
```

```
( radius-), , .
```

4. :

```
console(config)# username tester password eltex privilege 15
```

5. :

```
console(config)# enable password eltex
```

```
! (aaa authentication login default local).
```