

[MA4000-PX] PP4X master, slave?

, PP4X master, :

```
MA4000# show stack
```

```
PP4X: "MASTER" Master, SLAVE . . :
```

```
MA4000# stack master change
```