

Sntp MES14xx, MES24xx, MES3400-xx, MES37

sntp:

```
clock time source ntp
```

sntp- 192.168.1.1:

```
sntp
set sntp client enabled
set sntp client addressing-mode unicast
set sntp unicast-server ipv4 192.168.10.5
```

:

```
1. :
set sntp client time-zone +07:00
```

```
2. (hh:mm/ampm):
set sntp client clock-format ampm
```

Show-:

```
show clock
show sntp clock
show sntp status
show sntp statistics
```