

NTP

PP4 NTP (SNTP) FXS72 .

:

```
enable
configure
ntp client server ip xx.xx.xx.xx (hostname)
ntp client poll-period 10..1440
ntp client enable
do commit
do confirm
```