

:

1. ;
2. reload;
3. .

3. 1,2 .

. .

:

1. telnet/ssh (,) .
show running-config
show bootvar
show version
show stack-status
show stack-port
show interfaces status all
show fiber-ports optical-transceiver all
show fiber-ports optical-transceiver-info all
show logging persistent
show logging buff
debug tech-support

unit_id - . .

2. ;
3. ?
4. -, ?
5. , snmp? , OID.

<https://eltex-co.ru/support/>, .