

QoS MES5312/53xxA/5400-xx

QoS (Quality of service –), , 8 . Strict Priority.

FIFO: – (First In – First Out).

QoS.

qos trust cos / dscp / dscp-cos

- cos - 802.1p 802.1q
- dscp - DSCP IP-
- cos/dscp - IP-, DSCP, L2- (PPPoE), cos.

show qos

console# **sh qos**

Qos: Basic mode

Basic trust: dscp

DSCP

DSCP :

console# **show qos map dscp-queue**

Dscp-queue map:

Dscp-queue map:

d1 :	d2	0	1	2	3	4	5	6	7	8	9
0 :		02	01	01	01	01	01	01	01	01	03
1 :		03	03	03	03	03	03	07	04	04	04
2 :		04	04	04	04	07	05	05	05	05	05
3 :		05	05	07	06	06	06	06	06	06	06
4 :		07	08	08	08	08	08	08	08	07	07
5 :		07	07	07	07	07	07	07	07	07	07
6 :		07	07	07	07						

, .., DSCP 36 6

qos map dscp-queue <dscp-list> to <queue number>

cos :

show qos interface queuing

.....

Cos-queue map:

cos-qid

0-1

1-1

2-2

3-5

4-4

5-7

6-7

7-6

wrr-queue cos-map <queue number> <cos values>

/ [QoS MES5312/53xxA/5400-xx](#)