

# property ONT

ACS , ONT private. , NTU.

	ONT	
IP DMZ	NTU-2V/VC; NTU-2W; NTU /NTP-RG-14XX	-
	NTU-52V/VC; NTU-RG-54XX	"InternetGatewayDevice.X_ELTEX_RU_SecDmzHostCfg.IPAddress" "192.168.1.15"
1950	NTU-2V/VC; NTU-2W; NTU /NTP-RG-14XX	-
	NTU-52V/VC; NTU-RG-54XX	"InternetGatewayDevice.X_ELTEX_RU_Config.Network.JumboFrameEnable" "1"
admin	NTU-2V/VC; NTU-2W; NTU /NTP-RG-14XX	-
	NTU-RG-1421G-Wac	-
	NTU-52V/VC; NTU-RG-54XX	"InternetGatewayDevice.LANConfigSecurity.ConfigPassword" "password"
user	NTU-2V/VC; NTU-2W; NTU /NTP-RG-14XX	-
	NTU-52V/VC; NTU-RG-54XX	"InternetGatewayDevice.X_ELTEX_RU_Config.LoginCfg.UserPassword" "password"
DNS	NTU-2V/VC; NTU-2W; NTU /NTP-RG-14XX	-
	NTU-52V/VC; NTU-RG-54XX	<u>DNS WAN ont</u> "InternetGatewayDevice.WANDevice.1.WANConnectionDevice.1.WANIPConnection.2.DNSServers 192.168.22.254,8.8.8.8"
Wi-Fi 2.4	NTU-2W; NTU/NTP-RG-14XX	"InternetGatewayDevice.LANDevice.1.WLANConfiguration.1.Enable" "1"
	NTU-RG-54XX	"InternetGatewayDevice.LANDevice.1.WLANConfiguration.1.Enable" "1"
Wi-Fi 5	NTU-2W; NTU/NTP-RG-14XX	"InternetGatewayDevice.LANDevice.1.WLANConfiguration.2.Enable" "1"
	NTU-RG-54XX	"InternetGatewayDevice.LANDevice.1.WLANConfiguration.5.Enable" "1"
SSID 2.4	NTU-2W; NTU/NTP-RG-14XX	"InternetGatewayDevice.LANDevice.1.WLANConfiguration.1.SSID" "Test"
	NTU-RG-54XX	"InternetGatewayDevice.LANDevice.1.WLANConfiguration.1.SSID" "Test"
SSID 5	NTU-2W; NTU/NTP-RG-14XX	"InternetGatewayDevice.LANDevice.1.WLANConfiguration.2.SSID" "Test"
	NTU-RG-54XX	"InternetGatewayDevice.LANDevice.1.WLANConfiguration.5.SSID" "Test"
Wi-Fi 2.4	NTU-2W; NTU/NTP-RG-14XX	"InternetGatewayDevice.LANDevice.1.WLANConfiguration.1.PreSharedKey.1.KeyPassphrase" "password"
	NTU-RG-54XX	"InternetGatewayDevice.LANDevice.1.WLANConfiguration.1.KeyPassphrase" "password"
Wi-Fi 5	NTU-2W; NTU/NTP-RG-14XX	"InternetGatewayDevice.LANDevice.1.WLANConfiguration.2.PreSharedKey.1.KeyPassphrase" "password"
	NTU-RG-54XX	"InternetGatewayDevice.LANDevice.1.WLANConfiguration.5.KeyPassphrase" "password"
MAC-IP DHCP ONT	NTU-2V/VC; NTU-2W; NTU /NTP-RG-14XX	"InternetGatewayDevice.LANDevice.1.LANHostConfigManagement.DHCPConditionalServingPool.1.Enable" "1" "InternetGatewayDevice.LANDevice.1.LANHostConfigManagement.DHCPConditionalServingPool.1.Chaddr" "aa:22:aa:22:aa:22" "InternetGatewayDevice.LANDevice.1.LANHostConfigManagement.DHCPConditionalServingPool.1.ReservedAddresses" "192.168.1.100" "InternetGatewayDevice.LANDevice.1.LANHostConfigManagement.DHCPConditionalServingPool.1.DHCPLeaseTime" "86400" "InternetGatewayDevice.LANDevice.1.LANHostConfigManagement.DHCPConditionalServingPool.1.X_ELTEX_RU_UseWanDNS" "0"

	NTU-52V/VC; NTU-RG-54XX	"InternetGatewayDevice.LANDevice.1.LANHostConfigManagement.DHCPStaticAddress.1.Enable" "1"  "InternetGatewayDevice.LANDevice.1.LANHostConfigManagement.DHCPStaticAddress.1.Chaddr" "18d6c704c307"  "InternetGatewayDevice.LANDevice.1.LANHostConfigManagement.DHCPStaticAddress.1.Yiaddr" "192.168.1.13"
NAT Loopback	NTU-2V/VC; NTU-2W; NTU /NTP-RG-14XX	"InternetGatewayDevice.WANDevice.1.WANConnectionDevice.1.WANIPConnection.1.PortMapping.1.X_ELTEX_RU_NATLoopback" "1"
	NTU-52V/VC; NTU-RG-54XX	-
2.4	NTU-2W; NTU/NTP-RG-1402G-W	-
	NTU-RG-1421G-Wac	-
	NTU-RG-54XX	"InternetGatewayDevice.LANDevice.1.WLANConfiguration.1.X_ELTEX_RU_WIExclChannelList" "12,13"
Firewall wan	NTU/NTP-RG-14XX	-
...	...	...
...	...	...
...	...	...
Call Waiting	NTU-2V/VC; NTU-2W; NTU /NTP-RG-14XX	"InternetGatewayDevice.Services.VoiceService.1.VoiceProfile.1.Line.X.CallingFeatures. CallWaitingEnable" "1"  <u>x - FXS</u>
	NTU-52V/VC; NTU-RG-54XX	-



property. , .