

ESR

- ESR
- ESR
- ESR

ESR

ESR :

- BRAS - // . RADIUS- IP MAC- .
- BRAS-DEMO - BRAS- 5 .
- WIFI - SoftGRE- WiFi- .
- WISLA - IP SLA wisla.
- IPS - IDS/IPS.
- IPS-DEMO - IDS/IPS (IDS/IPS).
- AS DEMO - Antispam.
- WLC - Wi-Fi .
- WLC-AP-N - Wi-Fi .

ESR

ESR :

	BRAS-DEMO	BRAS	WI-FI	WISLA	IPS-DEMO	IPS	AS DEMO	WLC	WLC-AP-N
ESR-10	+	+	-	+	+	+	+	-	-
ESR-12V(F)	+	+	-	+	+	+	+	-	-
ESR-15(R)	+	+	+	+	+	+	+	+	+
ESR-20	+	+	-	+	+	+	+	-	-
ESR-21	+	+	-	+	+	+	+	-	-
ESR-30	+	+	+	+	+	+	+	-	-
ESR-100	+	+	+	+	+	+	+	-	-
ESR-200	+	+	+	+	+	+	+	-	-
ESR-1000	+	+	+	+	+	+	+	-	-
ESR-1200	+	+	+	+	+	+	+	-	-
ESR-1500	+	+	+	+	+	+	+	-	-
ESR-1511	+	+	-	+	+	+	+	-	-
ESR-1700	+	+	+	+	+	+	+	-	-
ESR-3100	+	+	-	-	+	+	+	-	-
ESR-3200	+	+	+	+	+	+	+	+	+

ESR

ESR ESR system:license copy. FTP, TFTP, SFTP, SCP, HTTP, USB MMC:

```
esr# copy tftp://192.168.34.2:/licence system:licence
|*****| 100% (672B) Licence loaded successfully. Please reboot system to
apply changes.
esr-1200#
```

show licence:

```
esr# show licence
Active licence not found!

After reboot:
-----
Name: Eltex
Version: 1.0
Type: ESR-1200
S/N: NP0C000022
MAC: A8:F9:4B:AB:D7:00
Features:
IPS - Intrusion Prevention System
esr#
esr#
```

```
. . .

esr# show licence
Licence information
-----
Name: Eltex
Version: 1.0
Type: ESR-1200
S/N: NP0C000022
MAC: A8:F9:4B:AB:D7:00
Features:
IPS - Intrusion Prevention System
esr#
esr#
```



ESR !, , , :

```
esr# show licence
Licence information
-----
Name: Eltex
Version: 1.0
Type: ESR-1200
S/N: NP0C000022
MAC: A8:F9:4B:AB:D7:00
Features:
WIFI - Wi-Fi controller

After reboot:
-----
Name: Eltex
Version: 1.0
Type: ESR-1200
S/N: NP0C000022
MAC: A8:F9:4B:AB:D7:00
Features:
IPS - Intrusion Prevention System
esr-1200#
```

WIFI , Wi-Fi, .

, "Eltex" , .