

# DHCP Relay

- [relay](#)
- [ip interface](#)

## relay

This command specifies the DHCP relay address to which DHCP requests in this VLAN will be redirected.

The negative form of the command removes the specified address.

### Syntax

[no] relay <IP>

### Parameters

<IP> - IP address in format of XXX.XXX.XXX.XXX

### Command mode

CONFIG

### Example

```
ma4000(vlan-100)# relay 172.15.2.45
```

## ip interface

This command sets the address of the subinterface from which DHCP packets in this VLAN will be sent.

The negative form of the command removes the specified address.

### Syntax

[no] ip interface <IP>

### Parameters

<IP> - IP address in format of XXX.XXX.XXX.XXX

### Command mode

CONFIG

### Example

```
ma4000(vlan-100)# ip interface 172.15.3.64
```