

TACACS- MES23xx/33xx/35xx/5324

TACACS+ , , RADIUS .
MES2324.

1. ip- tacacs- key:

```
console(config)# tacacs-server host 192.168.10.5 key secret
```

2. tacacs+:

```
console(config)# aaa authentication login authorization default tacacs local
```

```
; 23xx, 33xx, 53xx break ( ). 4.0.6 break/chain. chain - . 1000, 2000, 3000 .
```

3. :

```
console(config)# aaa authentication enable default tacacs enable
```

```
( radius-), , .
```

4. :

```
console(config)# username tester password eltex privilege 15
```

5. :

```
console(config)# enable password eltex
```

6. () .

```
console(config)# aaa accounting login start-stop group tacacs+
```

7. CLI tacacs+.

```
console(config)# aaa accounting commands stop-only group tacacs+
```

```
; (aaa authentication login default local).
```

8. Tacacs:

```
console(config)# aaa authorization commands default group tacacs+ local
```

```
.
```

```
; 4.0.16.
```