

v1.14_

, . -, : 0.

1. sms , /etc/eltex-ngw/notification.properties sms.gate.outgoing.sms.config sms_script.conf.

```
#Common gates settings
#Current gate used for each type (config name, for example snpp_gate.conf)
sms.gate.outgoing.sms.config=sms_script.conf
#For incoming sms/calls fields for numbers in configs should be set
sms.gate.incoming.sms.config=
sms.gate.incoming.call.config=
```

2. , SoftWLC. .

3. /etc/eltex-ngw/script.conf .

```
script.path=/home/tester/test.sh
```

4. , **eltex-ngw**.

sudo service eltex-ngw restart