

[NTU-RG-5XXX / NTU-52X] Port Triggering

Port Triggering

: [Services](#) [Firewall](#) [Port Triggering](#)

Trigger start port Trigger end port - , .
Protocol - (TCP, UDP, TCP and UDP).
Incoming start port Incoming end port - , ONT .

Port Triggering Configuration

entries in this table are used to open a port automatically for incoming traffic after a port has been accessed by outgoing traffic

Port Triggering: ☐ Disable ☒ Enable Apply Changes

Comment	Trigger start port	Trigger end port	Protocol	Incoming start port	Incoming end port	Interface
CSGO	27015	27030	TCP ▾	27036	27037	nas0_0 ▾

Add

current port triggering table

Select	Comment	Protocol	Trigger port	Incoming port	Interface
☐	CSGO	TCP	27015-27030	27036-27037	nas0_0

Delete Selected Delete All

NTU-52W

: [Services](#) [Firewall](#) [Port Triggering](#)

Port Triggering Configuration

entries in this table are used to open a port automatically for incoming traffic after a port has been accessed by outgoing traffic

Port Triggering:

☐Disable ☒Enable

Apply Changes

Comment	Trigger start port	Trigger end port	Protocol	Incoming start port	Incoming end port	Interface
game	27015	27030	Both ▾	27036	27037	nas0_0 ▾

Add

current port triggering table					
Select	Comment	Protocol	Trigger port	Incoming port	Interface
☐	game	TCP+UDP	27015-27030	27036-27037	nas0_0

Delete Selected Delete All