

[NTU-RG-5XXX / NTU-52X] Wi-Fi

NTU-X , .
 , . , 2.4, 13. , ,5, 17. .
WEB- ONT 192.168.1.1, / - *user/user*. Wireless wlan0 (2.4GHz) / wlan1 (5GHz) Basic settings.

WLAN Basic Settings

This page is used to configure the parameters for WLAN clients which may connect to your Access Point. Here you may change wireless encryption settings as well as wireless network parameters.

☐ Disable WLAN Interface

Band:

2.4 GHz (B+G+N) ▾

Mode:

AP ▾

Multiple AP

SSID:

ELTX-2.4GHz_WiFi_F7B2

Hide SSID:

☐ Enabled

☒ Disabled

Channel Width:

40MHz ▾

Control Sideband:

Upper ▾

Channel Number:

Auto ▾

Radio Power (%):

100% ▾

Limit Associated Client Number:

Disabled ▾

Associated Clients:

Show Active WLAN Clients

Regdomain:

RUSSIAN(12) ▾

Apply Changes

, Apply Changes .