

[NTU-RG-5XXX / NTU-52X] L2TP

L2TP Internet . ont NTU-RG-54XX L2TP 2.3.0.

VPN/L2TP USER. admin L2TP WAN/VPN/L2TP: VPN L2TP ont, "Enable". (). "Apply Changes". L2TP VPN.

Status

LAN

Wireless

Services

VPN

L2TP

IPsec

Advance

Diagnostics

Admin

Statistics

L2TP VPN Configuration

This page is used to configure the parameters for L2TP mode VPN.

L2TP VPN:

Disable

Enable

Server:

Tunnel Authentication:

Tunnel Authentication Secret:

PPP Authentication:

Auto

PPP Encryption:

NONE

UserName:

Password:

PPP Connection Type:

Persistent

Idle Time (min):

MTU:

1458

Default Gateway:

Apply Changes

L2TP Table:

Select	Interface	Server	Tunnel Authentication	PPP Authentication	MTU	Default Gateway	Action
	ppp11_l2tp0	vpn.vpnjack.com	NONE	AUTO	1458	on	Connect

Delete Selected

L2TP Table L2TP VPN . , "Delete Selected".

L2TP , , IP- Status/Device.