

[NTU-RG-5XXX] USB

Samba - , SMB/CIFS.
SMB 2.0.

USB samba:

- USB- USB .
- WEB - ONT IP- 192.168.0.1.
- Services / Samba Samba. **Apply Changes.**



NTU-RG-5440G-WZ:rev.B

Status

LAN

WiFi

WAN

Services

Advance

Diagnostics

Administration

Statistics

DHCP

DNS >

Firewall >

UPnP

RIP

DLNA

Samba ▾

Samba

Accounts

Samba Configuration

Samba :

Disable

Enable

NetBIOS Name :

ELTEX

Server String :

ELTEX Samba server

NOTICE!

Connect via Windows: \\192.168.0.1\samba

Access as guest: login:guest, password:guest

Apply Changes

- Accounts , Add/Edit.

DHCP

DNS >

Firewall >

UPnP

RIP

DLNA

Samba ▾

Samba

Accounts

Samba Configuration

Username

test1

New Password

.....

Confirmed Password

.....

Add/Edit

Delete

Reset

Username

Modify

USB- : \\192.168.0.1\