

IP Helper MES5312/53xxA/5400-xx

IP Helper UDP- .

└─ DHCP (67,68) DHCP Relay.

.

VLAN 10 UDP- (49). 20.20.20.1, VLAN 20.

:

console(config)# **interface vlan 10**

console(config-if)# **ip address 10.10.10.2 /24**

console(config)# **interface vlan 20**

console(config-if)# **ip address 20.20.20.2 /24**

IP Helper:

console(config)# **ip helper-address 10.10.10.2 20.20.20.1 49**

,

10.10.10.2 - IP , UDP-. ALL.

20.20.20.1 - IP , . .

49 - UDP , , , .

└─ , 37,42,49,53,137,138.

└─ DHCP (67,68) DHCP Relay.

└─ , ().

:

show ip helper-address

Interface	Helper Address	Udp port
10.10.10.2	20.20.20.1	49