

TAU8/RG14xx - uboot

, COM- (5-)

:

1. () tftp
 - tau4-8-ultimate - TAU8
 - tau4-8-root.jffs2-16k - TAU8
 - rg-ultimate - RG14XX
 - rg-root.jffs2-16k - RG14XX
2. COM- ., , . G
3. :
 - :115200,
 - :8,
 - :,
 - :1,
 - :
4. U-Boot.

```
U-Boot 1.1.6 (Sep  2 2011 - 11:35:09) Mindspeed $Name: u-boot\_6\_00\_4 $
DRAM: 256 MB
Concerto Flash Subsystem Initialization
Flash: 0 kB
NAND: board\_nand\_init nand->IO\_ADDR\_R =30000000
32 MiB
*** Warning - bad CRC or NAND, using default environment
In: serial
Out: serial
Err: serial
Reserve MSP memory
Net: concerto\_gemac0, concerto\_gemac1
Switch: Realtek RTL8367RB
Enter 'stop' for stop autoboot
```

stop.

5. uboot :
TAU8:

```
Concerto-1000 > set serverip <tftp-server IP> - ip tftp ;
Concerto-1000 > set ipaddr <IP rg> - ip- rg ;
Concerto-1000 > set uimage tau4-8-uImage - ; (set uimage rg-uImage RG14xx)
Concerto-1000 > set fsfile tau4-8-root.jffs2-16k - ;
```

RG14xx:

```
Concerto-1000 > set serverip <tftp-server IP> - ip tftp ;
Concerto-1000 > set ipaddr <IP rg> - ip- rg ;
Concerto-1000 > set uimage rg-uImage - ;
Concerto-1000 > set fsfile rg-root.jffs2-16k -
```

6. WAN- tftp-. . , :

```
...
host <IP> is alive
```

, <Ctrl>+<C> . *printenv*

7. :

```
Concerto-1000 > run updatekernel -
Concerto-1000 > run updatenandfs -
```

- 8.