

# TM.IP

TM.IP syslog. com- syslog-.

- TM.IP Web-;
- *Config-> VoIP default profile -> Main;*
- *Destination :*
  - console - com-;
  - syslog - syslog-;
- *syslog- IP- Syslog server Syslog port. syslog 514 ;*
- *H.323 Log level for H.323 5;*
- *SIP Log level for SIP 5;*
- *Log level for VAPI 2;*
- *Log level for APP 2;*
- *Submit config,*
- *Service,*
- *Apply configuration w/o restart,*
- *Save configuration into the flash,*
- *Config-> VoIP default profile -> Main Start syslog.*

! , .. . . . - . .

- TM.IP Web-;
- *Config-> VoIP default profile -> Main;*
- *Log level for H.323 0;*
- *Log level for SIP 0 ;*
- *Log level for VAPI 0 ;*
- *Log level for APP 0;*
- *Submit config,*
- *Service,*
- *Apply configuration w/o restart,*
- *Save configuration into the flash.*