

Wi-Fi ONT?

Wi-Fi, - 16.

, , WEB- IP- 192.168.1.1, / - *user/user*. "Wireless/Basic" "Max Client" 1 16:

Wireless / Basic

This page allows you to configure basic features of the wireless LAN interface. You can enable or disable the wireless LAN interface, hide the network from active scans, set the wireless network name (also known as SSID) and restrict the channel set based on country requirements. Click "Apply/Save" to configure the basic wireless options.

☒ Enable Wireless

Wireless - Access Point:

☒ Enable Access Point

☐ Hide Access Point

☐ Clients Isolation

☐ Disable WMM Advertise

☒ Enable Wireless Multicast Forwarding (WMF)

SSID:

BSSID:

Country:

Country
RegRev

Max
Clients: