

ONT ACS

TR-069 :

1. , .

```
LTP(acs-firmware)# add firmware 2
Ok
LTP(acs-firmware)# firmware 2
LTP(acs-firmware_config-fw id='2')#
```

2. , ACS

```
LTP(acs-firmware-id='2')# add hardware NTU-RG-1402-W
Ok
LTP(acs-firmware-id='2')# add profile 1
Ok
```

ont, , . acs "1".

3. ONT:

```
LTP(acs-firmware)# copy 192.168.5.100 ntu-rg-3.24.1.2180.fw
```

4.:

```
LTP(acs-firmware_config-fw id='2')set file ntu-rg-3.24.1.2180.fw
LTP(acs-firmware_config-fw id='2')set filename ntu-rg-3.24.1.2180.fw
LTP(acs-firmware_config-fw id='1')set version 3.24.1.2180
```

:

```
LTP(acs-firmware-id='2')# show config
Information about firmware:

Firmware ID = 2
  Version = ''
  URL = ''
  Filename = 'ntu-rg-3.24.1.2180.fw'
  Schedule = enabled
  Safe-mode = disabled
  Downgrade = disabled
Profiles:
##   Name   Inform interval  Script name           Base profile
1:  1       60
```

Schedule - . , LTP schedule, LTP. 3-:, ,.

Safe-mode -, ONT

Downgrade - ONT

5. , :

```
LTP(acs-schedule)# set
daily      Modify daily schedule
period     Modify period schedule
weekly     Modify weekly schedule
```

```
LTP-8X(acs-schedule)# show
```

ACS schedule:

1:	daily	00:00	23:59
2:	period	2011-06-01	2099-12-31
3:	weekly	1	7