

ONT AUTHFAILED

ONT AUTHFAILED :GPON, ONT OLT, , (, WEB-).

ONT :

```
LTP-8X# show interface ont 6/1 state
```

```
-----  
[ONT6/1] state  
-----
```

```
Serial number: ELTX7B006848  
Gpon password: 0000000000
```

OLT :

```
LTP-8X# show interface ont 6/1 configuration
```

```
-----  
[ONT6/1] configuration  
-----
```

```
Description: ''  
Enabled: true  
Serial: ELTX7B006848  
Password: '1234567890'
```

OLT :

```
LTP-8X# configure terminal  
LTP-8X(config)# interface ont 6/1  
LTP-8X(config)(if-ont-6/1)# password 0000000000  
LTP-8X(config)(if-ont-6/1)# do commit
```

ONT, WEB- NTP/NTU - (login - user, password - user). “Management” - “Pon Password” , ONT . “Apply\Save”.