

NTE-2 MTU (Maximum transmission unit)?

MTU CLI LTE-8X/LTE-2X/LTE-8St :

- LTE-8X(ONT-x/1003/02:00:22:03:9B:AC)service
- LTE-8X(ONT-x/1003/02:00:22:03:9B:AC-service)# set personality mtu x

, x - MTU <64-1900>.

- LTE-8X(ONT-x/1003/02:00:22:03:9B:AC-service)# personality update

- , / , MTU .

- LTE-8X(ONT-x/1003/02:00:22:03:9B:AC-service)# restore

MTU :

- LTE-8X(ONT-x/1003/02:00:22:03:9B:AC-service)# personality load
- LTE-8X(ONT-x/1003/02:00:22:03:9B:AC-service)# personality show

:

Base MAC address: AA:BB:CC:DD:EE:FF - MAC ONT

MTU: X - MTU

Jumbo frame LTE:

- LTE-8X# olt 0
- LTE-8X(OLT0)# service
- LTE-8X(OLT0-service)# personality load
OLT0 personality loaded
- LTE-8X(OLT0-service)# set personality mtu 2000
- LTE-8X(OLT0-service)# personality update
OLT0 personality updated successfully. Please apply "reconfigure" command to enable new personality
- LTE-8X(OLT0-service)# reconfigure
OLT0 reconfiguration successfull. ONTs configuration may take several minutes.
- LTE-8X(OLT0-service)# save
Configuration saved successfully

: , , **ONU**, .