

/ NTP

(factory-config) :

```
ntp broadcast-client enable
```

```

NTP-.
NTP-.  NTP
,
, NTP .
```

```
ntp enable
ntp server 115.0.0.2
exit
```

ntp broadcast-client :

```
no ntp broadcast-client enable
```

```
esr# commit
Configuration has been successfully committed
esr# confirm
Configuration has been successfully confirmed
```



, stratum (1-3).

Related articles

- [OSPF MD5](#)
- [MultiWAN](#)
- [Eltex SLA \(Service Level Agreement\)](#)
- [IP unnumbered](#)
- [BGP + Route-map](#)