

SNMP MES23xx/33xx/35xx/5324

SNMP " "

SNMP :

```
snmp-server server
```

```
snmp-server community public ro 192.168.10.5
```

```
snmp-server community private rw 192.168.10.5
```

SNMP:

```
show snmp
```

SNMP-trap:

```
snmp-server host 192.168.10.5 traps version 2c public
```

snmp-trap. :

```
snmp-server enable traps
```

SNMP-trap:

```
show snmp
```