

MES14xx, MES24xx, MES3400-xx, MES37

```
.
:
console# delete startup-config
console# reload
, .

:
1. DHCP Discover .

    MES24xx:
    43 - Vendor Specific
    66 - Server-Name
    67 - Bootfile-Name

2. DHCP ACK      (, , , IP TFTP ).
3.      boot , .
4.      , .

isc dhcp-server . :
#      66-67
option tftp-server code 66 = string;
option bootfile-name code 67 = string;

shared-network "net" {

    subnet 192.168.2.0 netmask 255.255.255.0 {
        range 192.168.2.10 192.168.2.99;

        option tftp-server "192.168.2.1";          # IP- TFTP
        option bootfile-name "mes2400-1026-R2.iss"; #

        option routers 192.168.2.1;
        option subnet-mask 255.255.255.0;
        option broadcast-address 192.168.2.254;
    }
}

#      43
option space vendor_43;
option vendor_43.image-name_43 code 1 = string;
option vendor_43.bootfile-name_43 code 2 = string;
option vendor_43.configfile-name_43 code 3 = string;
option vendor_43.tftp-server_43 code 4 = string;

shared-network "net" {

    subnet 192.168.2.0 netmask 255.255.255.0 {
        range 192.168.2.10 192.168.2.99;

        vendor-option-space vendor_43;
        option vendor_43.image-name_43 "mes2400-1026-R2.iss"; #
        option vendor_43.bootfile-name_43 "mes2400-1026-R2.boot"; #
        option vendor_43.configfile-name_43 "startup.conf"; #
        option vendor_43.tftp-server_43 "192.168.2.1"; # IP- TFTP

        option routers 192.168.2.1;
        option subnet-mask 255.255.255.0;
        option broadcast-address 192.168.2.254;
    }
}

:
: Boot ->    -> Config
    boot ,    boot      boot.      boot
,      startup-config.
```