

SNTP MES23xx/33xx/35xx/5324

:

```
console(config)# clock source sntp
console(config)# sntp client poll timer 60
console(config)# sntp unicast client enable
console(config)# sntp unicast client poll
console(config)# sntp server 91.226.136.136 poll
```

:

```
console(config)# clock source sntp
console(config)# encrypted sntp authentication-key 1 md5 v3NgLjCb1JzsRzsi3NoK0m7m0Ii/wjnrsMvFoJh0GMk=
console(config)# sntp trusted-key 1
console(config)# sntp authenticate
console(config)# sntp client poll timer 60
console(config)# sntp unicast client enable
console(config)# sntp unicast client poll
console(config)# sntp server 192.168.10.5 poll key 1
```