

- [DHCP-](#)
- [Destination NAT](#)
- [Destination NAT](#)
- [Source NAT](#)
- [1](#)
- [2](#)
- [Static NAT](#)
- [Static NAT](#)
- [HTTP/HTTPS-](#)
- [HTTP-](#)

DHCP-

DHCP- . DHCP- , :

- default-router – IP- , ;
- domain-name – , (DNS);
- dns-server – , . . .

| | | | |
|---|---------------------------|---|---|
| | | | |
| 1 | IPv4/IPv6 DHCP-. | esr(config)# ip dhcp-server [vrf <VRF>] esr(config)# ipv6 dhcp-server [vrf <VRF>] | <VRF> – VRF, DHCP- 31 . |
| 2 | DSCP IP- DHCP- () . | esr(config)# ip dhcp-server dscp <DSCP> | <DSCP> – DSCP, [0..63]. : 61. |
| 3 | IPv4/IPv6- DHCP- . | esr(config)# ip dhcp-server pool <NAME> [vrf <VRF>] esr(config)# ipv6 dhcp-server pool <NAME> [vrf <VRF>] | <NAME> – IPv4/IPv6- DHCP-, 31 . <VRF> – VRF, IP- DHCP- 31 |
| 4 | IPv4/IPv6- , IPv4 /IPv6-. | esr(config-dhcp-server)# network <ADDR/LEN> esr(config-ipv6-dhcp-server)# network <IPV6-ADDR /LEN> | <ADDR/LEN> – IP- , AAA.BBB.CCC.DDD/EE, AAA – DDD [0..255] EE [1..32]. <IPV6-ADDR/LEN> – IP- , X:X:X::X/EE, X [0..FFFF] EE [1..128]. |
| 5 | IPv4/IPv6- , DHCP- . | esr(config-dhcp-server)# address-range <FROM-ADDR>-<TO-ADDR> esr(config-ipv6-dhcp-server)# address-range <FROM-ADDR>-<TO-ADDR> | <FROM-ADDR> – IP- ; <TO-ADDR> – IP- , AAA.BBB.CCC.DDD, [0..255]. 32 IP- . <FROM-ADDR> – IPv6- ; <TO-ADDR> – IP- ; X:X:X::X, [0..FFFF]. |
| 6 | IPv4/IPv6- DHCP- () . | esr(config-dhcp-server)# address <ADDR> {mac-address <MAC> client-identifier <CI>} | <ADDR> – IP- , AAA.BBB.CCC.DDD, [0..255]; <MAC> – , IP- , XX:XX:XX:XX:XX:XX, [00..FF]. <CI> – DHCPOption61. : • HH:HH:HH:HH:HH:HH: – mac- ; • STRING – 1 64 . |

| | | | |
|----|--------------------------------|---|--|
| | | esr(config-ip6-dhcp-server)# address <ADDR> mac-address <MAC> | <IPV6-ADDR> – IPv6-, X:X:X::X, [0..FFFF]; <MAC> -- , IPv6-, XX:XX:XX:XX:XX, [00..FF] |
| 7 | IPv4- , DHCP- , DHCP- 3. | esr(config-dhcp-server)# default-router <ADDR> | <ADDR> – IP- , AAA.BBB.CCC.DDD, [0..255]. 8 IP-, . |
| 8 | DNS- . DHCP- 15 (). | esr(config-dhcp-server)# domain-name <NAME> | <NAME> – DNS- , 255 . |
| | | esr(config-ip6-dhcp-server)# domain-name <NAME> | |
| 9 | IPv4/IPv6- DNS-. DHCP- 6 (). | esr(config-dhcp-server)# dns-server <ADDR> | <ADDR> – IP- DNS-, AAA.BBB.CCC.DDD, [0..255]. 8 IP-, . |
| | | esr(config-ip6-dhcp-server)# dns-server <IPV6-ADDR> | <IPV6-ADDR> – IPv6- DNS-, X:X:X::X, [0..FFFF]. 8 IPv6-, . |
| 10 | IP- (). DHCP- , , , . | esr(config-dhcp-server)# max-lease-time <TIME> | <TIME> – IP-, DD:HH:MM, : • DD – , [0..364]; • HH – , [0..23]; • MM – , [0..59] |
| | | esr(config-ip6-dhcp-server)# max-lease-time <TIME> | : 1 |
| 11 | , IP- (). | esr(config-dhcp-server)# default-lease-time <TIME> | <TIME> – IP-, DD:HH:MM, : • DD – , [0..364]; • HH – , [0..23]; • MM – , [0..59] |
| | | esr(config-ip6-dhcp-server)# default-lease-time <TIME> | : 12 . |
| 12 | (DHCP 60) (). | esr(config)# ip dhcp-server vendor-class-id <NAME> | <NAME> – , 31 . |
| | | esr(config)# ipv6 dhcp-server vendor-class-id <NAME> | |
| 13 | (DHCP 43). | esr(config-dhcp-vendor-id)# vendor-specific-options <HEX> | <HEX> – , 128 . |
| | | esr(config-ip6-dhcp-vendor-id)# vendor-specific-options <HEX> | |
| 14 | IP- NetBIOS- (DHCP 44) (). | esr(config-dhcp-server)# netbios-name-server <ADDR> | <ADDR> – IP- NetBIOS- AAA.BBB.CCC.DDD, [0..255]. 4 IP-. |
| 15 | IP- tftp- (DHCOption 150) (). | esr(config-dhcp-server)# tftp-server <ADDR> | <ADDR> – IP- DNS-, AAA.BBB.CCC.DDD, [0..255]. |

DHCP- , «trusted». IP- 192.168.1.0/24 . 1. . , DNS- DHCP-.

«trusted» :

```
esr# configure
esr(config)# security zone trusted
esr(config-zone)# exit
```

«Simple» IP- . , , :

```
esr# configure
esr(config)# ip dhcp-server pool Simple
esr(config-dhcp-server)# network 192.168.1.0/24
esr(config-dhcp-server)# address-range 192.168.1.100-192.168.1.125
esr(config-dhcp-server)# default-lease-time 1:00:00
```

- : 192.168.1.1;
- : eltex.loc;
- DNS-: DNS1: 172.16.0.1, DNS2: 8.8.8.8.

```
esr(config-dhcp-server)# domain-name "eltex.loc"
esr(config-dhcp-server)# default-router 192.168.1.1
esr(config-dhcp-server)# dns-server 172.16.0.1 8.8.8.8
esr(config-dhcp-server)# exit
```

DHCP- IP- , IP-, . .

```
esr(config)# interface gigabitethernet 1/0/1
esr(config-if-gi)# security-zone trusted
esr(config-if-gi)# ip address 192.168.1.1/24
esr(config-if-gi)# exit
```

DHCP , 68 67, DHCP, UDP:

```
esr(config)# object-group service dhcp_server
esr(config-object-group-service)# port-range 67
esr(config-object-group-service)# exit
esr(config)# object-group service dhcp_client
esr(config-object-group-service)# port-range 68
esr(config-object-group-service)# exit
esr(config)# security zone-pair trusted self
esr(config-zone-pair)# rule 30
esr(config-zone-rule)# match protocol udp
esr(config-zone-rule)# match source-port dhcp_client
esr(config-zone-rule)# match destination-port dhcp_server
esr(config-zone-rule)# action permit
esr(config-zone-rule)# enable
esr(config-zone-rule)# exit
esr(config-zone-pair)# exit
```

```
esr(config)# ip dhcp-server
esr(config)# exit
```

```
esr# show ip dhcp binding
```

```
esr# show ip dhcp server pool
esr# show ip dhcp server pool Simple
```

 IPv6 IPv4.

Destination NAT

Destination NAT (DNAT) IP- , .

DNAT , «» , «» , . . , .

| | | | |
|----|-----------------------|--|---|
| | | | |
| 1 | . | esr(config)# nat destination | |
| 2 | C IP- / TCP/UDP- () . | esr(config-dnat)# pool <NAME> | <NAME> – NAT-, 31 . |
| 3 | IP-, IP- . | esr(config-dnat-pool)# ip address <ADDR> | <ADDR> – IP-, AAA.BBB.CCC.DDD, [0..255]. |
| 4 | TCP/UDP , TCP /UDP . | esr(config-dnat-pool)# ip port <PORT> | <PORT> – TCP/UDP , [1..65535]. |
| 5 | . | esr(config-dnat)# ruleset <NAME> | <NAME> – , 31 . |
| 6 | VRF, () . | esr(config-dnat-ruleset)# ip vrf forwarding <VRF> | <VRF> – VRF, 31 . |
| 7 | . , . | esr(config-dnat-ruleset)# from { zone <NAME> interface <IF> tunnel <TUN> default } | <NAME> – ; <IF> – ; <TUN> – ; default – . |
| 8 | c . . | esr(config-dnat-ruleset)# rule <ORDER> | <ORDER> – , [1..10000]. |
| 9 | IP-{} , . | esr(config-dnat-rule)# match [not] {source destination}-address <OBJ-GROUP-NETWORK-NAME> | <OBJ-GROUP-NETWORK-NAME> – IP-, 31 . «any» IP- . |
| 10 | (tcp/udp-{}) , () . | esr(config-dnat-rule)# match [not] {source destination}-port <PORT-SET-NAME> | <PORT-SET-NAME> – , 31 . «any» TCP/UDP- . |
| 11 | IP-, () . | esr(config-dnat-rule)# match [not] {protocol <TYPE> protocol-id <ID> } | <TYPE> – , : esp, icmp, ah, eigrp, ospf, igmp, ipip, tcp, pim, udp, vrrp, rdp, l2tp, gre. «any» . <ID> – IP-, [0x00-0xFF]. |
| 12 | ICMP, (ICMP() .) | esr(config-dnat-rule)# match [not] icmp {<ICMP_TYPE><ICMP_CODE> <TYPE-NAME>} | <ICMP_TYPE> – ICMP, [0..255]. <ICMP_CODE> – ICMP, [0..255]. «any» . <TYPE-NAME> – ICMP . |
| 13 | « » , , «match» . | esr(config-dnat-rule)# action destination-nat { off pool <NAME> netmap <ADDR/LEN> } | off – ; pool <NAME> – , IP- / TCP/UDP ; netmap <ADDR/LEN> – IP- , AAA.BBB.CCC.DDD/EE, AAA – DDD [0..255] EE [1..32]. |
| 14 | . | esr(config-dnat-rule)# enable | |


¹ *not*, ,

«match» «not»., .

« CLI».

Destination NAT

, «UNTRUST», «TRUST». – 10.1.1.100. 1.2.3.4, 80.

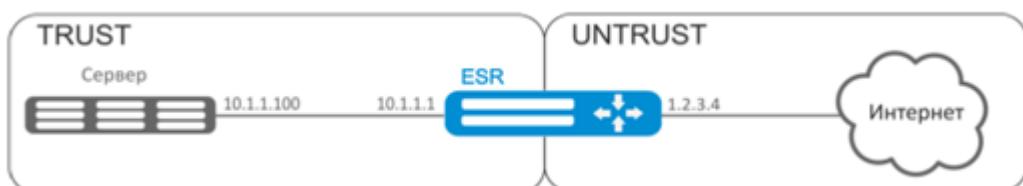

: «UNTRUST» «TRUST». . IP .

```
esr# configure
esr(config)# security zone UNTRUST
esr(config-zone)# exit
esr(config)# security zone TRUST
esr(config-zone)# exit
esr(config)# interface gigabitethernet 1/0/1
esr(config-if-gi)# security-zone TRUST
esr(config-if-gi)# ip address 10.1.1.1/25
esr(config-if-gi)# exit
esr(config)# interface gigabitethernet 1/0/1
esr(config-if-gi)# security-zone TRUST
esr(config-if-gi)# ip address 10.1.1.1/25
esr(config-if-gi)# exit
esr(config)# interface tengigabitethernet 1/0/1
esr(config-if-te)# ip address 1.2.3.4/29
esr(config-if-te)# security-zone UNTRUST
esr(config-if-te)# exit
```

IP- , Firewall DNAT.

- NET_UPLINK - ;
- SERVER_IP - ;
- SRV_HTTP - .

```
esr(config)# object-group network NET_UPLINK
esr(config-object-group-network)# ip address 1.2.3.4
esr(config-object-group-network)# exit
```

```
esr(config)# object-group service SRV_HTTP
esr(config-object-group-service)# port 80
esr(config-object-group-service)# exit
```

```
esr(config)# object-group network SERVER_IP
esr(config-object-group-network)# ip address 10.1.1.100
esr(config-object-group-network)# exit
```

DNAT , , 1.2.3.4 .

```
esr(config)# nat destination
esr(config-dnat)# pool SERVER_POOL
esr(config-dnat-pool)# ip address 10.1.1.100
esr(config-dnat-pool)# ip port 80
esr(config-dnat-pool)# exit
```

«DNAT», . , , «UNTRUST». (match destination-address, match destination-port) . , , (action destination-nat). «enable».

```
esr(config-dnat)# ruleset DNAT
esr(config-dnat-ruleset)# from zone UNTRUST
esr(config-dnat-ruleset)# rule 1
esr(config-dnat-rule)# match destination-address NET_UPLINK
esr(config-dnat-rule)# match protocol tcp
esr(config-dnat-rule)# match destination-port SRV_HTTP
esr(config-dnat-rule)# action destination-nat pool SERVER_POOL
esr(config-dnat-rule)# enable
esr(config-dnat-rule)# exit
esr(config-dnat-ruleset)# exit
esr(config-dnat)# exit
```

, «UNTRUST» «TRUST», . . . , «SERVER_IP» DNAT.

```
esr(config)# security zone-pair UNTRUST TRUST
esr(config-zone-pair)# rule 1
esr(config-zone-pair-rule)# match destination-address SERVER_IP
esr(config-zone-pair-rule)# match destination-nat
esr(config-zone-pair-rule)# action permit
esr(config-zone-pair-rule)# enable
esr(config-zone-pair-rule)# exit
esr(config-zone-pair)# exit
esr(config)# exit
```

```
:  
esr# show ip nat destination pools
esr# show ip nat destination rulesets
esr# show ip nat proxy-arp
esr# show ip nat translations
```

Source NAT

Source NAT (SNAT) ,

SNAT , . IP- .


| | | | |
|----|----------------------|--|---|
| | | | |
| 1 | . | esr(config)# nat source | |
| 2 | IP- / TCP/UDP- () . | esr(config-snata)# pool <NAME> | <NAME>- NAT-, 31 . |
| 3 | IP-, IP- . | esr(config-snata-pool)# ip address-range <IP>[-<ENDIP>] | <IP>- IP- , AAA.BBB.CCC.DDD, [0..255]; <ENDIP>- IP- , AAA.BBB.CCC.DDD, [0..255]. IP- , IP- IP- . |
| 4 | TCP/UDP , TCP /UDP . | esr(config-snata-pool)# ip port-range <PORT> [-<ENDPORT>] | <PORT>- TCP/UDP , [1..65535]; <ENDPORT>- TCP/UDP , [1..65535]. TCP/UDP , TCP/UDP TCP /UDP . |
| 5 | TCP/UDP , TCP /UDP . | esr(config-snata-pool)# ip port <PORT> | <PORT>- TCP/UDP , [1..65535]. |
| 6 | NAT persistent. | esr(config-snata-pool)# persistent | |
| 7 | . | esr(config-snata)# ruleset <NAME> | <NAME>- , 31 . |
| 8 | VRF, () . | esr(config-snata-ruleset)# ip vrf forwarding <VRF> | <VRF>- VRF, 31 . |
| 9 | , . | esr(config-snata-ruleset)# to { zone <NAME> interface <IF> tunnel <TUN> default } | <NAME>- ; <IF>- ; <TUN>- default - , . |
| 10 | c . . | esr(config-snata-ruleset)# rule <ORDER> | <ORDER>- , [1..10000]. |
| 11 | IP- {} , . | esr(config-snata-rule)# match [not] {source destination}-address <OBJ-GROUP-NETWORK-NAME> | <OBJ-GROUP-NETWORK-NAME>- IP-, 31 . «any» IP- . |
| 12 | IP- {} , () . | esr(config-snata-rule)# match [not] {source destination}-port <PORT-SET-NAME> | <PORT-SET-NAME>- , 31 . «any» TCP/UDP- . |

| | | | |
|----|-----------------|--|--|
| 13 | IP-, () | esr(config-snat-rule)# match [not] {protocol protocol-id} <TYPE> | <TYPE> – , : esp, icmp, ah, eigrp, ospf, igmp, ipip, tcp, pim, udp, vrrp, rdp, l2tp, gre. «any» ; <ID> – IP-, [0x00-0xFF]. |
| 14 | ICMP, () | esr(config-snat-rule)# match [not] icmp {<ICMP_TYPE><ICMP_CODE> <TYPE-NAME>} | <ICMP_TYPE> – ICMP, [0..255]; <ICMP_CODE> – ICMP, [0..255]. «any» ; <TYPE-NAME> – ICMP |
| 15 | « » , , «match» | esr(config-snat-rule)# action source-nat { off pool <NAME> netmap <ADDR/LEN> [static] interface [FIRST_PORT – LAST_PORT] } | off – ; pool<NAME> – IP- / TCP/UDP ; netmap <ADDR/LEN> – IP- , ; static – NAT. AAA.BBB.CCC.DDD/EE, AAA – DDD [0..255] EE [1..32]. interface [FIRST_PORT – LAST_PORT] – IP- . TCP/UDP-, TCP /UDP- , . |
| 16 | . | esr(config-snat-rule)# enable | |

¹ not, ,
 «match» «not». , .
 « CLI».

1

:
 10.1.2.0/24 Source NAT. SNAT 100.0.0.100-100.0.0.249.

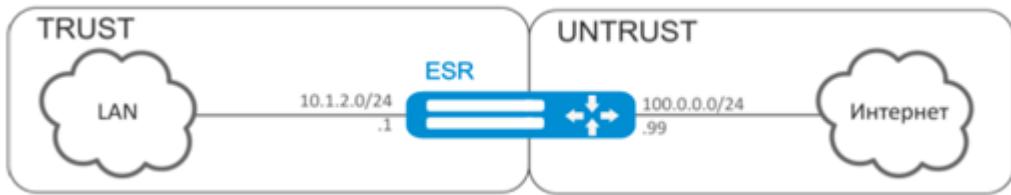

, . «TRUST» «UNTRUST» .

```
esr# configure
esr(config)# security zone UNTRUST
esr(config-zone)# exit
esr(config)# security zone TRUST
esr(config-zone)# exit
esr(config)# interface gigabitethernet 1/0/1
esr(config-if-gi)# ip address 10.1.2.1/24
esr(config-if-gi)# security-zone TRUST
esr(config-if-gi)# exit
esr(config)# interface tengigabitethernet 1/0/1
esr(config-if-te)# ip address 100.0.0.99/24
esr(config-if-te)# security-zone UNTRUST
esr(config-if-te)# exit
```

SNAT «LOCAL_NET», , , «PUBLIC_POOL».

```
esr(config)# object-group network LOCAL_NET
esr(config-object-group-network)# ip address-range 10.1.2.2-10.1.2.254
esr(config-object-group-network)# exit
esr(config)# object-group network PUBLIC_POOL
esr(config-object-group-network)# ip address-range 100.0.0.100-100.0.0.249
esr(config-object-group-network)# exit
```

«TRUST» «UNTRUST» , . «LOCAL_NET» . enable.

```
esr(config)# security zone-pair TRUST UNTRUST
esr(config-zone-pair)# rule 1
esr(config-zone-pair-rule)# match source-address LOCAL_NET
esr(config-zone-pair-rule)# action permit
esr(config-zone-pair-rule)# enable
esr(config-zone-pair-rule)# exit
esr(config-zone-pair)# exit
```

SNAT. , SNAT.

```
esr(config)# nat sourc
esr(config-snat)# pool TRANSLATE_ADDRESS
esr(config-snat-pool)# ip address-range 100.0.0.100-100.0.0.249
esr(config-snat-pool)# exit
```

SNAT. , , - «UNTRUST». «LOCAL_NET».

```
esr(config-snat)# ruleset SNAT
esr(config-snat-ruleset)# to zone UNTRUST
esr(config-snat-ruleset)# rule 1
esr(config-snat-rule)# match source-address LOCAL_NET
esr(config-snat-rule)# action source-nat pool TRANSLATE_ADDRESS
esr(config-snat-rule)# enable
esr(config-snat-rule)# exit
esr(config-snat-ruleset)# exit
```

ARP , ARP Proxy. ARP Proxy , IP- «PUBLIC_POOL».

```
esr(config)# interface tengigabitethernet 1/0/1
esr(config-if-te)# ip nat proxy-arp PUBLIC_POOL
```

, - 10.1.2.1 .

```
esr(config)# ip route 0.0.0.0/0 100.0.0.1
esr(config)# exit
```

2

21.12.2.0/24 Source NAT (firewall). SNAT 200.10.0.100-200.10.0.249.



```
esr(config)# interface gigabitethernet 1/0/1
esr(config-if-gi)# ip address 21.12.2.1/24
esr(config-if-gi)# ip firewall disable
esr(config-if-gi)# exit
```

```
esr(config)# interface tengigabitethernet 1/0/1
esr(config-if-te)# ip address 200.10.0.1/24
esr(config-if-te)# ip firewall disable
esr(config-if-te)# exit
```

SNAT «LOCAL_NET», , «PUBLIC_POOL»:

```
esr(config)# object-group network LOCAL_NET
esr(config-object-group-network)# ip address-range 21.12.2.2-21.12.2.254
esr(config-object-group-network)# exit

esr(config)# object-group network PUBLIC_POOL
esr(config-object-group-network)# ip address-range 200.10.0.100-200.10.0.249
esr(config-object-group-network)# exit
```

SNAT.

, SNAT:

```
esr(config)# nat source
esr(config-snat)# pool TRANSLATE_ADDRESS
esr(config-snat-pool)# ip address-range 200.10.0.100-200.10.0.249
esr(config-snat-pool)# exit
```

SNAT. , te1/0/1. «LOCAL_NET»:

```
esr(config-snat)# ruleset SNAT
esr(config-snat-ruleset)# to interface te1/0/1
esr(config-snat-ruleset)# rule 1
esr(config-snat-rule)# match source-address LOCAL_NET
esr(config-snat-rule)# action source-nat pool TRANSLATE_ADDRESS
esr(config-snat-rule)# enable
esr(config-snat-rule)# exit
esr(config-snat-ruleset)# exit
```

ARP , ARP Proxy. ARP Proxy , IP «PUBLIC_POOL»:

```
esr(config)# interface tengigabitethernet 1/0/1
esr(config-if-te)# ip nat proxy-arp PUBLIC_POOL
```

, - 21.12.2.1 .

:

```
esr(config)# ip route 0.0.0.0/0 200.10.0.254
esr(config)# exit
```

Static NAT

Static NAT — NAT . , , --. , NAT .

Static NAT Source NAT, [Source NAT](#), .

Static NAT

21.12.2.100-21.12.2.150 200.10.0.0/24. – 200.10.0.100-200.10.0.150.



```
esr(config)# interface gigabitethernet 1/0/1
esr(config-if-gi)# ip address 21.12.2.1/24
esr(config-if-gi)# ip firewall disable
esr(config-if-gi)# exit
```

```
esr(config)# interface tengigabitethernet 1/0/1
esr(config-if-te)# ip address 200.10.0.1/24
esr(config-if-te)# ip firewall disable
esr(config-if-te)# exit
```

Static NAT «LOCAL_NET», , «PUBLIC_POOL»:

```
esr(config)# object-group network LOCAL_NET
esr(config-object-group-network)# ip prefix 21.12.2.0/24
esr(config-object-group-network)# exit
```

```
esr(config)# object-group network PUBLIC_POOL
esr(config-object-group-network)# ip prefix 200.10.0.0/24
esr(config-object-group-network)# exit
```

Static NAT «PROXY»:

```
esr(config)# object-group network PROXY
esr(config-object-group-network)# ip address-range 200.10.0.100-200.10.0.150
esr(config-object-group-network)# exit
```

Static NAT SNAT. , , te1/0/1. «LOCAL_NET» «PUBLIC_POOL».

```
esr(config)# nat source
esr(config-snat)# ruleset SNAT
esr(config-snat-ruleset)# to interface te1/0/1
esr(config-snat-ruleset)# rule 1
esr(config-snat-rule)# match source-address LOCAL_NET
esr(config-snat-rule)# match destination-address PUBLIC_POOL
esr(config-snat-rule)# action source-nat netmap 200.10.0.0/24 static
esr(config-snat-rule)# enable
esr(config-snat-rule)# exit
esr(config-snat-ruleset)# exit
```

ARP , «PROXY», ARP Proxy. ARP Proxy , IP- «PROXY».

```
esr(config)# interface tengigabitethernet 1/0/1
esr(config-if-te)# ip nat proxy-arp PROXY
```

c 200.10.0.0/24, - 21.12.2.1 .

```
esr# commit
Configuration has been successfully committed
esr# confirm
Configuration has been successfully confirmed
```

:

```
esr# show ip nat translations
```

HTTP/HTTPS-

| | | | |
|----|-------------|--|---|
| | | | |
| 1 | C URL | esr(config)# object-group url <NAME> | |
| 2 | | esr(config-object-group-url)# url <URL> | <URL> - , . |
| 3 | | esr(config)# ip http profile <NAME> | <NAME> - . |
| 4 | | esr(config-profile)# default action {deny permit redirect} [redirect-url <URL>] | <URL> - , . |
| 5 | () | esr(config-profile)# description <description> | <description> - 255 . |
| 6 | URL (/)() | esr(config-profile)# urls {local remote} <URL_OBJ_GROUP_NAME> action {deny permit redirect} [redirect-url <URL>] | <URL_OBJ_GROUP_NAME> - , URL. |
| 7 | , URL() | esr(config)# ip http proxy server-url <URL> | <URL> - , url. |
| 8 | () | esr(config)# ip http proxy listen-ports <OBJ_GROUP_NAME> | <OBJ_GROUP_NAME> - , 31 . |
| 9 | () | esr(config)# ip https proxy listen-ports <OBJ_GROUP_NAME> | <OBJ_GROUP_NAME> - , 31 . |
| 10 | () | esr(config)# ip https proxy redirect-port <PORT> | <PORT> - , [1..65535]. 3128 |
| 11 | HTTP- | esr(config-if)# ip http proxy <PROFILE_NAME> | <PROFILE_NAME> - |
| 12 | HTTPS- | esr(config-if)# ip https proxy <PROFILE_NAME> | <PROFILE_NAME> - |
| 13 | , . | esr(config)# object-group service <obj-group-name> | <obj-group-name> - , 31 . |
| 14 | (.). | esr(config-object-group-service)# description <description> | <description> - , 255 . |
| 15 | (tcp/udp) . | esr(config-object-group-service)# port-range 3128-3135 | - ESR 10 http proxy + cpu ESR - 1 https proxy + cpu ESR + cpu ESR * 2 - 1 |
| 16 | . | esr(config)# security zone-pair <src-zone-name> self | <src-zone-name> - , ip http proxy ip https proxy. self - , ESR. |

| | | | |
|----|----------------|--|-------------------------------------|
| 17 | . | esr(config-zone-pair)# rule <rule-number> | <rule-number> – 1..10000. |
| 18 | (). | esr(config-zone-rule)# description <description> | <description> – 255 . |
| 19 | . | esr(config-zone-rule)# action <action> [log] | <action> – permit log – , . |
| 20 | IP-, | esr(config-zone-rule)# match protocol <protocol-type> | <protocol-type> – tcp - ESR ESR. |
| 21 | TCP/UDP-, (). | esr(config-zone-rule)# match [not] destination-port <obj-group-name> | <obj-group-name> – , 12 |
| 22 | . | esr(config-zone-rule)# enable | |




Firewall ESR , Self.

HTTP-

:

URL .

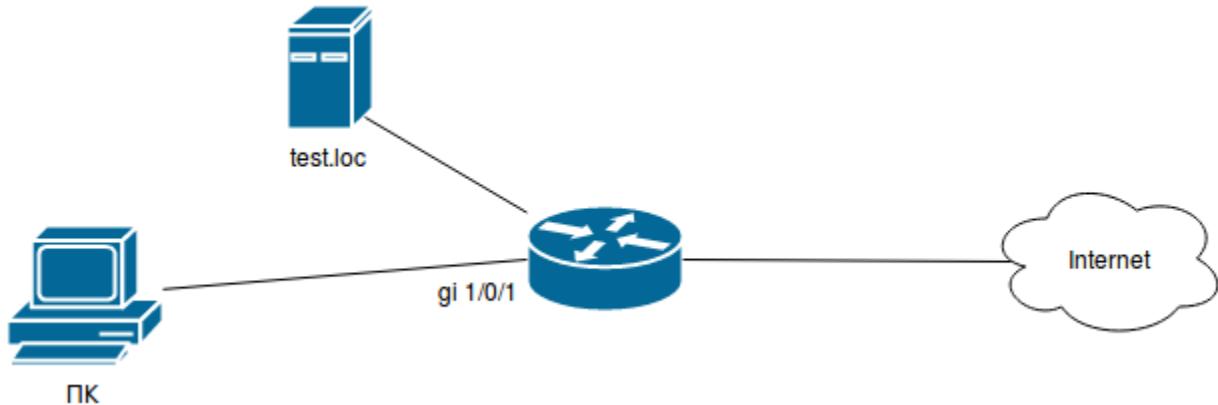

URL, . - URL:

```

esr# configure
esr(config)# object-group url test1
esr(config-object-group-url)# url http://speedtest.net/
esr(config-object-group-url)# url http://www.speedtest.net/
esr(config-object-group-url)# url https://speedtest.net/
esr(config-object-group-url)# url https://www.speedtest.net/
esr(config-object-group-url)# exit
  
```

:

```

esr(config)# ip http profile list1
esr(config-profile)# default action permit
esr(config-profile)# urls local test1 action redirect redirect-url http://test.loc
esr(config-profile)# exit
  
```

'list':

```
esr(config)# interface gi 1/0/1
esr(config-if)# ip http proxy list1
esr(config-if)# ip https proxy list1
```

Firewall, :

ESR-20 4 CPU.

http proxy 3128 3131

https proxy 3132 3135

-:

```
esr(config)# object-group service proxy
esr(config-object-group-service)# port-range 3128-3135
esr(config-object-group-service)# exit
```

:

```
esr(config)# security zone-pair LAN self
esr(config-zone-pair)# rule 50
esr(config-zone-pair-rule)# action permit
esr(config-zone-pair-rule)# match protocol tcp
esr(config-zone-pair-rule)# match destination-port proxy
esr(config-zone-pair-rule)# enable
esr(config-zone-pair-rule)# exit
esr(config-zone-pair)# exit
```