

# QoS MES23xx/33xx/35xx/5324

QoS (Quality of service – ), , 8 . Strict Priority.

FIFO: – (First In – First Out).

QoS.

```
qos trust cos / dscp / dscp-cos
```

- cos - 802.1p 802.1q
- dscp - DSCP IP-
- cos/dscp - IP-, DSCP, L2- ( PPPoE), cos.

```
show qos
```

```
console# sh qos
Qos: Basic mode
Basic trust: cos-dscp
CoS to DSCP mapping: disabled
DSCP to CoS mapping: disabled
```

```
cos/dscp
```

DSCP :

```
console# show qos map dscp-queue
Dscp-queue map:
```

dl:	d2	0	1	2	3	4	5	6	7	8	9
0 :	02	01	01	01	01	01	01	01	01	01	03
1 :	03	03	03	03	03	03	03	07	04	04	04
2 :	04	04	04	04	07	05	05	05	05	05	05
3 :	05	05	07	06	06	06	06	06	06	06	06
4 :	07	08	08	08	08	08	08	08	08	07	07
5 :	07	07	07	07	07	07	07	07	07	07	07
6 :	07	07	07	07							

, -. , DSCP 36 06

```
qos map dscp-queue <dscp-list> to <queue number>
```

cos :

```
show qos interface queuing
```

.....

```
Cos-queue map:
```

```
cos-qid
```

```
0 - 1
```

```
1 - 1
```

```
2 - 2
```

```
3 - 3
```

```
4 - 3
```

```
5 - 4
```

```
6 - 4
```

```
7 - 4
```

```
wrr-queue cos-map <queue number> <cos values>
```

/ [QoS MES23xx/33xx/35xx/5324](#)