

SMG

SMG : , . , .
SMG SIP -> " " SIP " " .

```

" "
    Display name ( ), Connected name ( ):
.->Display name ( )-> .
.-<-Connected name ( )<- .

```

Display name RFC3325:
<https://tools.ietf.org/rfc/rfc3325.txt>
 Display name (trusted). , Display name+number .

Display name (), Connected name .

1. SIPuser(FXSuser) <> SIPuser(FXSuser)

1.1 SIPuser:

SMG.

```
1.2 :
- Display Name INVITE FROM ;
- Connected Name (18x/2xx) TO/PAI/RPID .
- CallerID FXSuser .
```

2. SIPuser(FXSuser)<>SIPtrunk

■■■■

•

2.1 .

2.1.1 SIPuser->SIPtrunk

- Display Name INVITE FROM;
- Connected Name 18x/2xx TO/PAI/RPID;
- Connected Name TO TO/PAI/RPID.

2.1.2 SIPtrunk->SIPuser

- Display Name FROM INVITE;
- Connected Name 18x/2xx TO.

2.2 .

2.2.1 SIPuser->SIPtrunk

- Display Name INVITE FROM;
- Connected Name 18x/2xx TO/PAI/RPID;
- Connected Name PAI TO/PAI/RPID.

2.2.2 SIPtrunk->SIPuser

- Display Name FROM INVITE;
- Connected Name 18x/2xx TO/PAI/RPID.

3. SIPuser(SIPtrunk)<>Q.931

■■■■

3.1 Display Name Connected Name

3.2 Display Name Connected Name :

-Q.931 Display (Network!)

-QSIG

-CORNET

-Avaya Display.