

- PPTP-
- 
- 
- L2TP over IPsec
- 
- 
- OpenVPN
- 
- 
- PPPoE
- 
- 
- PPTP
- 
- 
- L2TP
- 
- 

## PPTP-

PPTP (. Point-to-Point Tunneling Protocol) – , . PPTP () PPP IP- IP-, , . PPTP . TCP- .


1	PPTP-.	esr(config)# remote-access pptp <NAME>	<NAME> – PPTP-, 31 .
2	( ).	esr(config-pptp-server)# description <DESCRIPTION>	<DESCRIPTION> – PPTP-, 255 .
3	IP-, PPTP-.	esr(config-pptp-server)# outside-address { object-group <OBJ-GROUP-NETWORK-NAME>   ip-address <ADDR>   interface { <IF>   <TUN> } }	<OBJ-GROUP-NETWORK-NAME> – IP-, PPTP-, 31 ; <ADDR> – IP-, AAA.BBB.CCC.DDD, [0..255]; <IF> – ; <TUN> – .
4	IP- .	esr(config-pptp-server)# local-address { object-group <OBJ-GROUP-NETWORK-NAME>   ip-address <ADDR> }	<OBJ-GROUP-NETWORK-NAME> – IP-, IP-, 31 ; <ADDR> – IP-, AAA.BBB.CCC.DDD, [0..255].
5	IP-, PPTP IP- .	esr(config-pptp-server)# remote-address { object-group <OBJ-GROUP-NETWORK-NAME>   address-range <FROM-ADDR>-<TO-ADDR> }	<OBJ-GROUP-NETWORK-NAME> – IP-, IP-, 31 ; <FROM-ADDR> – IP-, AAA.BBB.CCC.DDD, [0..255]; <TO-ADDR> – IP-, AAA.BBB.CCC.DDD, [0..255].
6	PPTP-.	esr(config-pptp-server)# authentication mode { local   radius }	<ul style="list-style-type: none"> <li>• local – .</li> <li>• radius – RADIUS-. RADIUS-. AAA RADIUS</li> </ul>
7		esr(config-pptp-server)# authentication method <METHOD>	<METHOD> - , [chap, mschap, mschap-v2, eap, pap]. chap
8	( ).	esr(config-pptp-server) username < NAME >	<NAME> – , 12 .
9	( ).	esr(config-pptp-user) password ascii-text { <PASSWORD>   encrypted <PASSWORD> }	<PASSWORD> – , 32 .
10	( ).	esr(config-pptp-user) enable	

11	PPTP- firewall (. Firewall).	esr(config-pptp-server)# security-zone <NAME>	<NAME> - , 31 .
12	.	esr(config-pptp-server)# enable	
13	DSCP- () .	esr(config-pptp-server)# dscp <DSCP>	<DSCP>-- dscp [0..63].
14	MPPE PPTP- () .	esr(config-pptp-server)# encryption mppe	
15	MTU (MaximumTransmitionUnit) () . MTU 1500 "system jumbo-frames"	esr(config-pptp-server) mtu <MTU>	<MTU> - MTU, [1280..1500]. : 1500.
16	DNS- () .	esr(config-pptp-server)# dns-servers object-group <OBJ-GROUP-NETWORK -NAME >	<OBJ-GROUP-NETWORK-NAME> - IP-, , DNS-, 31 .
17	WINS- () .	esr(config-pptp-server)# wins-servers object-group <OBJ-GROUP-NETWORK -NAME >	<OBJ-GROUP-NETWORK-NAME> - IP-, WINS-, 31 .

:

PPTP- .

- PPTP- – 120.11.5.1;
- – 10.10.10.1;
- IP- 10.10.10.5-10.10.10.25;
- DNS-: 8.8.8.8, 8.8.8.4;
- – fedor, ivan.

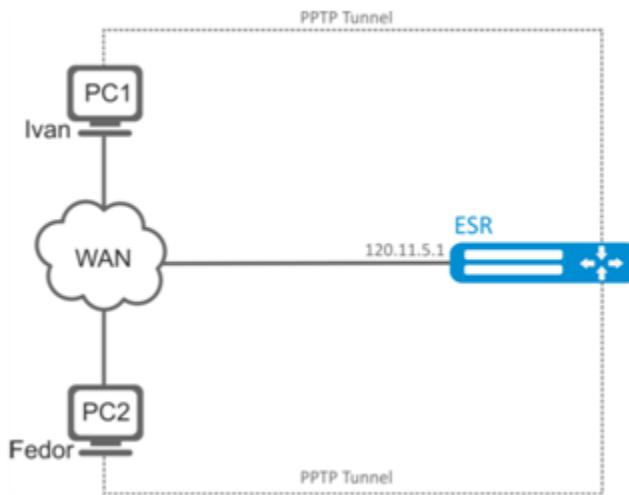

:

, , :

```

esr# configure
esr(config)# object-group network pptp_outside
esr(config-object-group-network)# ip address-range 120.11.5.1
esr(config-object-group-network)# exit
  
```

, :

```

esr(config)# object-group network pptp_local
esr(config-object-group-network)# ip address-range 10.10.10.1
esr(config-object-group-network)# exit
  
```

, :

```
esr(config)# object-group network pptp_remote
esr(config-object-group-network)# ip address-range 10.10.10.5-10.10.10.25
esr(config-object-group-network)# exit
```

PPTP- :

```
esr(config)# remote-access pptp remote-workers
esr(config-pptp)# local-address object-group pptp_local
esr(config-pptp)# remote-address object-group pptp_remote
esr(config-pptp)# outside-address object-group pptp_outside
esr(config-pptp)# dns-servers object-group pptp_dns
```

PPTP-:

```
esr(config-pptp)# authentication mode local
```

, :

```
esr(config-pptp)# security-zone VPN
```

PPTP- /van Fedor PPTP-:

```
esr(config-pptp)# username ivan
esr(config-pptp-user)# password ascii-text password1
esr(config-pptp-user)# enable
esr(config-pptp-user)# exit
esr(config-pptp)# username fedor
esr(config-pptp-user)# password ascii-text password2
esr(config-pptp-user)# enable
esr(config-pptp-user)# exit
esr(config-pptp)# exit
```

PPTP-:

```
esr(config-pptp)# enable
```

120.11.5.1:1723. PPTP- :

```
esr# show remote-access status pptp server remote-workers
```

PPTP- :

```
esr# show remote-access counters pptp server remote-workers
```

PPTP- :

```
esr# clear remote-access counters pptp server remote-workers
```

fedor PPTP- :

```
esr# clear remote-access session pptp username fedor
esr# clear remote-access session pptp server remote-workers username fedor
```

PPTP- :

```
esr# show remote-access configuration pptp remote-workers
```

 PPTP- firewall TCP- 1723 GRE(47) .

## L2TP over IPsec

L2TP (. Layer 2 Tunneling Protocol – ) – , . L2TP () PPP IP- IP-, , , L2TP . L2 UDP- . L2TP- IPsec, .

1	L2TP-.	esr(config)# remote-access l2tp <NAME>	<NAME> – L2TP-, 31 .
2	( ).	esr(config-l2tp-server)# description <DESCRIPTION>	<DESCRIPTION> – L2TP-, 255 .
3	IP-, L2TP-.	esr(config-l2tp-server)# outside-address { object-group <NAME>   ip-address <ADDR>   interface { <IF>   <TUN> } }	<OBJ-GROUP-NETWORK-NAME> – IP-, L2TP-, 31 ; <ADDR> – IP-, AAA.BBB.CCC.DDD, [0..255]; <IF> – ; <TUN> – .
4	IP- firewall PPTP-	esr(config-l2tp-server)# local-address { object-group <OBJ-GROUP-NETWORK -NAME>   ip-address <ADDR> }	<OBJ-GROUP-NETWORK-NAME> – IP-, IP-, 31 ; <ADDR> – IP-, AAA.BBB.CCC.DDD, [0..255].
5	IP- L2TP IP- .	esr(config-l2tp-server)# remote-address { object-group <OBJ-GROUP-NETWORK -NAME >   address-range <FROM-ADDR>-<TO-ADDR> }	<OBJ-GROUP-NETWORK-NAME> – IP-, IP-, 31 ; <FROM-ADDR> – IP-, AAA.BBB.CCC.DDD, [0..255]; <TO-ADDR> – IP-, AAA.BBB.CCC.DDD, [0..255].
6	L2TP-.	esr(config-l2tp-server)# authentication mode { local   radius }	<ul style="list-style-type: none"> <li>• local – .</li> <li>• radius – RADIUS-. RADIUS- . AAA RADIUS</li> </ul>
7		esr(config-l2tp-server)# authentication method <METHOD>	<METHOD> - , [chap, mschap, mschap-v2, eap, pap]. chap.
8	L2TP- (. Firewall).	esr(config-l2tp-server)# security-zone <NAME>	<NAME> – , 31 .
9	( ).	esr(config-l2tp-server) username < NAME >	<NAME> – , 12 .
10	( ).	esr(config-l2tp-user) password ascii-text { <PASSWORD>   encrypted <PASSWORD> }	<PASSWORD> – , 32 .
11	( ).	esr(config-l2tp-user) enable	
12	IKE- () .	esr(config-l2tp-server)# ipsec authentication method pre-shared-key	
13	, , .	esr(config-l2tp-server)# ipsec authentication pre-shared-key { ascii-text { <TEXT>   encrypted <ENCRYPTED-TEXT> }   hexadecimal {<HEX>   encrypted <ENCRYPTED-HEX> } }	<TEXT> – [1..64] ASCII ; <HEX> – [1..32] [2..128] (0xYYYY...) (YYYY...). <ENCRYPTED-TEXT> – [1..32], [2..128] ; <ENCRYPTED-HEX> – [2..64], [2..256] .


14	.	esr(config-l2tp-server)# enable	
15	DSCP .	esr(config-l2tp-server)# dscp <DSCP>	<DSCP> – dscp [0..63].
16	MTU (MaximumTransmitionUnit) (). MTU 1500 "system jumbo-frames"	esr(config-l2tp-server) mtu <MTU>	<MTU> – MTU, [1280..1500]. : 1500.
17	DNS-, () .	esr(config-l2tp-server)# dns-servers object-group <OBJ-GROUP-NETWORK -NAME >	<OBJ-GROUP-NETWORK-NAME> – IP-, DNS-, 31 .
18	WINS-, () .	esr(config-l2tp-server)# wins-servers object-group <OBJ-GROUP-NETWORK -NAME >	<OBJ-GROUP-NETWORK-NAME> – IP-, WINS-, 31 .

:

L2TP- . RADIUS-.

- L2TP- – 120.11.5.1;
- – 10.10.10.1;
- Radius- – 192.168.1.4;

IPsec : — «password».

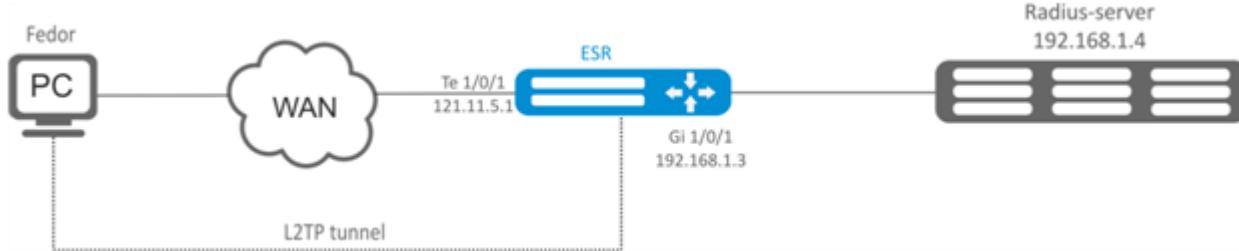

:

:

- RADIUS-;
- te1/0/1 gi1/0/1;
- IP- te1/0/1 te1/0/1.

,

```

esr(config)# object-group network l2tp_local
esr(config-object-group-network)# ip address-range 10.10.10.1
esr(config-object-group-network)# exit
  
```

, DNS-:

```

esr(config)# object-group network pptp_dns
esr(config-object-group-network)# ip address-range 8.8.8.8
esr(config-object-group-network)# ip address-range 8.8.4.4
esr(config-object-group-network)# exit
  
```

L2TP- :

```

esr(config)# remote-access l2tp remote-workers
esr(config-l2tp)# local-address ip-address 10.10.10.1
esr(config-l2tp)# remote-address address-range 10.10.10.5-10.10.10.15
esr(config-l2tp)# outside-address ip-address 120.11.5.1
esr(config-l2tp)# dns-server object-group l2tp_dns
  
```

L2TP-:

```
esr(config-l2tp)# authentication mode radius
```

, :

```
esr(config-l2tp)# security-zone VPN
```

IKE :

```
esr(config-l2tp)# ipsec authentication method psk  
esr(config-l2tp)# ipsec authentication pre-shared-key ascii-text password
```

L2TP-:

```
esr(config-l2tp)# enable
```

IP- 120.11.5.1 1701. L2TP- :

```
esr# show remote-access status l2tp server remote-workers
```

L2TP- :

```
esr# show remote-access counters l2tp server remote-workers
```

L2TP- :

```
esr# clear remote-access counters l2tp server remote-workers
```

fedor L2TP- :

```
esr# clear remote-access session l2tp username fedor  
esr# clear remote-access session l2tp server remote-workers username fedor
```

L2TP- :

```
esr# show remote-access configuration l2tp remote-workers
```



L2TP- firewall UDP- 500, 1701, 4500 ESP(50) GRE(47) .

## OpenVPN

OpenVPN — (Virtual Private Networks, VPN), , , , SSL.

1	OpenVPN-.	esr(config)# remote-access openvpn <NAME>	<NAME> – OpenVPN-, 31 .
2	(.).	esr(config-openvpn-server)# description <DESCRIPTION>	<DESCRIPTION> – OpenVPN-, 255 .

3	, IP- . ( tunnel ip)	esr(config-openvpn-server)# network <ADDR/LEN>	<ADDR/LEN> - , : AAA.BBB.CCC.DDD/EE – IP- , AAA-DDD [0..255] EE [1..32];
4	.	esr(config-openvpn-server)# protocol <PROTOCOL>	<PROTOCOL> - , : • TCP- TCP-; • UDP- UDP-.
5	OpenVPN-.	esr(config-openvpn-server)# tunnel <TYPE>	<TYPE> - , : • ip – ; • ethernet – L2 .
6	IP-, OpenVPN IP-L2. ( tunnel ethernet)	esr(config-openvpn-server)# address-range <FROM-ADDR>-<TO-ADDR>	<FROM-ADDR> – IP- , AAA.BBB.CCC.DDD, [0..255]; <TO-ADDR> – IP- , AAA.BBB.CCC.DDD, [0..255].
7	OpenVPN L2 ( tunnel ethernet).	esr(config-openvpn-server)# bridge-group <BRIDGE-ID>	<BRIDGE-ID> – .
8	.	esr(config-openvpn-server)# certificate <CERTIFICATE-TYPE> <NAME>	<CERTIFICATE-TYPE> - , : • ca – ; • crt – ; • dh – ; • server - crt – ; • server - key – ; • ta – HMAC . <NAME> - , 31 .
9	, .	esr(config-openvpn-server)# encryption algorithm <ALGORITHM>	<ALGORITHM> - , : 3des,blowfish128, aes128.
10	OpenVPN- Firewall).	esr(config-openvpn-server)# security-zone <NAME>	<NAME> - , 31 .
11	OpenVPN- ( ).	esr(config-openvpn-server)# username < NAME >	<NAME> - , 31 .
12	OpenVPN-.	esr(config-openvpn-user)# subnet <ADDR/LEN>	<ADDR/LEN> - , : AAA.BBB.CCC.DDD/EE – IP- , AAA-DDD [0..255] EE [1..32].
13	ip- OpenVPN-	esr(config-openvpn-user)# ip address <ADDR>	<ADDR> - : AAA.BBB.CCC.DDD – IP- , AAA-DDD [0..255].
14	OpenVPN-.	esr(config-openvpn-server)# enable	
15	( ).	esr(config-openvpn-server)# client-isolation	
16	( ).	esr(config-openvpn-server)# client-max <VALUE>	<VALUE> - , [1..65535].
17	OpenVPN () .	esr(config-openvpn-server)# compression	
18	DNS-, ( ).	esr(config-openvpn-server)# dns-server <ADDR>	<ADDR> – IP- DNS , AAA.BBB.CCC.DDD, [0..255];
19	TCP/UDP , OpenVPN – () .	esr(config-openvpn-server)# port <PORT>	<PORT> – TCP/UDP , [1..65535]. : 1194
20	OpenVPN , ( ).	esr(config-openvpn-server)# redirect-gateway	
21	, IP- OpenVPN- () .	esr(config-openvpn-server)# route <ADDR/LEN>	<ADDR/LEN> - , : AAA.BBB.CCC.DDD/EE – IP- , AAA-DDD [0..255] EE [1..32];
22	, ( ).	esr(config-openvpn-server)# timers holdtime <TIME>	<TIME> - , [1..65535]. : 120

23	, ()	esr(config-openvpn-server)# timers keepalive <TIME> esr(config-openvpn-server)# timers keepalive <TIME> - , [1..65535]. : 10	
24	OpenVPN- .	esr(config-openvpn-server)# duplicate-cn	
25	WINS-, ()	esr(config-openvpn-server)# wins-server <ADDR>	<ADDR> – IP- WINS , AAA.BBB.CCC.DDD, [0..255].
26	OpenVPN- ()	esr(config-openvpn-server)# authentication algorithm <ALGORITHM>	<ALGORITHM> – : <ul style="list-style-type: none"> <li>• 8-128 bits key size: md4, rsa-md4, md5, rsa-md5, mdc2, rsa-mdc2</li> <li>• 8-160 bits key size: sha, sha1, rsa-sha, rsa-sha1, rsa-sha1-2, dsa, dsa-sha, dsa-sha1, dsa-sha1-old, ripemd160, rsa-ripemd160, ecdsa-with-sha1</li> <li>• 8-224 bits key size: sha-224, rsa-sha-224</li> <li>• 8-256 bits key size: sha-256, rsa-sha-256</li> <li>• 8-384 bits key size: sha-384, rsa-sha-384</li> <li>• 8-512 bits key size: sha-512, rsa-sha-512, whirlpool</li> </ul> : sha

OpenVPN- L3 .

- OpenVPN- – 10.10.100.0/24;
- – L3;
- 



- :
- ()
- OpenVPN
- - HMAC TLS
- te1/0/1
- IP- te1/0/1.

tftp :

```

esr# copy tftp://192.168.16.10:/ca.crt certificate:ca/ca.crt
esr# copy tftp://192.168.16.10:/dh.pem certificate:dh/dh.pem
esr# copy tftp://192.168.16.10:/server.key certificate:server-key/server.key
esr# copy tftp://192.168.16.10:/server.crt certificate:server-crt/server.crt
esr# copy tftp://192.168.16.10:/ta.key certificate:ta/ta.key

```

OpenVPN- , :

```

esr(config)# remote-access openvpn AP
esr(config-openvpn)# network 10.10.100.0/24

```

L3 .

```

esr(config-openvpn)# tunnel ip
esr(config-openvpn)# protocol tcp

```

OpenVPN DNS

```
esr(config-)# route 10.10.0.0/20
esr(config-openvpn)# dns-server 10.10.1.1
```

, OpenVPN-:

```
esr(config-openvpn)# certificate ca ca.crt
esr(config-openvpn)# certificate dh dh.pem
esr(config-openvpn)# certificate server-key server.key
esr(config-openvpn)# certificate server-crt server.crt
esr(config-openvpn)# certificate ta ta.key
```

, :

```
esr(config-openvpn)# security-zone VPN
```

aes128:

```
esr(config-openvpn)# encryption algorithm aes128
```

OpenVPN-:

```
esr(config-openvpn)# enable
```

1194 ( ).

OpenVPN- :

```
esr# show remote-access status openvpn server AP
```

OpenVPN- :

```
esr# show remote-access counters openvpn server AP
```

OpenVPN- :

```
esr# clear remote-access counters openvpn server AP
```

fedor OpenVPN- :

```
esr# clear remote-access session openvpn username fedor
esr# clear remote-access session openvpn server AP username fedor
```

OpenVPN- :

```
esr# show remote-access configuration openvpn AP
```



OpenVPN- firewall TCP- 1194.

## PPPoE

PPPoE — (tunneling protocol), IP PPP Ethernet PPP-, Ethernet- -, IP-, PPP. PPP- , , - (, Ethernet), -, , IP- PPPoE-, IP-.

1	PPPoE- PPPoE-.	esr(config)# tunnel pppoe <PPPoE>	<PPPoE> - 1 10.
2	(.).	esr(config-pppoe)# description <DESCRIPTION>	<DESCRIPTION> - PPPoE-, 255.
3	VRF, PPPoE-.()	esr(config-pppoe)# ip vrf forwarding <VRF>	<VRF> - VRF, 31.
4	PPPoE .	esr(config-pppoe)# interface <IF>	<IF> - .
5	PPPoE-	esr(config-pppoe)# username <NAME> password ascii-text { <CLEAR-TEXT>   encrypted <ENCRYPTED-TEXT> }	<NAME> - , 31 ; <CLEAR-TEXT> - , [8 .. 64] ; <ENCRYPTED-TEXT> - , [16..128].
6	PPPoE- (. Firewall).	esr(config-pppoe)# security-zone <NAME>	<NAME> - , 31 .
7		esr(config-pppoe)# enable	
8	(.).	esr(config-pppoe)# authentication method <METHOD>	<METHOD> - , :chap, mschap, mschap-v2, eap, pap :chap
9	PPPoE- () .	esr(config-pppoe)# ignore-default-route	
10	, (.).	esr(config-pppoe)# load-average <TIME>	<TIME> - 5 150 ( 5 )
11	MTU (MaximumTransmitionUnit) PPP OE-. MTU 1500 "system jumbo-frames" () .	esr(config-pppoe)# mtu <MTU>	<MTU> - MTU, : • ESR-10/12V(F)/14VF-[1280..9600]; • ESR-20/21-[1280..9500]; • ESR-100/200/1000/1200/1500/1700 [1280..10000]. : 1500.
12	data-link () .	esr(config-pppoe)# ppp failure-count <NUM>	<NUM> - data-link, [1..100]. : 10
13	, keepalive- () .	esr(config-pppoe)# ppp timeout keepalive <TIME>	<TIME> - , [1..32767]. : 10
14	MSS (Maximum segment size) TCP- () .	esr(config-pppoe)# ip tcp adjust-mss <MSS>	<MSS> - MSS, [500..1460]. : 1460
15	() .	esr(config-pppoe)# history statistics	
PPPoE- : <ul style="list-style-type: none"><li>• QoS (. <a href="#">QoS</a>);</li><li>• Proxy (. <a href="#">HTTP/HTTPS</a>);</li><li>• (. <a href="#">Netflow sFlow</a>).</li></ul>			

:

PPPoE- .

- - tester;
- - password;
- gigabitethernet 1/0/7.



PPPoE- .

PPPoE- :

```
esr# configure
esr(config)# tunnel pppoe 1
esr(config-pppoe)# ip firewall disable
```

PPPoE-:

```
esr(config-pppoe)# username tester password ascii-text password
```

PPPoE-:

```
esr(config-pppoe)# interface gigabitethernet 1/0/7
esr(config-pppoe)# enable
```

PPPoE- :

```
esr# show tunnels configuration pppoe 1
```

PPPoE- :

```
esr# show tunnels counters pppoe 1
```

## PPTP

PPTP (. Point-to-Point Tunneling Protocol) – . . . PPTP () PPP IP- IP-, , . PPTP . . TCP- .

1	PPTP- .	esr(config)# tunnel pptp <INDEX>	<INDEX> – : [1..10].
2	(.).	esr(config-pptp)# description <DESCRIPTION>	<DESCRIPTION> – , 255 .
3	VRF, PPTP- (.)	esr(config-pptp)# ip vrf forwarding <VRF>	<VRF> – VRF, 31 .
4	PPTP- firewall (. Firewall).	esr(config-pptp)# security-zone <NAME> esr(config-pptp)# ip firewall disable	<NAME> – , 31 .  
5	IP- .	esr(config-pptp)# remote address <ADDR>	<ADDR> – IP- , AAA.BBB.CCC.DDD, [0..255].

6	MTU (MaximumTransmitionUnit) ()	esr(config-pptp)# mtu <MTU>	<MTU> – MTU, : • ESR-10/12V(F)/14VF – [552..9600]; • ESR-20/21 – [552..9500]; • ESR-100/200/1000/1200/1500/1700 [552..10000]. : 1500.
7	.	esr(config-pptp)# username <NAME> password ascii-text { <WORD>   encrypted <HEX> }	<NAME> – , 31. <WORD> – , [8..64], [0..9a-fA-F]. <HEX> – , [16..128].
8		esr(config-pptp)# enable	
9	MSS (Maximum segment size) TCP-().	esr(config-pptp)# ip tcp adjust-mss <MSS>	<MSS> – MSS, [500..1460]. : 1460
10	PPTP-()	esr(config-pptp)# ignore-default-route	
11	, () .	esr(config-pptp)# load-average <TIME>	<TIME> – , [5..150] : 5
12	() .	esr(config-pptp)# authentication method <METHOD>	<METHOD> – , : chap, mschap, mschap-v2, eap, pap : chap
13	() .	esr(config-pptp)# history statistics	
14	, keepalive-() .	esr(config-pptp)# ppp timeout keepalive <TIME>	<TIME> – , [1..32767]. : 10
15	data-link () .	esr(config-pptp)# ppp failure-count <NUM>	<NUM> – data-link, [1..100]. : 10

:

PPTP- :

- PPTP- 20.20.0.1;
- – : ivan, : simplepass.



:

PPTP:

```
esr(config)# tunnel pptp 1
```

( Ivan) :

```
esr(config-pptp)# username ivan password ascii-text simplepass
```

:

```
esr(config-pptp)# remote address 20.20.0.1
```

```
esr(config-pptp)# security-zone VPN
```

PPTP:

```
esr(config-pptp)# enable
```

```
esr# show tunnels status pptp
```

```
esr# show tunnels counters pptp
```

```
esr# show tunnels configuration pptp
```

## L2TP

L2TP (. Layer 2 Tunneling Protocol – ) – , . L2TP () PPP IP- IP-, , . L2TP . L2 UDP- . L2TP- IPsec, .

1	L2TP- .	esr(config)# tunnel l2tp <INDEX>	<INDEX> – : [1..10].
2	VRF, L2TP- ().	esr(config-l2tp)# ip vrf forwarding <VRF>	<VRF> – VRF, 31.
3	(.).	esr(config-l2tp)# description <DESCRIPTION>	<DESCRIPTION> – , 255.
4	L2TP- firewall (. Firewall).	esr(config-l2tp)# security-zone <NAME> esr(config-l2tp)# ip firewall disable	<NAME> – , 31.
5	IP- .	esr(config-l2tp)# remote address <ADDR>	<ADDR> – IP- , AAA.BBB.CCC.DDD, [0..255].
6	. .	esr(config-l2tp)# username <NAME> password ascii-text { <WORD>   encrypted <HEX> }	<NAME> – , 31. <WORD> – , [8..64], [0-9a-fA-F]. <HEX> – , [16..128].
7	IKE-.	esr(config-l2tp)# ipsec authentication method pre-shared-key	
8	, , .	esr(config-l2tp)# ipsec authentication pre-shared-key { ascii-text { <TEXT>   encrypted <ENCRYPTED-TEXT> }   hexadecimal {<HEX>   encrypted <ENCRYPTED-HEX> } }	<TEXT> – [1..64] ASCII ; <HEX> – [1..32] [2..128] (0xYYYY...) (YYYY...); <ENCRYPTED-TEXT> – [1..32], [2..128]; <ENCRYPTED-HEX> – [2..64], [2..256].
9		esr(config-l2tp)# enable	

10	MTU (MaximumTransmitionUnit) () .	esr(config-l2tp)# mtu <MTU>	<MTU> – MTU, : • ESR-10/12V(F)/14VF – [552..9600]; • ESR-20/21 – [552..9500]; • ESR-100/200/1000/1200/1500/1700 [552..10000]. : 1500.
11	L2TP- () .	esr(config-l2tp)# ignore-default-route	
12	() .	esr(config-l2tp)# authentication method <METHOD>	<METHOD> – , : chap, mschap, mschap-v2, eap, pap : chap
13	, () .	esr(config-l2tp)# load-average <TIME>	<TIME> – , [5..150] : 5
14	, keepalive- () .	esr(config-l2tp)# ppp timeout keepalive <TIME>	<TIME> – , [1..32767]. : 10
15	data-link () .	esr(config-l2tp)# ppp failure-count <NUM>	<NUM> – data-link, [1..100]. : 10
PPPoE- QoS (. <a href="#">QoS</a> ). :			

:

PPTP- :

- PPTP 20.20.0.1;
- : ivan, : simplepass



:

L2TP:

```
esr(config)# tunnel l2tp 1
```

```
( Ivan) :
```

```
esr(config-l2tp)# username ivan password ascii-text simplepass
```

:

```
esr(config-l2tp)# remote address 20.20.0.1
```

:

```
esr(config-l2tp)# security-zone VPN
```

ipsec:

```
esr(config-l2tp)# ipsec authentication method pre-shared-key
```

ipsec:

```
esr(config-l2tp)# ipsec authentication pre-shared-key ascii-text password
```

L2TP:

```
esr(config-l2tp)# enable
```

:

```
esr# show tunnels status l2tp
```

:

```
esr# show tunnels counters l2tp
```

:

```
esr# show tunnels configuration l2tp
```