


ESR - PCRF

ESR SoftWLC ESR Eltex-PCRF ([v1.18_PCRF](#)). Eltex-PCRF (PCRF) .

.1:

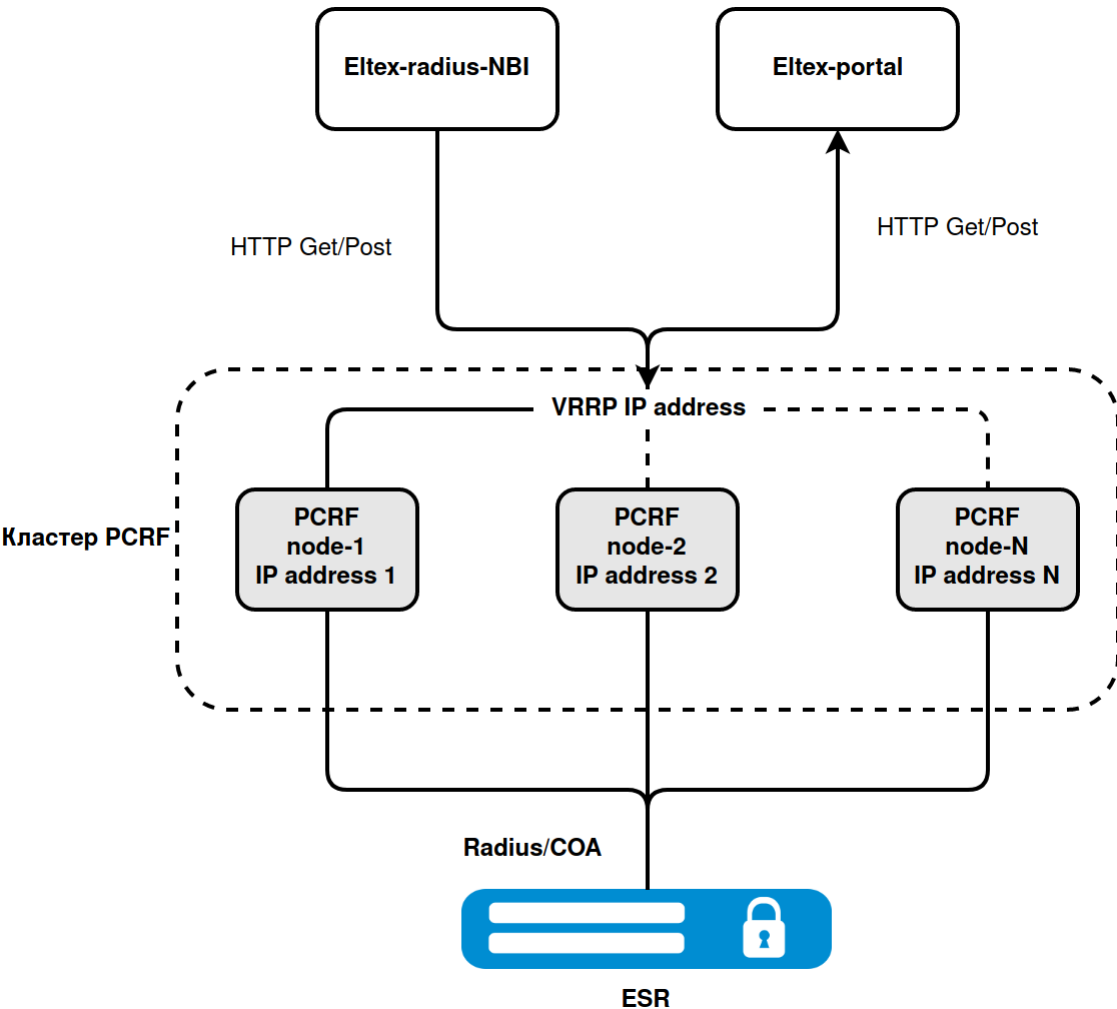


.1.

:

- PCRF VRRP SoftWLC;
- PCRF Eltex-radius-NBI Eltex-portal HTTP ;
- PCRF COA-, PCRF, PCRF;
- ESR PCRF, VRRP .

, PCRF, ESR . ESR 8 - .

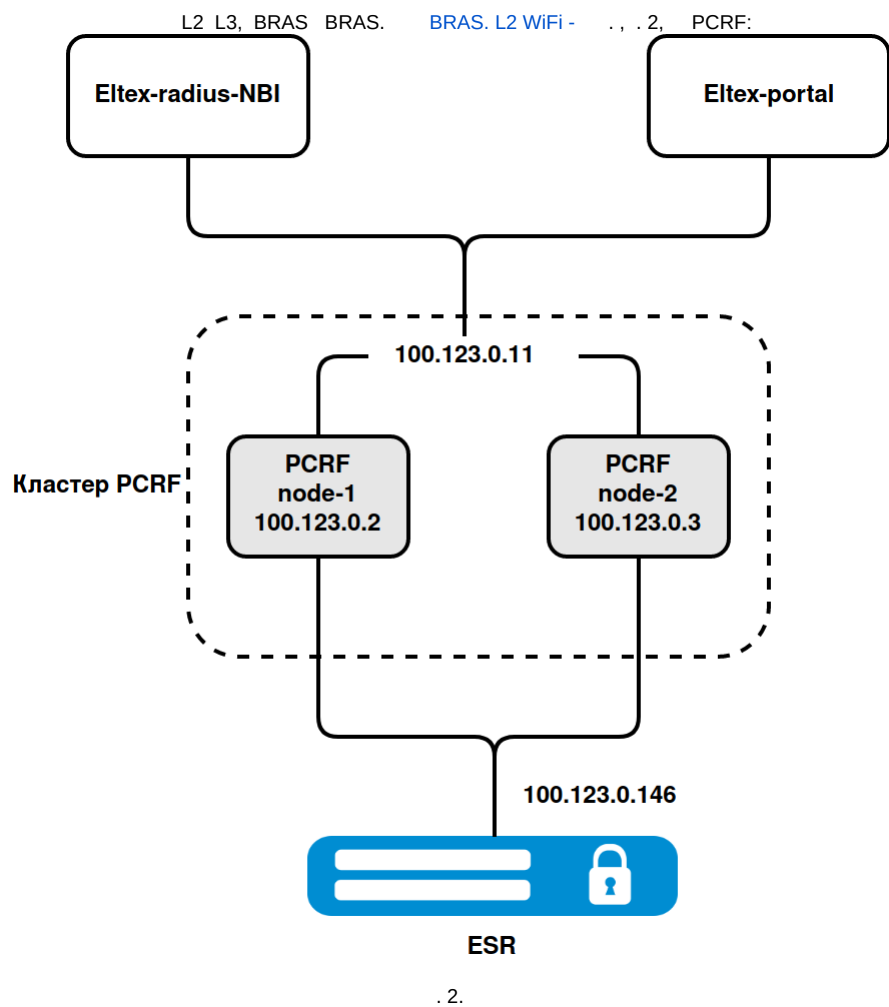

PCRF, :

```

object-group network SoftWLC
  ip address-range 100.123.0.2-100.123.0.3
exit

```

:-

```

radius-server host 100.123.0.2
  key ascii-text testing123
  timeout 2
  priority 20
  source-address 100.123.0.176
  auth-port 31812
  acct-port 31813
  retransmit 3
  dead-interval 10
exit
radius-server host 100.123.0.3
  key ascii-text testing123
  timeout 2
  priority 20
  source-address 100.123.0.176
  auth-port 31812
  acct-port 31813
  retransmit 3
  dead-interval 10
exit

aaa radius-profile PCRF
  radius-server host 100.123.0.2
  radius-server host 100.123.0.3
exit

das-server COA
  key ascii-text testing123
  port 3799
  clients object-group SoftWLC
exit

aaa das-profile COA
  das-server COA
exit

```

- subscriber-control wireless-controller ESR.

:

- priority - -, , . - .
- timeout - -, .
- retransmit - -, .
- dead-interval -, retransmit, - .

, , -(100.123.0.2) 3 . 3 100.123.0.3. - ERROR (-,);

```
%BRAS-E-ERROR: Not found working radius server!
```

, 100.123.0.3 - , dead-interval - 100.123.0.2.

ESR PCRF

PCRF PCRF, , . ESR - , - BRAS - -.

, PCRF PCRF, PCRF .

VRRP PCRF ESR,.. - UDP. , , VRRP IP, IP- PCRF, ESR, "" .