


# TAU32m. (Tone detect parameters) FXO

, FXS, (, ), ., /, () .

, : 425 +/- 3, 0,3 - 0,4, 0,3 - 0,4.

1 “”.

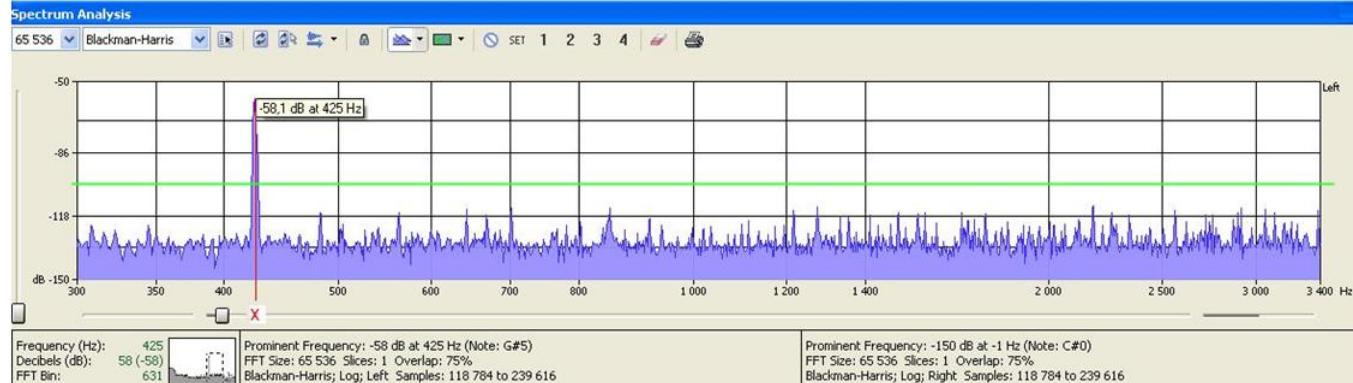


1 - « »

, , X[], X=425 [], Y[], «». [], ( 100 1) Z[], ( « » 0).

, , 30. -58+30=-28., 600, ~-20., Minimum level of detectable signal, dBm=-40 -67 dBm=-70. ( / ).

A/B [] . / , , . 2 A/B = 1000/3998 [], 1, . X.

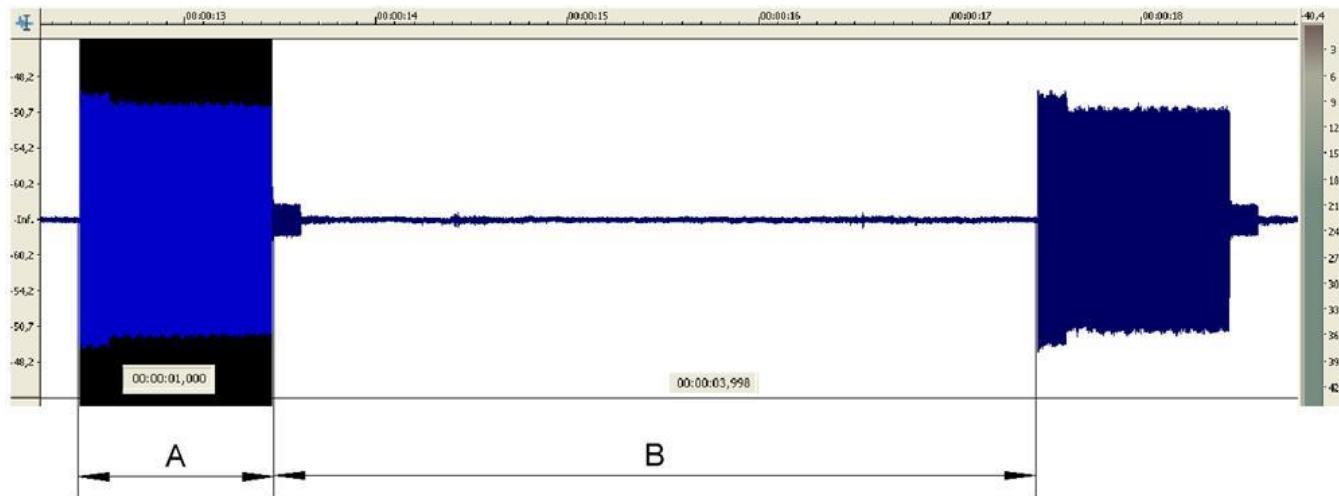

2 -

, , - FXO, . PBX-> Subscriber Profile. **FXO parameters** (Tone detect parameters):

- Minimum level of detectable signal, dBm – « » « », -20 -40 ;
- Dialtone detection parameters – « »;
- Busytone detection parameters – « ».
- Ringback tone detection parameters: – « ». : X;Z(A/B/1) X,Y;Z(A/B/1+2) X,Y;Z(A/B/2) :

X – ();  
Y – ();  
Z – , ( 0 3, « » 0);  
A – , ;  
B – , ( 0);  
1 – 1;  
1+2 – ;  
2 – 2.  
:

- Minimum level of detectable signal, dBm=-40
- Ringback tone detection parameters: 425;0(1000/3998/1)
- Dialtone detection parameters Busytone detection parameters,

32 ( ):

425;0(2000/0/1)  
425;1(350/350/1)  
425;0(1000/4000/1)

480,620;0(2000/0/1+2)  
480,620;2(250/250/1+2)  
480,620;1(2000/4000/1+2)