

- **DHCP-**
 -
 -
- **Destination NAT**
 - Destination NAT
- **Source NAT**
 -
 - 1
 - 2
- **Static NAT**
 - Static NAT
- **HTTP/HTTPS-**
 -
 - **HTTP-**
- **NTP**
 -
 -

DHCP-

DHCP- . DHCP- , :

- default-router – IP- , ;
- domain-name – , (DNS);
- dns-server – , .

1	IPv4/IPv6 DHCP-.	esr(config)# ip dhcp-server [vrf <VRF>]	<VRF> – VRF, DHCP- 31 .
		esr(config)# ipv6 dhcp-server [vrf <VRF>]	
2	DSCP IP- DHCP- () .	esr(config)# ip dhcp-server dscp <DSCP>	<DSCP> – DSCP, [0..63]. : 61.
3	IPv4/IPv6- DHCP- .	esr(config)# ip dhcp-server pool <NAME> [vrf <VRF>]	<NAME> – IPv4/IPv6- DHCP-, 31 . <VRF> – VRF, IP- DHCP-. 31
		esr(config)# ipv6 dhcp-server pool <NAME> [vrf <VRF>]	
4	IPv4/IPv6- , IPv4 /IPv6-.	esr(config-dhcp-server)# network <ADDR/LEN>	<ADDR/LEN> – IP- , AAA.BBB.CCC.DDD/EE, AAA – DDD [0..255] EE [1..32].
		esr(config-ipv6-dhcp-server)# network <IPV6-ADDR /LEN>	<IPV6-ADDR/LEN> – IP- , X:X:X::X/EE, X [0..FFFF] EE [1..128].
5	IPv4/IPv6- , DHCP-.	esr(config-dhcp-server)# address-range <FROM-ADDR>-<TO-ADDR>	<FROM-ADDR> – IP- ; <TO-ADDR> – IP- , AAA.BBB.CCC.DDD, [0..255]. 32 IP- .
		esr(config-ipv6-dhcp-server)# address-range <FROM-ADDR>-<TO-ADDR>	<FROM-ADDR> – IPv6- ; <TO-ADDR> – IP- ; X:X:X::X, [0..FFFF].

6	IPv4/IPv6- .	DHCP- ().	esr(config-dhcp-server)# address <ADDR> {mac-address <MAC> client-identifier <CI>}	<ADDR> – IP- , AAA.BBB.CCC.DDD, [0..255]; <MAC> – , IP- , XX:XX:XX:XX:XX:XX, [00..FF]. <CI> – DHCPOption61. : • HH:HH:HH:HH:HH:HH: – mac- ; • STRING – 1 64 .
			esr(config-ipv6-dhcp-server)# address <ADDR> mac-address <MAC>	<IPV6-ADDR> – IPv6- , X:X:X::X, [0..FFFF]; <MAC> – , IPv6- , XX:XX:XX:XX:XX:XX, [00..FF]
7	IPv4- .	DHCP- , DHCP- 3.	esr(config-dhcp-server)# default-router <ADDR>	<ADDR> – IP- , AAA.BBB.CCC.DDD, [0..255]. 8 IP- .
8	DNS- .	DHCP- 15 ().	esr(config-dhcp-server)# domain-name <NAME>	<NAME> – DNS- , 255 .
			esr(config-ipv6-dhcp-server)# domain-name <NAME>	
9	IPv4/IPv6- DNS-. DHCP- 6 () .		esr(config-dhcp-server)# dns-server <ADDR>	<ADDR> – IP- DNS- , AAA.BBB.CCC.DDD, [0..255]. 8 IP- .
			esr(config-ipv6-dhcp-server)# dns-server <IPV6- ADDR>	<IPV6-ADDR> – IPv6- DNS- , X:X:X::X, [0..FFFF]. 8 IPV6- .
10	IP- () .	DHCP- , , , .	esr(config-dhcp-server)# max-lease-time <TIME>	<TIME> – IP- , DD:HH:MM, : • DD – , [0..364]; • HH – , [0..23]; • MM – , [0..59] : 1
			esr(config-ipv6-dhcp-server)# max-lease-time <TIME>	
11	, IP- () .		esr(config-dhcp-server)# default-lease-time <TIME>	<TIME> – IP- , DD:HH:MM, : • DD – , [0..364]; • HH – , [0..23]; • MM – , [0..59] : 12 .
			esr(config-ipv6-dhcp-server)# default-lease-time <TIME>	
12	(DHCP 60) () .		esr(config)# ip dhcp-server vendor-class-id <NAME>	<NAME> – , 31 .
			esr(config)# ipv6 dhcp-server vendor-class-id <NAME>	
13	(DHCP 43).		esr(config-dhcp-vendor-id)# vendor-specific-options <HEX>	<HEX> – , 128 .
			esr(config-ipv6-dhcp-vendor-id)# vendor-specific-options <HEX>	
14	IP- NetBIOS- (DHCP 44) () .		esr(config-dhcp-server)# netbios-name-server <ADDR>	<ADDR> – IP- NetBIOS- AAA.BBB.CCC.DDD, [0..255]. 4 IP- .
15	IP- tftp- (DHCPOption 150) () .		esr(config-dhcp-server)# tftp-server <ADDR>	<ADDR> – IP- DNS- , AAA.BBB.CCC.DDD, [0..255].

DHCP- , «trusted». IP- 192.168.1.0/24 . 1. , DNS- DHCP-.

«trusted» :

```
esr# configure
esr(config)# security zone trusted
esr(config-zone)# exit
```

«Simple» IP- . , :

```
esr# configure
esr(config)# ip dhcp-server pool Simple
esr(config-dhcp-server)# network 192.168.1.0/24
esr(config-dhcp-server)# address-range 192.168.1.100-192.168.1.125
esr(config-dhcp-server)# default-lease-time 1:00:00
```

:

- : 192.168.1.1;
- : eltex.loc;
- DNS: DNS1: 172.16.0.1, DNS2: 8.8.8.8.

```
esr(config-dhcp-server)# domain-name "eltex.loc"
esr(config-dhcp-server)# default-router 192.168.1.1
esr(config-dhcp-server)# dns-server 172.16.0.1,8.8.8.8
esr(config-dhcp-server)# exit
```

DHCP- IP- , IP- , .

```
esr(config)# interface gigabitethernet 1/0/1
esr(config-if-gi)# security-zone trusted
esr(config-if-gi)# ip address 192.168.1.1/24
esr(config-if-gi)# exit
```

DHCP , 68 67, DHCP, UDP:

```
esr(config)# object-group service dhcp_server
esr(config-object-group-service)# port-range 67
esr(config-object-group-service)# exit
esr(config)# object-group service dhcp_client
esr(config-object-group-service)# port-range 68
esr(config-object-group-service)# exit
esr(config)# security zone-pair trusted self
esr(config-zone-pair)# rule 30
esr(config-zone-rule)# match protocol udp
esr(config-zone-rule)# match source-port dhcp_client
esr(config-zone-rule)# match destination-port dhcp_server
esr(config-zone-rule)# action permit
esr(config-zone-rule)# enable
esr(config-zone-rule)# exit
esr(config-zone-pair)# exit
```

:

```
esr(config)# ip dhcp-server
esr(config)# exit
```

:

```
esr# show ip dhcp binding
```

:

```
esr# show ip dhcp server pool
esr# show ip dhcp server pool Simple
```



IPv6 IPv4.

Destination NAT

Destination NAT (DNAT) IP- . . .

DNAT , «» , «» , . . .

1	.	esr(config)# nat destination	
2	C IP- / TCP/UDP- () .	esr(config-dnat)# pool <NAME>	<NAME>- NAT- , 31 .
3	IP- , IP- .	esr(config-dnat-pool)# ip address <ADDR>	<ADDR>- IP- , AAA.BBB.CCC.DDD, [0..255].
4	TCP/UDP , TCP /UDP .	esr(config-dnat-pool)# ip port <PORT>	<PORT>- TCP/UDP , [1..65535].
5	.	esr(config-dnat)# ruleset <NAME>	<NAME>- , 31 .
6	VRF, () .	esr(config-dnat-ruleset)# ip vrf forwarding <VRF>	<VRF>- VRF, 31 .
7	. , .	esr(config-dnat-ruleset)# from { zone <NAME> interface <IF> tunnel <TUN> default }	<NAME>- ; <IF>- ; <TUN>- ; default - .
8	c . .	esr(config-dnat-ruleset)# rule <ORDER>	<ORDER>- , [1..10000].
9	IP- { } , .	esr(config-dnat-rule)# match [not] {source destination}-address <OBJ-GROUP-NETWORK-NAME>	<OBJ-GROUP-NETWORK-NAME>- IP- , 31 . «any» IP- .
10	(tcp/udp-) { } , () .	esr(config-dnat-rule)# match [not] {source destination}-port <PORT-SET-NAME>	<PORT-SET-NAME>- , 31 . «any» TCP/UDP- .
11	IP- , () .	esr(config-dnat-rule)# match [not] {protocol <TYPE> protocol-id <ID> }	<TYPE>- , : esp, icmp, ah, eigrp, ospf, igmp, ipip, tcp, pim, udp, vrrp, rdp, l2tp, gre. «any» . <ID>- IP- , [0x00-0xFF].
12	ICMP, (ICMP) () .	esr(config-dnat-rule)# match [not] icmp {<ICMP_TYPE><ICMP_CODE> <TYPE-NAME>}	<ICMP_TYPE>- ICMP, [0..255]. <ICMP_CODE>- ICMP, [0..255]. «any» . <TYPE-NAME>- ICMP .
13	« » , , «match».	esr(config-dnat-rule)# action destination-nat { off pool <NAME> netmap <ADDR/LEN> }	off- ; pool <NAME>- , IP- /TCP/UDP ; netmap <ADDR/LEN>- IP- , . AAA.BBB.CCC.DDD/EE, AAA - DDD [0..255] EE [1..32].
14	.	esr(config-dnat-rule)# enable	


¹ not ,

«match» «not» . . .
« CLI».

Destination NAT

:

, «UNTRUST», «TRUST». - 10.1.1.100. 1.2.3.4, 80.

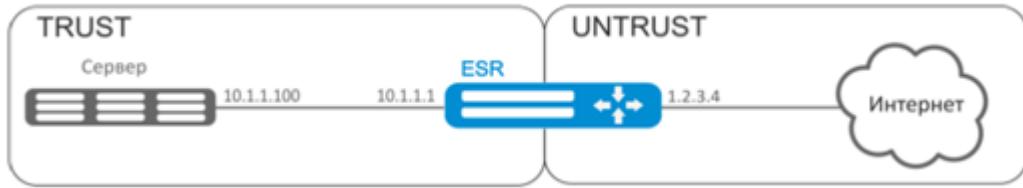

«UNTRUST» «TRUST». . . IP.

```

esr# configure
esr(config)# security zone UNTRUST
esr(config-zone)# exit
esr(config)# security zone TRUST
esr(config-zone)# exit
esr(config)# interface gigabitethernet 1/0/1
esr(config-if-gi)# security-zone TRUST
esr(config-if-gi)# ip address 10.1.1.1/25
esr(config-if-gi)# exit
esr(config)# interface tengigabitethernet 1/0/1
esr(config-if-te)# ip address 1.2.3.4/29
esr(config-if-te)# security-zone UNTRUST
esr(config-if-te)# exit

```

IP- , Firewall DNAT.

- NET_UPLINK - ;
- SERVER_IP - ;
- SRV_HTTP - .

```

esr(config)# object-group network NET_UPLINK
esr(config-object-group-network)# ip address 1.2.3.4
esr(config-object-group-network)# exit

```

```

esr(config)# object-group service SRV_HTTP
esr(config-object-group-service)# port 80
esr(config-object-group-service)# exit

```

```

esr(config)# object-group network SERVER_IP
esr(config-object-group-network)# ip address 10.1.1.100
esr(config-object-group-network)# exit

```

DNAT , , 1.2.3.4 .

```

esr(config)# nat destination
esr(config-dnat)# pool SERVER_POOL
esr(config-dnat-pool)# ip address 10.1.1.100
esr(config-dnat-pool)# ip port 80
esr(config-dnat-pool)# exit

```

«DNAT», . , , «UNTRUST». (match destination-address, match destination-port) . , , (action destination-nat). «enable».

```

esr(config-dnat)# ruleset DNAT
esr(config-dnat-ruleset)# from zone UNTRUST
esr(config-dnat-ruleset)# rule 1
esr(config-dnat-rule)# match destination-address NET_UPLINK
esr(config-dnat-rule)# match protocol tcp
esr(config-dnat-rule)# match destination-port SRV_HTTP
esr(config-dnat-rule)# action destination-nat pool SERVER_POOL
esr(config-dnat-rule)# enable
esr(config-dnat-rule)# exit
esr(config-dnat-ruleset)# exit
esr(config-dnat)# exit

```

, «UNTRUST» «TRUST», . . . , «SERVER_IP» DNAT.

```

esr(config)# security zone-pair UNTRUST TRUST
esr(config-zone-pair)# rule 1
esr(config-zone-pair-rule)# match destination-address SERVER_IP
esr(config-zone-pair-rule)# match destination-nat
esr(config-zone-pair-rule)# action permit
esr(config-zone-pair-rule)# enable
esr(config-zone-pair-rule)# exit
esr(config-zone-pair)# exit
esr(config)# exit

```

:

```

esr# show ip nat destination pools
esr# show ip nat destination rulesets
esr# show ip nat proxy-arp
esr# show ip nat translations

```

Source NAT

Source NAT (SNAT) , . . . ,
SNAT , . IP- .


1	.	esr(config)# nat source	
2	IP- / TCP/UDP- () .	esr(config-snat)# pool <NAME>	<NAME>- NAT-, 31 .
3	IP- , IP- .	esr(config-snat-pool)# ip address-range <IP>[-<ENDIP>]	<IP>- IP- , AAA.BBB.CCC.DDD, [0..255]; <ENDIP>- IP- , AAA.BBB.CCC.DDD, [0..255]. IP- , IP- IP- .
4	TCP/UDP , TCP /UDP .	esr(config-snat-pool)# ip port-range <PORT> [-<ENDPORT>]	<PORT>- TCP/UDP , [1..65535]; <ENDPORT>- TCP/UDP , [1..65535]. TCP/UDP , TCP/UDP TCP /UDP .
5	TCP/UDP , TCP /UDP .	esr(config-snat-pool)# ip port <PORT>	<PORT>- TCP/UDP , [1..65535].
6	NAT persistent.	esr(config-snat-pool)# persistent	
7	.	esr(config-snat)# ruleset <NAME>	<NAME>- , 31 .
8	VRF, () .	esr(config-snat-ruleset)# ip vrf forwarding <VRF>	<VRF>- VRF, 31 .

9	. , .	esr(config-snat-ruleset)# to { zone <NAME> interface <IF> tunnel <TUN> default }	<NAME>- ; <IF>- ; <TUN>- ; default - , .
10	c . .	esr(config-snat-ruleset)# rule <ORDER>	<ORDER>- , [1..10000].
11	IP-{ }, .	esr(config-snat-rule)# match [not] {source destination}-address <OBJ-GROUP-NETWORK-NAME>	<OBJ-GROUP-NETWORK-NAME>- IP-, 31 . «any» IP- .
12	IP-{ }, ().	esr(config-snat-rule)# match [not] {source destination}-port <PORT-SET-NAME>	<PORT-SET-NAME>- , 31 . «any» TCP/UDP- .
13	IP-, ().	esr(config-snat-rule)# match [not] {protocol protocol-id} <TYPE>	<TYPE>- , : esp, icmp, ah, eigrp, ospf, igmp, ipip, tcp, pim, udp, vrrp, rdp, l2tp, gre. «any» ; <ID>- IP-, [0x00-0xFF].
14	ICMP, ().	esr(config-snat-rule)# match [not] icmp {<ICMP_TYPE><ICMP_CODE> <TYPE-NAME>}	<ICMP_TYPE>- ICMP, [0..255]; <ICMP_CODE>- ICMP, [0..255]. «any» ; <TYPE-NAME>- ICMP
15	« » , , «match»	esr(config-snat-rule)# action source-nat { off pool <NAME> netmap <ADDR/LEN> [static] interface [FIRST_PORT - LAST_PORT] }	off- ; pool<NAME>- , IP- / TCP/UDP ; netmap <ADDR/LEN>- IP- , ; static- NAT. AAA.BBB.CCC.DDD/EE, AAA – DDD [0..255] EE [1..32]. interface [FIRST_PORT – LAST_PORT]- IP- . TCP/UDP-, TCP /UDP- , .
16	.	esr(config-snat-rule)# enable	

¹ not, ,
 «match» «not». , .
 « CLI».

1

:
 10.1.2.0/24 Source NAT. SNAT 100.0.0.100-100.0.0.249.

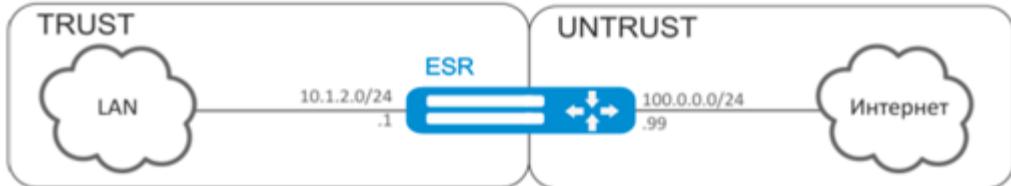

, . «TRUST» «UNTRUST» .

```

esr# configure
esr(config)# security zone UNTRUST
esr(config-zone)# exit
esr(config)# security zone TRUST
esr(config-zone)# exit
esr(config)# interface gigabitethernet 1/0/1
esr(config-if-gi)# ip address 10.1.2.1/24
esr(config-if-gi)# security-zone TRUST
esr(config-if-gi)# exit
esr(config)# interface tengigabitethernet 1/0/1
esr(config-if-te)# ip address 100.0.0.99/24
esr(config-if-te)# security-zone UNTRUST
esr(config-if-te)# exit

```

SNAT «LOCAL_NET», , «PUBLIC_POOL».

```

esr(config)# object-group network LOCAL_NET
esr(config-object-group-network)# ip address-range 10.1.2.2-10.1.2.254
esr(config-object-group-network)# exit
esr(config)# object-group network PUBLIC_POOL
esr(config-object-group-network)# ip address-range 100.0.0.100-100.0.0.249
esr(config-object-group-network)# exit

```

«TRUST» «UNTRUST» , . «LOCAL_NET» . enable.

```

esr(config)# security zone-pair TRUST UNTRUST
esr(config-zone-pair)# rule 1
esr(config-zone-pair-rule)# match source-address LOCAL_NET
esr(config-zone-pair-rule)# action permit
esr(config-zone-pair-rule)# enable
esr(config-zone-pair-rule)# exit
esr(config-zone-pair)# exit

```

SNAT. , SNAT.

```

esr(config)# nat sourc
esr(config-snat)# pool TRANSLATE_ADDRESS
esr(config-snat-pool)# ip address-range 100.0.0.100-100.0.0.249
esr(config-snat-pool)# exit

```

SNAT. , , - «UNTRUST». «LOCAL_NET».

```

esr(config-snat)# ruleset SNAT
esr(config-snat-ruleset)# to zone UNTRUST
esr(config-snat-ruleset)# rule 1
esr(config-snat-rule)# match source-address LOCAL_NET
esr(config-snat-rule)# action source-nat pool TRANSLATE_ADDRESS
esr(config-snat-rule)# enable
esr(config-snat-rule)# exit
esr(config-snat-ruleset)# exit

```

ARP , , ARP Proxy. ARP Proxy , IP- «PUBLIC_POOL».

```

esr(config)# interface tengigabitethernet 1/0/1
esr(config-if-te)# ip nat proxy-arp PUBLIC_POOL

```

, - 10.1.2.1 .

```
esr(config)# ip route 0.0.0.0/0 100.0.0.1  
esr(config)# exit
```

2

:
21.12.2.0/24 Source NAT (firewall). SNAT 200.10.0.100-200.10.0.249.



```
esr(config)# interface gigabitethernet 1/0/1  
esr(config-if-gi)# ip address 21.12.2.1/24  
esr(config-if-gi)# ip firewall disable  
esr(config-if-gi)# exit
```

```
esr(config)# interface tengigabitethernet 1/0/1  
esr(config-if-te)# ip address 200.10.0.1/24  
esr(config-if-te)# ip firewall disable  
esr(config-if-te)# exit
```

SNAT «LOCAL_NET», , «PUBLIC_POOL»:

```
esr(config)# object-group network LOCAL_NET  
esr(config-object-group-network)# ip address-range 21.12.2.2-21.12.2.254  
esr(config-object-group-network)# exit  
  
esr(config)# object-group network PUBLIC_POOL  
esr(config-object-group-network)# ip address-range 200.10.0.100-200.10.0.249  
esr(config-object-group-network)# exit
```

SNAT.

, SNAT:

```
esr(config)# nat source  
esr(config-snat)# pool TRANSLATE_ADDRESS  
esr(config-snat-pool)# ip address-range 200.10.0.100-200.10.0.249  
esr(config-snat-pool)# exit
```

SNAT. , te1/0/1. «LOCAL_NET»:

```
esr(config-snat)# ruleset SNAT  
esr(config-snat-ruleset)# to interface te1/0/1  
esr(config-snat-ruleset)# rule 1  
esr(config-snat-rule)# match source-address LOCAL_NET  
esr(config-snat-rule)# action source-nat pool TRANSLATE_ADDRESS  
esr(config-snat-rule)# enable  
esr(config-snat-rule)# exit  
esr(config-snat-ruleset)# exit
```

ARP , , ARP Proxy. ARP Proxy , IP- «PUBLIC_POOL»:

```
esr(config)# interface tengigabitethernet 1/0/1
esr(config-if-te)# ip nat proxy-arp PUBLIC_POOL
```

, - 21.12.2.1 .

:

```
esr(config)# ip route 0.0.0.0/0 200.10.0.254
esr(config)# exit
```

Static NAT

Static NAT — NAT . , , , --. , NAT .

Static NAT Source NAT, [Source NAT](#), .

Static NAT

21.12.2.100-21.12.2.150 200.10.0.0/24. - 200.10.0.100-200.10.0.150.



```
esr(config)# interface gigabitethernet 1/0/1
esr(config-if-gi)# ip address 21.12.2.1/24
esr(config-if-gi)# ip firewall disable
esr(config-if-gi)# exit
```

```
esr(config)# interface tengigabitethernet 1/0/1
esr(config-if-te)# ip address 200.10.0.1/24
esr(config-if-te)# ip firewall disable
esr(config-if-te)# exit
```

Static NAT «LOCAL_NET», , «PUBLIC_POOL»:

```
esr(config)# object-group network LOCAL_NET
esr(config-object-group-network)# ip prefix 21.12.2.0/24
esr(config-object-group-network)# exit
```

```
esr(config)# object-group network PUBLIC_POOL
esr(config-object-group-network)# ip prefix 200.10.0.0/24
esr(config-object-group-network)# exit
```

Static NAT «PROXY»:

```

esr(config)# object-group network PROXY
esr(config-object-group-network)# ip address-range 200.10.0.100-200.10.0.150
esr(config-object-group-network)# exit

```

Static NAT SNAT. , , te1/0/1. «LOCAL_NET» «PUBLIC_POOL».

```

esr(config)# nat source
esr(config-snat)# ruleset SNAT
esr(config-snat-ruleset)# to interface te1/0/1
esr(config-snat-ruleset)# rule 1
esr(config-snat-rule)# match source-address LOCAL_NET
esr(config-snat-rule)# match destination-address PUBLIC_POOL
esr(config-snat-rule)# action source-nat netmap 200.10.0.0/24 static
esr(config-snat-rule)# enable
esr(config-snat-rule)# exit
esr(config-snat-ruleset)# exit

```

ARP , «PROXY», ARP Proxy. ARP Proxy , IP- «PROXY».

```

esr(config)# interface tengigabitethernet 1/0/1
esr(config-if-te)# ip nat proxy-arp PROXY

```

c 200.10.0.0/24, - 21.12.2.1 .

```

esr# commit
Configuration has been successfully committed
esr# confirm
Configuration has been successfully confirmed

```

:

```
esr# show ip nat translations
```

HTTP/HTTPS-

1	C URL	esr(config)# object-group url <NAME>	
2		esr(config-object-group-url)# url <URL>	<URL> - , .
3		esr(config)# ip http profile <NAME>	<NAME> - .
4		esr(config-profile)# default action {deny permit redirect} [redirect-url <URL>]	<URL> - , .
5	()	esr(config-profile)# description <description>	<description> - 255 .
6	URL (/)()	esr(config-profile)# urls {local remote} <URL_OBJ_GROUP_NAME> action {deny permit redirect} [redirect-url <URL>]	<URL_OBJ_GROUP_NAME> - , URL.
7	, URL()	esr(config)# ip http proxy server-url <URL>	<URL> - , url.
8	()	esr(config)# ip http proxy listen-ports <OBJ_GROUP_NAME>	<OBJ_GROUP_NAME> - , 31 .


9	()	esr(config)# ip https proxy listen-ports <OBJ_GROUP_NAME>	<OBJ_GROUP_NAME> - , 31 .
10	()	esr(config)# ip https proxy redirect-port <PORT>	<PORT> - , [1..65535]. 3128
11	HTTP-	esr(config-if)# ip http proxy <PROFILE_NAME>	<PROFILE_NAME> -
12	HTTPS-	esr(config-if)# ip https proxy <PROFILE_NAME>	<PROFILE_NAME> -
13	, .	esr(config)# object-group service <obj-group-name>	<obj-group-name> - , 31 .
14	(.).	esr(config-object-group-service)# description <description>	<description> - , 255 .
15	(tcp/udp) .	esr(config-object-group-service)# port-range 3128-3135	- ESR 10 http proxy + cpu ESR - 1 https proxy + cpu ESR + cpu ESR * 2 - 1
16	.	esr(config)# security zone-pair <src-zone-name> self	<src-zone-name> - , ip http proxy ip https proxy. self - , ESR.
17	.	esr(config-zone-pair)# rule <rule-number>	<rule-number> - 1..10000.
18	(.).	esr(config-zone-rule)# description <description>	<description> - 255 .
19	.	esr(config-zone-rule)# action <action> [log]	<action> - permit log - , .
20	IP-,	esr(config-zone-rule)# match protocol <protocol-type>	<protocol-type> - tcp - ESR ESR.
21	TCP/UDP-, ().	esr(config-zone-rule)# match [not] destination-port <obj-group-name>	<obj-group-name> - , 12
22	.	esr(config-zone-rule)# enable	



Firewall ESR , Self.

HTTP-

URL .

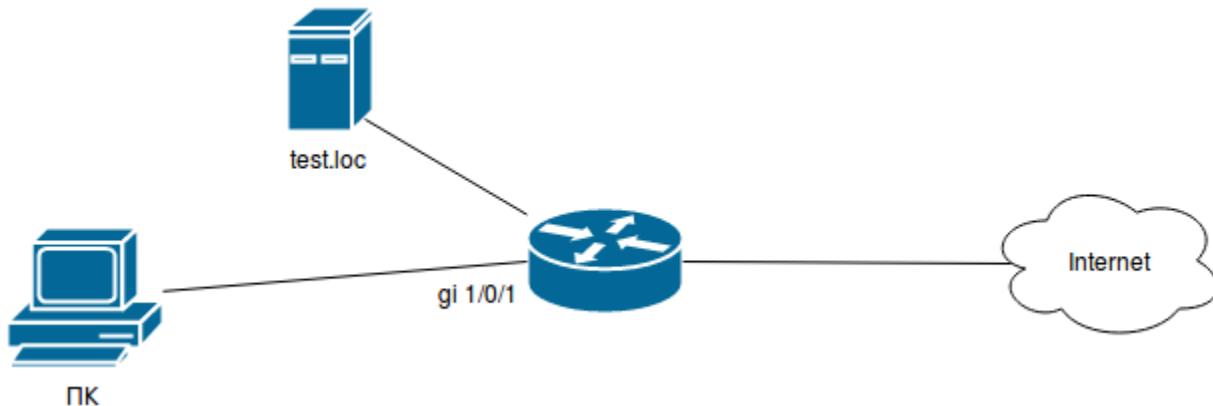

URL, . - URL:

```

esr# configure
esr(config)# object-group url test1
esr(config-object-group-url)# url http://speedtest.net/
esr(config-object-group-url)# url http://www.speedtest.net/
esr(config-object-group-url)# url https://speedtest.net/
esr(config-object-group-url)# url https://www.speedtest.net/
esr(config-object-group-url)# exit

```

:

```

esr(config)# ip http profile list1
esr(config-profile)# default action permit
esr(config-profile)# urls local test1 action redirect redirect-url http://test.loc
esr(config-profile)# exit

```

'list':

```

esr(config)# interface gi 1/0/1
esr(config-if)# ip http proxy list1
esr(config-if)# ip https proxy list1

```

Firewall, :

ESR-20 4 CPU.

http proxy 3128 3131

https proxy 3132 3135

-:

```

esr(config)# object-group service proxy
esr(config-object-group-service)# port-range 3128-3135
esr(config-object-group-service)# exit

```

:

```

esr(config)# security zone-pair LAN self
esr(config-zone-pair)# rule 50
esr(config-zone-pair-rule)# action permit
esr(config-zone-pair-rule)# match protocol tcp
esr(config-zone-pair-rule)# match destination-port proxy
esr(config-zone-pair-rule)# enable
esr(config-zone-pair-rule)# exit
esr(config-zone-pair)# exit

```

NTP

NTP (. Network Time Protocol —) — IP , UDP,

1	NTP.	esr(config)# ntp enable	
2	IP NTP , NTP .	esr(config)# ntp { server peer } { <IP> }	<IP> – IP- (), AAA.BBB.CCC.DDD, [0..255].
3	().	esr(config-ntp)# key <ID>	<ID> – , [1..255].
4	NTP- () .	esr(config-ntp)# maxpoll <INTERVAL>	<INTERVAL> – . , , , [10..17]. : 10 ($2^{10} = 1024$ 17 4).

5	NTP- () .	esr(config-ntp)# minpoll <INTERVAL>	<INTERVAL> – , , [4..6]. : 6 ($2^6 = 64$ 1 4).
6	NTP- () .	esr(config-ntp)# prefer	
7	IP-, ntp- () .	esr(config)# ntp access-addresses <NAME>	<NAME> – IP-, 31 .
8	() .	esr(config)# ntp authentication trusted-key <ID>	<ID> – .
9	() .	esr(config)# ntp authentication key-chain <WORD>	<WORD> - .
10	NTP () .	esr(config)# ntp authentication enable	
11	NTP- VRF () .	esr(config)# ntp broadcast-client enable	
12	DSCP IP- NTP- () .	esr(config)# ntp dscp <DSCP>	<DSCP> – DSCP, [0..63] : 46
13	query-only, NTP IP- () .	esr(config)# ntp object-group query-only <NAME>	<NAME> – IP-, 31 .
14	serve-only, NTP IP- () .	esr(config)# ntp object-group serve-only <NAME>	<NAME> – IP-, 31 .
15	source-IP- NTP-peer () .	esr(config)# ntp source address <ADDR>	<ADDR> – IP-, AAA.BBB.CCC.DDD, [0..255].
16	() .	esr# set date <TIME> [<DAY> <MONTH> [<YEAR>]]	<TIME> – , HH:MM:SS, : HH – , [0..23]; MM – , [0 .. 59]; SS – , [0 .. 59]. <DAY> – , [1..31]; <MONTH> – , [January/February/March/April/May/June/July/August/September/October /November/December]; <YEAR> – , [2001..2037].

:
NTP .

IP- esr - 192.168.52.8,

IP- NTP – 192.168.52.41.



:



```
:  
•     gi1/0/1;  
• IP- gi1/0/1, IP- NTP-.  
  
:  
  
security zone untrust  
exit  
object-group service NTP  
    port-range 123  
exit  
interface gigabitethernet 1/0/1  
    security-zone untrust  
    ip address 192.168.52.8/24  
exit  
security zone-pair untrust self  
rule 10  
    action permit  
    match protocol udp  
    match destination-port NTP  
    enable  
exit  
exit
```

:

:

```
esr(config)# ntp enable
```

NTP-:

```
esr-(config)# ntp server 192.168.52.41
```

NTP- ():

```
esr-1000(config-ntp)# prefer
```

NTP-:

```
esr(config-ntp)# minpoll 4  
esr(config-ntp)# end  
esr# commit  
esr# confirm
```

NTP:

```
esr# show ntp configuration
```

NTP- ():

```
esr# show ntp peers
```