

LTP-X. Quick Configuration Manual 3.38.2

LTP-8X, LTP-4X optical line terminals

Application to the user manual
LTP-X quick configuration manual

Firmware version 3.38.2 (20.05.2020)

- 1 [Annotation](#)
- 2 [Safety rules and Installation procedure](#)
 - 2.1 [Safety requirements](#)
 - 2.2 [Terminal installation](#)
 - 2.2.1 [Support brackets mounting](#)
 - 2.2.2 [Terminal rack installation](#)
 - 2.2.3 [Power module installation](#)
 - 2.2.4 [Connecting to power supply](#)
- 3 [Connecting to the Command Line Interface \(CLI\)](#)
 - 3.1 [Connecting via telnet/ssh](#)
 - 3.2 [Connecting via serial port](#)
 - 3.3 [Changing the user password](#)
- 4 [LTP-X network parameters configuration](#)
- 5 [OLT LTP-X firmware update](#)
- 6 [SNMP, SYSLOG, NTP, IP Source GUARD services configuration](#)
 - 6.1 [SNMP configuration](#)
 - 6.2 [SYSLOG configuration](#)
 - 6.3 [NTP configuration](#)
 - 6.4 [IP Source Guard configuration](#)
 - 6.5 [DHCP_RA \(broadcast – unicast relay\) configuration](#)
- 7 [SWITCH configuration](#)
- 8 [IGMP configuration](#)
- 9 [CROSS_CONNECT, PORTS profiles configuration for ONT](#)
- 10 [PPPoE Intermedia Agent, DHCP Relay Agent - OLT profiles configuration](#)
 - 10.1 [PPPoE Intermedia Agent configuration](#)
 - 10.2 [DHCP Relay Agent configuration](#)
- 11 [Adding and configuring ONT](#)
- 12 [ONT configuration template](#)
- 13 [Configuration of LTP for operation with the internal ACS server](#)
- 14 [Configuration of ACS profile for ONT](#)
- 15 [Adding and configuring a subscriber via ACS](#)
- 16 [ONT firmware update via ACS](#)
- 17 [APPENDIX A. Example of ACS profile for NTP-RG14XXG-W/NTU-RG14XXG-W](#)
- 18 [APPENDIX B. Example of setting private parameters for NTP-RG14XXG/NTP-RG14XXG-W](#)
- 19 [APPENDIX C. RS-232 null-modem cable pin designation](#)
- 20 [Appendix D. ONT NTU-1 configuration](#)
- 21 [APPENDIX E. ONT SFP-ONU configuration](#)
- 22 [APPENDIX F. ONT/GPON interface status table](#)

Notes and warnings



Notes contain important information, tips, or recommendations on device operation and setup.



Warnings are used to inform the user about harmful situations for the device and the user alike, which could cause malfunction or data loss.

Annotation

This manual specifies the following:

Safety rules and Installation procedure

- connection to the OLT LTP-X (hereinafter – the device) command line interface;
- OLT network parameters configuration;
- VLAN configuration to provide different services on switch;
- IGMP configuration on switch;
- creation and modification of ONT profiles: Cross-connect, Ports, Management;
- creation and modification of OLT profiles: pppoe-ia, dhcp-ra;
- addition of ONT subscriber devices.

The following scheme is given as an example.

3. Prior to turning the device on, ensure that all cables are undamaged and securely connected.
4. Make sure the device is off, when installing or removing the case.
5. Replacement of power modules is carried out:
 - for LTP-X, LTP-X rev.B only when the power is off;
 - for LTP-X rev.C without turning off the power.
6. You can install or remove SFP transceivers. This operation does not require the terminal to be turned off.

Terminal installation

Check the device for visible mechanical damage before installing and turning it on. In case of any damage, stop the installation, fill in a corresponding document and contact your supplier. If the terminal was exposed to low temperatures for a long time before installation, leave it for 2 hours at ambient temperature prior to operation. If the device was exposed to high humidity for a long time, leave it for at least 12 hours in normal conditions prior to turning it on.

Support brackets mounting

The delivery package includes support brackets for rack installation and mounting screws to fix the terminal case on the brackets. To install the support brackets:

- **Step 1.** Align four mounting holes in the support bracket with the corresponding holes in the side panel of the device.
- **Step 2.** Use a screwdriver to screw the support bracket to the case.
- **Step 3.** Repeat steps 1 and 2 for the second support bracket.

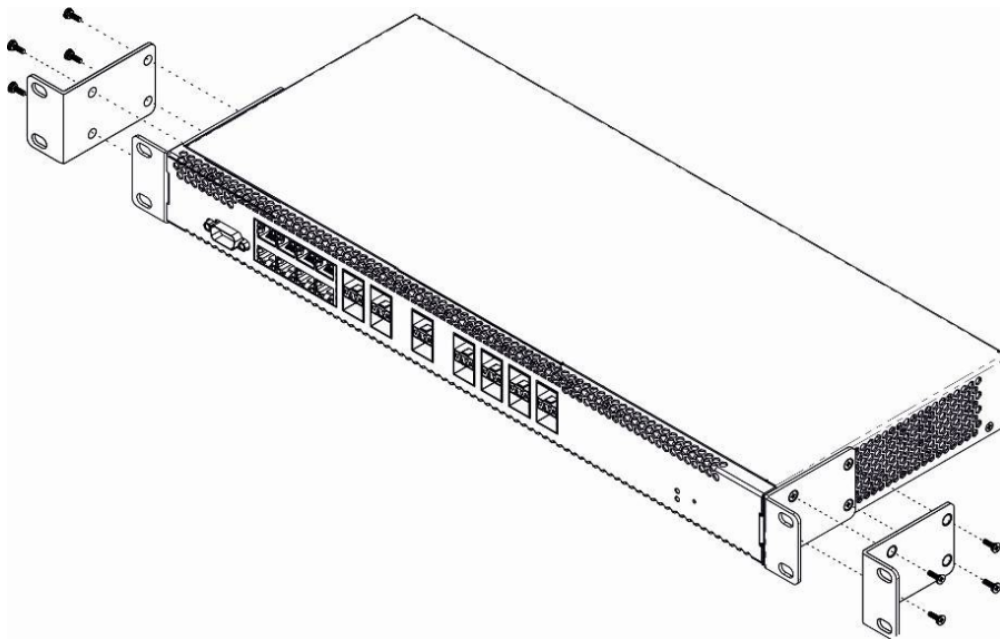


Figure 2 – Support brackets mounting

Terminal rack installation

To install the terminal to the rack:

- **Step 1.** Attach the terminal to the vertical guides of the rack.
- **Step 2.** Align mounting holes in the support bracket with the corresponding holes in the rack guides. Use the holes of the same level on both sides of the guides to ensure the device horizontal installation.
- **Step 3.** Use a screwdriver to screw the terminal to the rack.

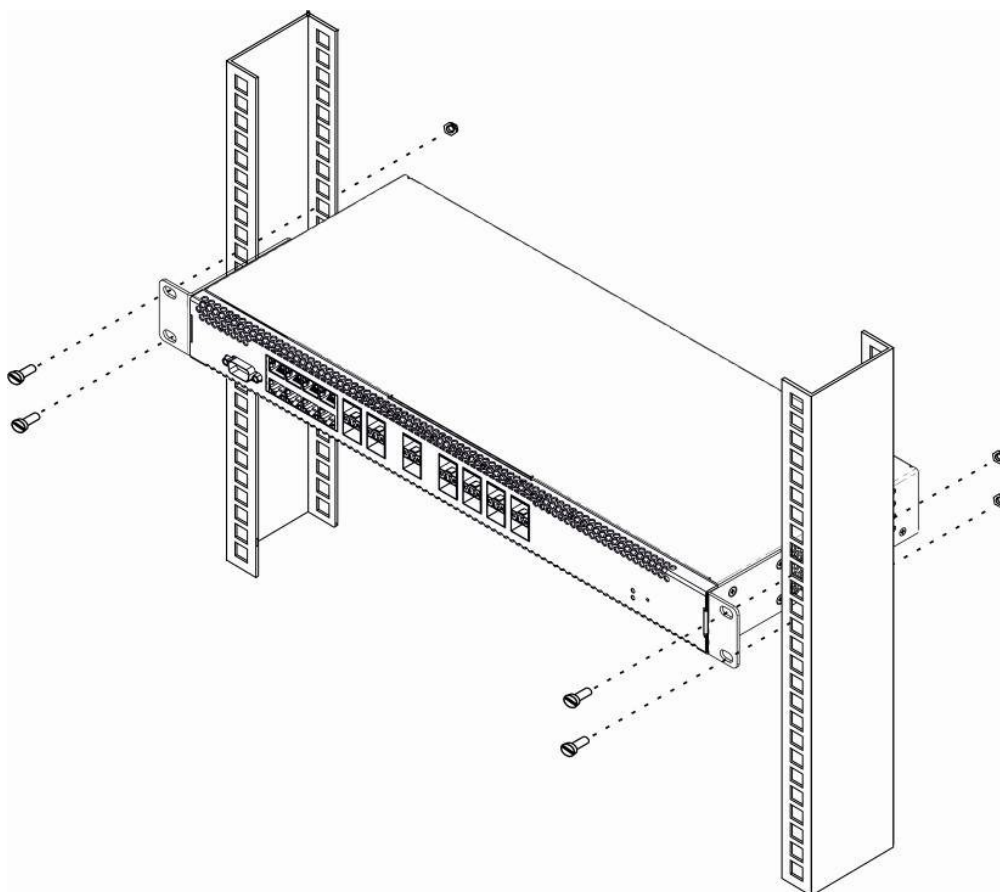


Figure 3 – Device rack installation

The terminal is horizontally ventilated. The side panels have air vents. Do not block the air vents to avoid components overheating and subsequent terminal malfunction.



To avoid overheating and provide necessary ventilation of the terminal, sufficient space should be provided above and below the terminal, not less than 10 cm.

Power module installation

Depending on power supply requirements, terminals can be supplemented with either an AC power module, 220 V, 50 Hz, or a DC power supply module, 48 V. The installation location for the power module for LTP-X, LTP-X rev.B is shown in Figure 4.

The installation locations for the power modules for LTP-X rev.C are shown in Figure 5.

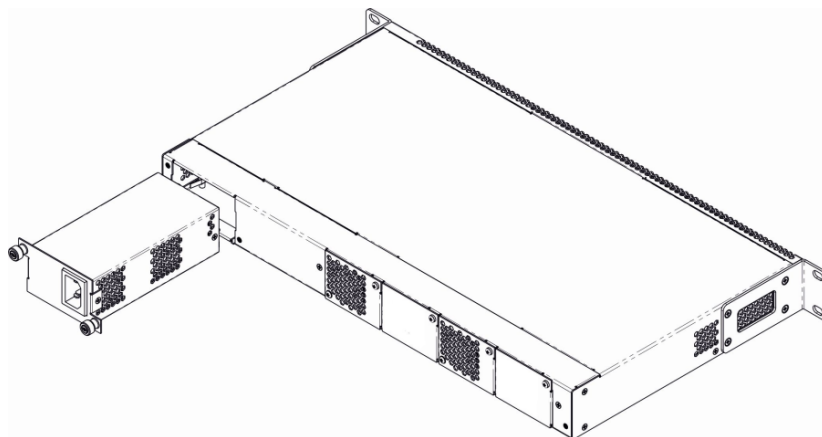


Figure 4 – Power module installation for LTP-X, LTP-X rev.B

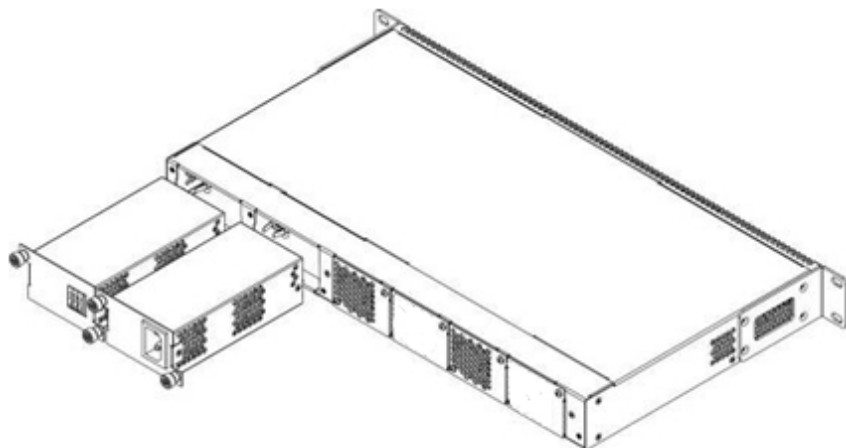


Figure 5 – Power module installation for LTP-X rev.C

To install a power module:

- **Step 1.** Install the power module into the socket shown in figure above;
- **Step 2.** Screw the power module to the case;
- **Step 3.** Turn the power on.

Connecting to power supply

- **Step 1.** Mount the device. In case of installation to a 19" form-factor rack, mount the support brackets from the delivery package to the rack.
- **Step 2.** Ground the case of the device. This should be done prior to connecting the device to the power supply. An insulated multiconductor wire should be used for earthing. The device grounding and the earthing wire section should comply with Electric Installation Code. The earth bonding point is located at the right bottom corner of the rear panel.
- **Step 3.** If you intend to connect a PC or another device to the switch console port, the device must be properly grounded as well.
- **Step 4.** Connect the power supply cable to the device.
- **Step 5.** Turn the device on and check the front panel LEDs to make sure the terminal is in normal operating conditions.

Connecting to the Command Line Interface (CLI)

Connecting via telnet/ssh

Connect the network data cable to one of the 'GE Port' or 'Combo GE' of LTP-X. The following factory settings are used for SSH/Telnet connection:

- **Default IP: 192.168.1.2**
- **Default mask: 255.255.255.0**
- **Default GW: 0.0.0.0**
- **Login: admin**
- **Password: password**

```
login: admin
Password: password
```



For security reasons, it is recommended to change the factory password when connecting for the first time (see Section [Changing the user password](#)).

If the device does not connect with the factory IP address, you should connect to it via the COM port using the terminal program and check the network settings (see [Connecting via serial port](#)).

Connecting via serial port

A null modem cable is used for connection. The null modem cable pin designation is given in Appendix C. RS-232 null-modem cable pin designation.

To connect via the serial port, the following settings must be set:

- **Bit rate: 115200 bps;**
- **Data bits: 8 bits;**
- **Parity: no;**
- **Stop bits: 1;**
- **Flow control: no;**
- **Login: admin;**
- **Password: password.**



For security reasons, it is recommended to change the factory password when connecting for the first time (see Section [Changing the user password](#)).

Check the network settings with the **show management** command.

```
Check the network settings
LTP-X# show management
Network:
  Hostname:                'LTP-X'
  Ipaddr:                  192.168.1.2
  Netmask:                 255.255.255.0
  Vlan management:        1
  Gateway:                 0.0.0.0
  Vlan prio:              7
  Dscp:                   63
```

Changing the user password

```
Switch to the configuration mode
LTP-X# configure terminal

Show created users
LTP-X(config)# do show users config

Set the new password for admin
LTP-X(config)# user admin password XXXX

Set the new password for root
LTP-X(config)# user root password XXXX

Apply the configuration
LTP-X(config)# do commit

Save the configuration
LTP-X(config)# do save
```

LTP-X network parameters configuration

For remote management of LTP-X, you should set network parameters of the device according to the settings of the network that you intend to use. Changing the network parameters of the device is recommended when connecting to the CLI interface through the serial interface.

```
Switch to the configuration mode
LTP-X# configure terminal
```

Set the required network settings, e.g. IP=192.168.205.105, Mask=255.255.255.0, Gateway=192.168.205.230, VLAN=4000.

```
LTP-X(config)# management ip 192.168.205.105
LTP-X(config)# management mask 255.255.255.0
LTP-X(config)# management gateway 192.168.205.230
LTP-X(config)# management vid 4000
LTP-X(config)# exit
```

Check the network settings

LTP-X# show management

```
Network:
  Hostname:                'LTP-X'
  Ipaddr:                  192.168.205.105
  Netmask:                 255.255.255.0
  Vlan management:        4000
  Gateway:                 192.168.205.230
  Vlan prio:               7
  Dscp:                   63
  Additional vlan:        <list is empty>
```

The new network settings will be applied after applying/saving the configuration with the commit, save commands without rebooting the device:

Apply the configuration

LTP-X# commit

Save the configuration

LTP-X# save

If VLAN will be used for control (in this example, VID=4000), you should add it to the SWITCH configuration:

Switch to the SWITCH mode

LTP-X# switch

SWITCH configuration mode

LTP-X(switch)# configure terminal

Add the required VLAN

LTP-X(switch)(config)# vlan 4000

Receive traffic in VLAN from front-port 0

LTP-X(switch)(config-vlan)# tagged front-port 0

LTP-X(switch)(config-vlan)# exit

Apply the configuration

LTP-X(switch)(config)# commit

LTP-X(switch)(config)# exit

LTP-X(switch)# exit

Save the configuration

LTP-X# save

OLT LTP-X firmware update

For proper operation of LTP-X, it is recommended to update the firmware. You may consult the vendor on the relevance of the firmware version:

e-mail: techsupp@eltex.nsk.ru

You must upload the firmware file to the TFTP server (as an example, software version 3.32.0.2473).

Next, upload this file to LTP-X using the following command:


```

Specify the firmware file name and TFTP server address
LTP-X# copy tftp://192.168.205.250/ltp-8x-revc-3.32.0.2473.fw.bin fs://firmware
Check free memory...ok
Downloading system firmware..
.....
.....
.....
System firmware successfully downloaded
Updating system firmware..
Current board version:      6
Current firmware version:  3.26.1.1347
New firmware version:      3.32.0.2473
Update device mtd7
Erase flash...
Done.
Write data...
Done.
Done.
Success
Update device mtd5
Erase flash...
Done.
Write data...
Done.
Done.
Success
System firmware successfully updated
LTP-8X#

```

Reboot the device using the **reboot** command:

```

Reboot the device
LTP-X# reboot
Do you really want to reboot the system now? (y/n)  y

```

After LTP-X loading, the firmware version can be found by the command **show version**:

```

LTP-X# show version
Eltex LTP-8X:rev.C software version 3.32.0 build 2473 on 23.08.2018 17:09

```

SNMP, SYSLOG, NTP, IP Source GUARD services configuration

SNMP configuration

SNMP – SNMP is used for monitoring and management of network devices.

```

Switch to the configuration mode
LTP-X# configure terminal

Enable SNMP
LTP-X(config)# ip snmp enable

Specify v2 version and EMS server address
LTP-X(config)# ip snmp traps 192.168.205.200 type v2

Check the SNMP parameters
LTP-X(config)# do show ip snmp
  Snmp:
    Enabled: true
    Access control: false
    Allow ip: <list is empty>
    Traps [0]:
      Type: v2
      Ipaddr: 192.168.205.200
    Version: v2
    Community read-only [0]: 'QwYva0dvS3N'
    Community read-only [1]: 'QwYva0dvS3N'
    Community read-only [2]: 'QwYva0dvS3N'
    Community read-write [0]: 'LQtfx9v3m9+qA=='
    Community read-write [1]: 'LQtfx9v3m9+qA=='
    Community read-write [2]: 'LQtfx9v3m9+qA=='
    Trap community: '9qXUEDwUMAg'
    Location: 'unknown'
    Contact: 'admin'
    Alias: <for showing use separate command>
    EngineID: 0xEF20CAF8234E12401216B17D85
    Users: <for showing use separate command>

Apply the configuration
LTP-X(config)# do commit

Save the configuration
LTP-X(config)# do save

```

SYSLOG configuration

Syslog is a protocol designed for transmission of system event messages and error notifications to remote servers.

```

Switch to the configuration mode
LTP-X# configure terminal

Specify the syslog server address
LTP-X(config)# logging remote 192.168.205.200

Check the SYSLOG settings
LTP-X(config)# do show logging
  Log:
    Remote syslog:          192.168.205.200
    Port:                   514
    Size:                   16384
    Save logs between boots: false
    Log input commands:     false
    Destinations:
      System:               notice
      Console:              critical
      Remote shells:        critical
      File:                 notice

Apply the configuration
LTP-X(config)# do commit

Save the configuration
LTP-X(config)# do save

```

NTP configuration

NTP – network time synchronization protocol, allows you to synchronize the time of a network device with a server.

```

Switch to the configuration mode
LTP-X# configure terminal

Enable NTP
LTP-X(config)# ip ntp enable

Specify the NTP server address
LTP-X(config)# ip ntp ip 192.168.205.200

Specify the timezone
LTP-X(config)# ip ntp timezone 7

```

```

Check the NTP settings
LTP-X(config)# do show ip ntp
  Ntp:
    Enabled:                true
    Ntpserver:              192.168.205.200
    Interval:               3600
    Timezone:               7
    Daylightsaving:         false

Apply the configuration
LTP-X(config)# do commit

Save the configuration
LTP-X(config)# do save

```

IP Source Guard configuration

Starting with version 3.26.0, OLT supports the IP Source Guard functionality, which allows you to limit the unauthorized use of IP addresses on the network. The verification is carried out by binding the IP address to the source MAC address for a specific service on a specific ONT.

```
Switch to the configuration mode
LTP-X# configure terminal

Enable the Source Guard
LTP-X(config)# ip source-guard enable

Specify the mode
LTP-X(config)# ip source-guard mode dynamic
```

To add static matches, use the following command:

```
LTP-X(config)# ip source-guard bind ip <IP> mac <MAC> interface-ont <ONT> service <NUM>
```

Where:

IP– IP address of client equipment in the ... format;

MAC– MAC address of client equipment in the :XX:XX:XX:XX:XX format;

ONT– ONT identifier in the X/Y format (Channel ID/ONT ID);

NUM– service number on the ONT, which will transfer traffic from the specified addresses.

DHCP_RA (broadcast – unicast relay) configuration

To reduce the broadcast traffic and avoid responses from illegal DHCP-servers, unicast messages can be configured to interact with the specified DHCP Relay Agent. Relay Agent can be individually started for each separate VLAN. The service allows processing only for the packets, which have only one 802.1q tag.

1. Create an L3 interface by specifying the IP address of the VLAN the service is provided for. If the address of the DHCP server is in the same network as the management interface, skip Step 3. If the DHCP server is in the VLAN, which is specified in cross-connect, the IP address of the interface being created should be in the same network as the DHCP server, and you should skip Step 3.

```
Add the required VLAN
LTP-X(switch)(config)# vlan 2000

Specify the IP address for the VLAN 2000
LTP-X(switch)(config-vlan)# ip address 10.10.10.1/32
```

2. Specify the DHCP server address.

```
Specify the DHCP server address
LTP-X(switch)(config-vlan)# ip dhcp relay 192.168.56.1
```

3. Create an L3 interface by specifying the IP address of the VLAN, which is used for switching in the network where the DHCP server is located.

```
Add the VLAN
LTP-X(switch)(config)# vlan 1209
LTP-X(switch)(config-vlan)# ip address 192.168.209.240/24
```

4. If the address of the DHCP server is located after the router available after the specified L3 interface, configure a static route.

```
LTP-X(config)# ip route prefix 192.168.56.0 mask 24 gateway 192.168.209.5
LTP-X(switch)(config-vlan)# ip address 192.168.209.240/24
```

SWITCH configuration

```

Switch to the SWITCH mode
LTP-X# switch

SWITCH configuration mode
LTP-X(switch)# configure

Add all required VLANs
LTP-X(switch)(config)# vlan 2149,2349,30,3149,4094

Pass tagged to all pon ports*
LTP-X(switch)(config-vlan-range)# tagged pon-port 0 - 7

Receive traffic in VLAN from front-port 0
LTP-X(switch)(config-vlan-range)# tagged front-port 0

Switch to the configuration mode
LTP-X(switch)(config-vlan-range)# exit

Apply the configuration
LTP-X(switch)(config)# commit
LTP-X(switch)(config)# exit
LTP-X(switch)# exit

Save the configuration
LTP-X# save

```

** Command is applicable for:*

LTP-8 rev.B HW_revision 2v.

LTP-8 rev. HW_revision 1v.

For LTP-8X HW_revision 1vX version, the following command applies: **tagged pon-port 0 – 1**.

For LTP-4X rev.B, LTP-4X rev.C, the following command applies: **tagged pon-port 0 –3**

The hardware version of LTP-X can be found using the command:

```

LTP-8X# show system environment
System information:
  CPU load average (1m, 5m, 15m):   0.83  2.35  1.48
  Free RAM/Total RAM (Mbytes):      279/495
  Temperature (sensor1/sensor2):    35C/48C
  Reset button:                     enabled

  Fan configured speed, %:           auto
  Fan minimum speed, %:              15
  Fan speed levels, %:               16 27 39 51 64 76 88 100
  Fan state (fan0/fan1):             6300rpm 6450rpm
  PLD FW version:                   14

  TYPE:                             LTP-8X-rev.C
  HW_revision:                      1v1
  SN:                               GP2B000024
  MAC:                              A8:F9:4B:8B:50:00

Power supply information:
Module 1: PM150 220/12 1vX
  Type: Alternate current(AC)
  Intact: 1
Module 2: PM150 220/12 1vX
  Type: Alternate current(AC)
  Intact: 1

```



If you do not save the settings, after restarting, the device will return to the last saved configuration.

IGMP configuration

```
Enable IGMP SNOOPING globally
LTP-X(switch)(config)# ip igmp snooping

VLAN 30 configuration mode
LTP-X(switch)(config)# vlan 30

Enable IGMP SNOOPING in VLAN multicast
LTP-X(switch)(config-vlan)# ip igmp snooping enable

Enable IGMP proxying
LTP-X(switch)(config-vlan)# ip igmp snooping querier enable
LTP-X(switch)(config-vlan)# exit

Ebable IGMP-report proxying
LTP-X(switch)(config)# ip igmp proxy report enable

Specify the range of IGMP addresses for proxying from VLAN unicast to multicast
LTP-X(switch)(config)# ip igmp proxy report range 224.0.0.1 239.255.255.255 from 2349 to 30

Apply the configuration
LTP-X(switch)(config)# commit
LTP-X(switch)(config)# exit
LTP-X(switch)# exit

Save the configuration
LTP-X# save
```

CROSS_CONNECT, PORTS profiles configuration for ONT

```
Switch to the configuration mode
LTP-X# configure terminal

Select datapath model 2
LTP-X(config)# gpon olt model 2

Create and switch to the Cross-Connect profile for ONT Internet service
LTP-X(config)# profile cross-connect INTERNET
LTP-X(config-cross-connect)("INTERNET")#

Specify the Internet service VLAN
LTP-X(config-cross-connect)("INTERNET")# outer vid 2149

Specify internal VLAN of the Internet service in ONT
LTP-X(config-cross-connect)("INTERNET")# user vid 10
LTP-X(config-cross-connect)("INTERNET")# exit

Create and switch to the Cross-Connect profile for ONT SIP VoIP service
LTP-X(config)# profile cross-connect VOIP

Specify the service VLAN of the VoIP service
LTP-X(config-cross-connect)("VOIP")# outer vid 3149

Specify internal VLAN of the VoIP service in ONT
LTP-X(config-cross-connect)("VOIP")# user vid 12
LTP-X(config-cross-connect)("VOIP")# exit

Create and switch to the Cross-Connect profile for the multicast service
LTP-X(config)# profile cross-connect MC_IPTV

Specify the service VLAN of the multicast service
LTP-X(config-cross-connect)(" MC_IPTV ")# outer vid 30

Specify internal VLAN of the multicast service in ONT
LTP-X(config-cross-connect)(" MC_IPTV ")# user vid 30
```

```

Specify the multicast service type
LTP-X(config-cross-connect)(" MC_IPTV ")# type multicast
LTP-X(config-cross-connect)(" MC_IPTV ")# exit

Create and switch to the Cross-Connect profile for the ONT UC_IPTV service
LTP-X(config)# profile cross-connect UC_IPTV

Specify the service VLAN of the STB unicast service
LTP-X(config-cross-connect)(" UC_IPTV ")# outer vid 2349

Specify internal VLAN of the STB unicast service in ONT
LTP-X(config-cross-connect)(" UC_IPTV ")# user vid 11
LTP-X(config-cross-connect)(" UC_IPTV ")# exit

Create and switch to the Cross-Connect profile for the ONT management service
LTP-X(config)# profile cross-connect ACS

Specify the service VLAN of the management service
LTP-X(config-cross-connect)("ACS")# outer vid 4094

Specify internal VLAN of the management service in ONT
LTP-X(config-cross-connect)("ACS")# user vid untagged

Specify the management service type
LTP-X(config-cross-connect)("ACS")# type management
LTP-X(config-cross-connect)("ACS")# exit

Create and switch to the multicast profile
LTP-X(config)# profile ports NTP-RG

Enable IGMP Proxy on the NTP VoIP-interface
LTP-X(config-ports)("NTP-RG")# veip multicast

Configure mapping of IGMP traffic in the 30th VLAN
LTP-X(config-ports)("NTP-RG")# veip upstream vid 30

Configure mapping of multicast in the 30th VLAN
LTP-X(config-ports)(" NTP-RG ")# veip downstream vid 30

Configure VLAN multicast, which includes the range of the following groups
LTP-X(config-ports)(" NTP-RG ")# igmp multicast dynamic-entry 0 vid 30

Configure the range of multicast groups
LTP-X(config-ports)(" NTP-RG ")# igmp multicast dynamic-entry 0 group 224.0.0.1 239.255.255.255

Apply the configuration
LTP-X(config-ports)(" NTP-RG ")# do commit

Save the configuration
LTP-X(config-ports)(" NTP-RG ")# do save

```



If you do not save the settings, after restarting, the device will return to the last saved configuration.

PPPoE Intermedia Agent, DHCP Relay Agent - OLT profiles configuration

PPPoE Intermedia Agent configuration

```

Switch to the configuration mode
LTP-X# configure terminal

Create and switch to the profile configuration
LTP-X(config)# profile pppoe-ia 1

Enable Agent
LTP-X(config-pppoe-ia)("1")# enable

Set the maximum number of PPPoE sessions for a profile
LTP-X(config-pppoe-ia)("1")# sessions-limit 8094

Set the maximum number of PPPoE sessions for one ONT
LTP-X(config-pppoe-ia)("1")# sessions-limit per-user 4

Set the circuit_id format
LTP-X(config-pppoe-ia)("1")# format circuit-id %HOSTNAME%%ONTID%

Set the remote_id format
LTP-X(config-pppoe-ia)("1")# format remote-id %HOSTNAME%%ONTID%

Apply the configuration
LTP-X(config-pppoe-ia)("1")# do commit

Save the configuration
LTP-X(config-pppoe-ia)("1")# do save
LTP-X(config-pppoe-ia)("1")# exit

Assign pppoe-ia 1 profile to OLT
LTP-X(config)# gpon olt profile pppoe-ia 1

Apply the configuration
LTP-X(config)# do commit

Save the configuration
LTP-X(config) # do save

```



To apply the pppoe-ia profile settings, it is required to reconfigure the OLT chips, if the 'Auto reconfigure GPON-port' parameter of the automatic GPON port reconfiguration is not set in the OLT configuration: true

Reconfiguration is performed by the command:

```
LTP-X# reconfigure olt all
```

For LTP-4X:

```
LTP-X# reconfigure olt
```

DHCP Relay Agent configuration


```

Switch to the configuration mode
LTP-X# configure terminal

Create and switch to the DHCP profile configuration menu
LTP-X(config)# profile dhcp-ra 1

Enable Agent
LTP-X(config-dhcp-ra)("1")# enable

Send HOSTNAME LTP-X and id ONT in information about which port the request for DHCP relay came from
LTP-X(config-dhcp-ra)("1")# overwrite-option82 circuit-id %HOSTNAME%%ONTID%

Transmit the HOSTNAME LTP-X and id ONT in the identifier of the DHCP relay itself
LTP-X(config-dhcp-ra)("1")# overwrite-option82 remote-id %HOSTNAME%%ONTID%

Apply the configuration
LTP-X(config-dhcp-ra)("1")# do commit

Save the configuration
LTP-X(config-dhcp-ra)("1")# do save

Assign the required configuration profile globally
LTP-X(config)# gpon olt profile dhcp-ra 1

Assign the profile 1 to the VLAN 3149
LTP-X(config)# gpon olt profile dhcp-ra 1 vid 3149

Apply the configuration
LTP-X(config)# do commit

Save the configuration
LTP-X(config)# do save

Show OLT configuration
LTP-X# show gpon olt configuration
      Block duplicated mac:                enabled
      Disable rogue ONT:                  disabled
      Ont block time:                     5
      Dhcp-ra shaper:                     100
      Profile pppoe-ia:                   1
      OLT Profile PPPoE Intermediate Agent 1
      Profile dhcp-ra:                    1
      OLT Profile DHCP Relay Agent        1
      Profile dhcpv6-ra:                  dhcpv6-ra-00      OLT Profile DHCP Relay Agent 0
      Profile dhcp-ra per VLAN 3149 [0]:
          Profile:                         1
          OLT Profile DHCP Relay Agent 1
      Profile dhcpv6-ra per VLAN:          <list is empty>
      Datapath:
          Model:                           model2
          Broadcast gem port:              4095
          Multicast gem port:              4094

```

```

Encryption:
  Enable:                                false
  Key update interval:                   1
  Unactivated timeout:                   60
  ONT authentication mode:               both
  Auto reconfigure ONT:                  true
  Auto reconfigure GPON-port:            true
  Auto reconfigure OLT:                  true
  PLOAM password in alarm:               false
  Auto-activation ONT:                   false
      Default template:                   unassigned

```

With this configuration, for all VLANs except 3149, the DHCP Relay Agent profile 0 will be used.
To apply the DHCP-RA profile settings, it is required to reconfigure the OLT chips, if the 'Auto reconfigure GPON-port' parameter of the automatic GPON port reconfiguration is not set in the OLT configuration: true

Reconfiguration is performed by the command:

```
LTP-X# reconfigure olt all
```

For LTP-4X:

```
LTP-X# reconfigure olt
```

Adding and configuring ONT

It is necessary to add ONT 454C54580800F6B1 to the configuration, to tree 0 ONT ID 1 and assign all the required profiles to it to provide services.

View connected but not added ONTs

```
LTP-X# show interface ont 0-7 unactivated
```

```
-----  
GPON-port 0 ONT unactivated list  
-----
```

##	Serial	ONT ID	GPON-port	Status	RSSI[dBm]	Version	EquipmentID	Description
1	454C54580800F6B1	n/a	0	UNACTIVATED	n/a	n/a	n/a	n/a

Switch to the configuration mode

```
LTP-X# configure terminal
```

Switch to the tree 0 ONT ID 1

```
LTP-X(config)# interface ont 0/1
```

Assign the required ONT to this position

```
LTP-X(config)(if-ont-0/1)# serial 454C54580800F6B1
```

Assign the ports NTP-RG profile

```
LTP-X(config)(if-ont-0/1)# profile ports NTP-RG
```

Assign the cross-connect INTERNET profile

```
LTP-X(config)(if-ont-0/1)# service 0 profile cross-connect INTERNET
```

Assign the cross-connect VOIP profile

```
LTP-X(config)(if-ont-0/1)# service 1 profile cross-connect VOIP
```

Assign the cross-connect MC_IPTV profile

```
LTP-X(config)(if-ont-0/1)# service 2 profile cross-connect MC_IPTV
```

Assign the cross-connect UC_IPTV profile

```
LTP-X(config)(if-ont-0/1)# service 3 profile cross-connect UC_IPTV
```

Assign the cross-connect ACS profile

```
LTP-X(config)(if-ont-0/1)# service 4 profile cross-connect ACS
```

Assign default dba profile 'dba 0' to all services used:

```
LTP-X(config)(if-ont-0/1)# service 0 profile dba dba-00
```

```
LTP-X(config)(if-ont-0/1)# service 1 profile dba dba-00
```

```
LTP-X(config)(if-ont-0/1)# service 2 profile dba dba-00
```

```
LTP-X(config)(if-ont-0/1)# service 3 profile dba dba-00
```

```
LTP-X(config)(if-ont-0/1)# service 4 profile dba dba-00
```

Apply the configuration

```
LTP-X(config)(if-ont-0/1)# do commit
```

Save the configuration

```
LTP-X(config)(if-ont-0/1)# do save
```

After executing the commands in section 10 of this manual, it is recommended to reset the terminal to factory settings:

```
LTP-X# send omci restore interface ont 0/1
```

After rebooting the device, it is necessary to check all services.

```
View a list of connected ONTs added to the configuration
LTP-X# show interface ont 0-7 online
-----
GPON-port 0 ONT online list
-----

## Serial          ONT ID  GPON-port  Status  RSSI[dBm]  Version  EquipmentID  Description
1  454C54580800F6B1  1       0        OK      -25.38     3.22.0.1493  NTU-RG

Total ONT count: 1
```

ONT configuration template

To simplify the configuration of the same type of ONT, you can use a pre-prepared configuration template 'Template', which will subsequently be assigned to the ONT.

```

Switch to the configuration mode
LTP-X# configure terminal

Create and switch to the TP template
LTP-X(config)# template TP

Assign ports profile for this template
LTP-X(ont-template)("TP")# profile ports NTP-RG

Assign cross-connect INTERNET profile to service 0 of TP template
LTP-X(ont-template)("TP")# service 0 profile cross-connect  INTERNET

Assign cross-connect VOIP profile to service 1 of TP template
LTP-X(ont-template)("TP")# service 1 profile cross-connect  VOIP

Assign cross-connect MC_IPTV profile to service 2 of TP template
LTP-X(ont-template)("TP")# service 2 profile cross-connect  MC_IPTV

Assign cross-connect UC_IPTV profile to service 3 of TP template
LTP-X(ont-template)("TP")# service 3 profile cross-connect  UC_IPTV

Assign cross-connect ACS profile to service 4 of TP template
LTP-X(ont-template)("TP")# service 4 profile cross-connect  ACS

Assign default dba profile 'dba-00' to all services used:
LTP-X(ont-template)("TP")# service 0 profile dba dba-00
LTP-X(ont-template)("TP")# service 1 profile dba dba-00
LTP-X(ont-template)("TP")# service 2 profile dba dba-00
LTP-X(ont-template)("TP")# service 3 profile dba dba-00
LTP-X(ont-template)("TP")# service 4 profile dba dba-00

Apply the configuration
LTP-X(ont-template)("TP")# do commit

Save the configuration
LTP-X(ont-template)("TP")# do save

Add ONT 454C545800F6B2:

Switch to the configuration mode
LTP-X# configure terminal

Switch to the tree 0 ONT ID 10
LTP-X(config)# interface ont 0/10

Assign the required ONT to this position
LTP-X(config)(if-ont-0/10)# serial 454C545800F6B2

Assign the TP template to this position
LTP-X(config)(if-ont-0/10)# template TP

Apply the configuration
LTP-X(config)(if-ont-0/10)# do commit

```

```

Save the configuration
LTP-X(config)(if-ont-0/10)# do save

```

The configuration of the ONT 454C545800F6B2 will be similar to the configuration of the ONT 454C545800F6B1 from Section 10, but to add ONT it is enough to execute only 2 commands. When viewing the ONT configuration by the [T] markers, it is easy to distinguish the template configuration parameters from the usual ones.

```
LTP-8X(config)(if-ont-0/10)# do show interface ont 0/10 configuration
```

```
-----  
[ONT0/10] configuration  
-----
```

```

Description:                                ''
Enabled:                                    true
Serial:                                    ELTX0800F6B1
Password:                                  '00000000000'
[T] Fec up:                                false
[T] Downstream broadcast:                  true
[T] Ber interval:                          none
[T] Ber update period:                     60
[T] Rf port state:                         disabled
[T] Omc error tolerant:                    false
Service [0]:
[T] Profile cross connect:                  INTERNET      ONT Profile Cross Connect 1
[T] Profile dba:                           dba-00         ONT Profile DBA 0
      Custom cross connect:                 disabled
Service [1]:
[T] Profile cross connect:                  VOIP           ONT Profile Cross Connect 2
[T] Profile dba:                           dba-00         ONT Profile DBA 0
      Custom cross connect:                 disabled
Service [2]:
[T] Profile cross connect:                  MC_IPTV         ONT Profile Cross Connect 3
[T] Profile dba:                           dba-00         ONT Profile DBA 0
      Custom cross connect:                 disabled
Service [3]:
[T] Profile cross connect:                  UC_IPTV         ONT Profile Cross Connect 4
[T] Profile dba:                           dba-00         ONT Profile DBA 0
      Custom cross connect:                 disabled
Service [4]:
[T] Profile cross connect:                  ACS             ONT Profile Cross Connect 5
[T] Profile dba:                           dba-00         ONT Profile DBA 0
      Custom cross connect:                 disabled
Service [5]:
[T] Profile cross connect:                  unassigned
[T] Profile dba:                           dba-00         ONT Profile DBA 0
      Custom cross connect:                 disabled
[T] Profile shaping:                       shaping-00      ONT Profile Shaping 0
[T] Profile ports:                         NTP-RG         ONT Profile Ports 1
[T] Profile management:                    unassigned
[T] Profile scripting:                     unassigned
      Custom model:                         none
      Template:                            TP            ONT Template 1
LTP-8X(config)(if-ont-0/10)#
```

Configuration of LTP for operation with the internal ACS server

LTP-4/8X rev.B and LTP-4/8X rev.C equipment contains in its software a built-in ACS server that allows automatic configuration of ONTs belonging to this OLT.



LTP-8X with ver.3 software version does not have a built-in ACS server. You can find out the type of OLT model by running the **show system environment** command, the TYPE field.

```

Enable built-in ACS server
LTP-X(config)# ip acs server enable

Specify the number of VLAN, in which the ACS server will operate
LTP-X(config)# ip acs server vid 4094

Enable DHCP server for IP issuing to ONT
LTP-X(config)# ip dhcp server enable

Enable adding option 43 to DHCP packets
LTP-X(config)# ip dhcp server option-43

Specify a range of addresses to be issued to customers
LTP-X(config)# ip dhcp server range "192.168.200.2" "192.168.201.254"

Apply the configuration
LTP-X(config)#do commit

Save the configuration
LTP-X(config)#do save

Switch to the SWITCH mode
LTP-X# switch

SWITCH configuration mode
LTP-X(switch)# configure

Set VLAN ID to connect to ACS
LTP-X(switch)(config)# vlan 4094

Transmit tagged to all pon ports*
LTP-X(switch)(config-vlan)# tagged pon-port 0 - 7
LTP-X(switch)(config-vlan)# exit

Apply the configuration
LTP-X(switch)(config)# commit
LTP-X(switch)(config)# exit
LTP-X(switch)# exit

Save the configuration
LTP-X# save

Switch to the configuration mode
LTP-X# configure terminal

Create and switch to the Cross-Connect profile for the ONT management service
LTP-X(config)# profile cross-connect ACS

```

```

Specify the service VLAN of the management service
LTP-X(config-cross-connect)("ACS")# outer vid 4094
LTP-X(config-cross-connect)("ACS")# type management

Apply the configuration
LTP-X(config-cross-connect)("ACS")# do commit

Save the configuration
LTP-X(config-cross-connect)("ACS")# do save

```

** Command is applicable for:*

LTP-8 rev.B HW_revision 2v.

LTP-8 rev. HW_revision 1v.

For LTP-4X rev.B/LTP-4X rev.C, the following command applies: **tagged pon-port 0 –3**

For operation of ONT with built-in ACS, it is necessary to assign the created CC and Management profiles to this ONT in the same way as described in Section Adding and configuring ONT.

Configuration of ACS profile for ONT

```
LTP-X> acs

Switch to the ONT profile configuration mode
(acs)# profile

Add the profile for ONT TEST
(acs-profiles)# add profile TEST

Switch to the TEST profile configuration mode
(acs-profiles)# profile TEST
(acs-profile-name='TEST'

Paste the profile from APPENDIX A.
(acs-profile-name='TEST')commit
(acs-profile-name='TEST')
```

For the convenience of working with ACS profiles for ONT, you can upload the required profile via ftp/tftp protocol.

Example:

```
LTP-8x# copy tftp://10.0.0.1/acs-config fs://acs-config
```



The uploaded configuration should be in the form of executable commands on the OLT to configure the required profile. The specified commands will be transparently and automatically transmitted to the CLI without completely deleting the configuration of the current profiles.

File example

```
profile
add profile test1
profile test1
set property InternetGatewayDevice.LANDevice.1.WLANConfiguration.1.PreSharedKey.1.X_ELTEX_RU_UserDefinedPSK
1 nocheck
set property InternetGatewayDevice.LANDevice.1.WLANConfiguration.1.RadioEnabled 1 nocheck
```

Adding and configuring a subscriber via ACS

```
(acs)#

Switch to subscriber configuration mode
(acs)# user

Add the subscriber IVANOV
(acs-user)# add user IVANOV

Switch to the subscriber IVANOV configuration mode
(acs-user)# user IVANOV

Set ONT serial number for the subscriber IVANOV
(acs-user-subscriber='IVANOV')# set pon_serial 454C54580800F6B1

Set ACS profile for the subscriber IVANOV
(acs-user-subscriber='IVANOV')# set profile TEST

Set the login for the PPPoE session
(acs-user-subscriber='IVANOV')# set ppp_login test

Set the password for the PPPoE session
(acs-user-subscriber='IVANOV')# set ppp_password TEST

Set the SIP PROXY address
(acs-user-subscriber='IVANOV')# set sip_proxy 212.122.111.55

Enable phone port 1
(acs-user-subscriber='IVANOV')# set voicel_enable enabled

Set the phone number for port 1
(acs-user-subscriber='IVANOV')# set voicel_number 34234234

Set the password for phone number of port 1
(acs-user-subscriber='IVANOV')# set voicel_password test
```

ONT firmware update via ACS



Ensure that the correct date and time are set on LTP-X.


```

Switch to ACS configuration mode
LTP-X> acs

Switch to ONT firmware parameters configuration mode
(acs)firmware

Specify the address of the TFTP server and the firmware file name
(acs-firmware)copy 192.168.16.26 ntp-rg-3.22.1.14.fw.bin

View the list of uploaded files
(acs-firmware)show files

View the list of update profiles
(acs-firmware)show list

Add the update profile
(acs-firmware)add firmware 1

Switch to the profile configuration
(acs-firmware)firmware 1

Show profile configuration
(acs-firmware_config-fw id='1')show config

Set firmware file for this profile
(acs-firmware_config-fw id='1')set file ntp-rg-3.22.1.14.fw.bin

Add a configuration profile (corresponding to those ONTs that require firmware updates). The list of profiles
is available in the section (acs-profile) by the command 'show list'
(acs-firmware_config-fw id='1')add profile TEST

```

The next time the ONT contacts ACS, the firmware will update and the ONT will automatically restart.

If you have any questions, contact the ELTEX technical support service:

e-mail: techsupp@eltex.nsk.ru

APPENDIX A. Example of ACS profile for NTP-RG14XXG-W/NTU-RG14XXG-W

```

set property "InternetGatewayDevice.LANDevice.1.LANHostConfigManagement.DHCPSEnable" "1" nocheck
set property "InternetGatewayDevice.LANDevice.1.LANHostConfigManagement.DomainName" "HomeLAN" nocheck
set property "InternetGatewayDevice.LANDevice.1.LANHostConfigManagement.IPInterface.1.Enable" "1" nocheck
set property "InternetGatewayDevice.LANDevice.1.LANHostConfigManagement.IPInterface.1.
IPInterfaceAddressingType" "Static" nocheck
set property "InternetGatewayDevice.LANDevice.1.LANHostConfigManagement.IPInterface.1.IPInterfaceIPAddress"
"192.168.1.1" nocheck
set property "InternetGatewayDevice.LANDevice.1.LANHostConfigManagement.IPInterface.1.IPInterfaceSubnetMask"
"255.255.255.0" nocheck
set property "InternetGatewayDevice.LANDevice.1.LANHostConfigManagement.IPRouters" "192.168.1.1" nocheck
set property "InternetGatewayDevice.LANDevice.1.LANHostConfigManagement.MaxAddress" "192.168.1.254" nocheck
set property "InternetGatewayDevice.LANDevice.1.LANHostConfigManagement.MinAddress" "192.168.1.2" nocheck
set property "InternetGatewayDevice.LANDevice.1.LANHostConfigManagement.SubnetMask" "255.255.255.0" nocheck
set property "InternetGatewayDevice.Layer2Bridging.Bridge.1.BridgeEnable" "TRUE" nocheck
set property "InternetGatewayDevice.Layer2Bridging.Bridge.1.BridgeName" "brHSI" nocheck
set property "InternetGatewayDevice.Layer2Bridging.Bridge.1.BridgeStandard" "802.1Q" nocheck
set property "InternetGatewayDevice.Layer2Bridging.Bridge.1.VLANID" "10" nocheck
set property "InternetGatewayDevice.Layer2Bridging.Bridge.2.BridgeEnable" "1" nocheck
set property "InternetGatewayDevice.Layer2Bridging.Bridge.2.BridgeName" "brVoIP" nocheck
set property "InternetGatewayDevice.Layer2Bridging.Bridge.2.BridgeStandard" "802.1Q" nocheck
set property "InternetGatewayDevice.Layer2Bridging.Bridge.2.VLANID" "12" nocheck
set property "InternetGatewayDevice.Layer2Bridging.Bridge.3.BridgeEnable" "1" nocheck
set property "InternetGatewayDevice.Layer2Bridging.Bridge.3.BridgeName" "brIPTV" nocheck
set property "InternetGatewayDevice.Layer2Bridging.Bridge.3.BridgeStandard" "802.1Q" nocheck
set property "InternetGatewayDevice.Layer2Bridging.Bridge.3.VLANID" "11" nocheck
set property "InternetGatewayDevice.Layer2Bridging.Bridge.4.BridgeEnable" "1" nocheck

```

[illegible]

[illegible]

```

set property "InternetGatewayDevice.WANDevice.1.WANConnectionDevice.1.WANIPConnection.1.AddressingType" "DHCP"
nocheck
set property "InternetGatewayDevice.WANDevice.1.WANConnectionDevice.1.WANIPConnection.1.ConnectionType"
"IP_Routed" nocheck
set property "InternetGatewayDevice.WANDevice.1.WANConnectionDevice.1.WANIPConnection.1.DHCPClient.
SentDHCPOption.1.Enable" "1" nocheck
set property "InternetGatewayDevice.WANDevice.1.WANConnectionDevice.1.WANIPConnection.1.DHCPClient.
SentDHCPOption.1.Tag" "60" nocheck
set property "InternetGatewayDevice.WANDevice.1.WANConnectionDevice.1.WANIPConnection.1.DHCPClient.
SentDHCPOption.1.Value" "Vk9JUF9OVFAUkc=" nocheck
set property "InternetGatewayDevice.WANDevice.1.WANConnectionDevice.1.WANIPConnection.1.Enable" "1" nocheck
set property "InternetGatewayDevice.WANDevice.1.WANConnectionDevice.1.WANIPConnection.1.Name" "VoIP_IPOE"
nocheck
set property "InternetGatewayDevice.WANDevice.1.WANConnectionDevice.1.WANIPConnection.2.AddressingType"
"Static" nocheck
set property "InternetGatewayDevice.WANDevice.1.WANConnectionDevice.1.WANIPConnection.2.ConnectionType"
"IP_Routed" nocheck
set property "InternetGatewayDevice.WANDevice.1.WANConnectionDevice.1.WANIPConnection.2.DefaultGateway"
"10.0.0.1" nocheck
set property "InternetGatewayDevice.WANDevice.1.WANConnectionDevice.1.WANIPConnection.2.Enable" "1" nocheck
set property "InternetGatewayDevice.WANDevice.1.WANConnectionDevice.1.WANIPConnection.2.ExternalIPAddress"
"10.10.10.10" nocheck
set property "InternetGatewayDevice.WANDevice.1.WANConnectionDevice.1.WANIPConnection.2.Name" "MC_IPOE" nocheck
set property "InternetGatewayDevice.WANDevice.1.WANConnectionDevice.1.WANIPConnection.2.SubnetMask" "255.0.0.0"
nocheck
set property "InternetGatewayDevice.WANDevice.1.WANConnectionDevice.1.WANIPConnection.2.
X_BROADCOM_COM_IGMPEnabled" "1" nocheck
set property "InternetGatewayDevice.WANDevice.1.WANConnectionDevice.1.WANPPPConnection.1.ConnectionTrigger"
"AlwaysOn" nocheck
set property "InternetGatewayDevice.WANDevice.1.WANConnectionDevice.1.WANPPPConnection.1.ConnectionType"
"IP_Routed" nocheck
set property "InternetGatewayDevice.WANDevice.1.WANConnectionDevice.1.WANPPPConnection.1.Enable" "1" nocheck
set property "InternetGatewayDevice.WANDevice.1.WANConnectionDevice.1.WANPPPConnection.1.IdleDisconnectTime"
"0" nocheck
set property "InternetGatewayDevice.WANDevice.1.WANConnectionDevice.1.WANPPPConnection.1.Name" "HSI_PPP" nocheck
set property "InternetGatewayDevice.WANDevice.1.WANConnectionDevice.1.WANPPPConnection.1.NATEnabled" "1" nocheck

```


APPENDIX B. Example of setting private parameters for NTP-RG14XXG /NTP-RG14XXG-W

```

set property "InternetGatewayDevice.WANDevice.1.WANConnectionDevice.1.WANPPPConnection.1.Username" "szt" nocheck
set property "InternetGatewayDevice.WANDevice.1.WANConnectionDevice.1.WANPPPConnection.1.Password" "szt" nocheck
set property "InternetGatewayDevice.Services.VoiceService.1.VoiceProfile.1.Line.1.CallingFeatures.CallerIDName"
"111" nocheck
set property "InternetGatewayDevice.Services.VoiceService.1.VoiceProfile.1.Line.1.DirectoryNumber" "111" nocheck
set property "InternetGatewayDevice.Services.VoiceService.1.VoiceProfile.1.Line.1.Enable" "Enabled" nocheck
set property "InternetGatewayDevice.Services.VoiceService.1.VoiceProfile.1.Line.1.SIP.AuthPassword" "111"
nocheck
set property "InternetGatewayDevice.Services.VoiceService.1.VoiceProfile.1.Line.1.SIP.AuthUserName" "111"
nocheck
set property "InternetGatewayDevice.Services.VoiceService.1.VoiceProfile.1.Line.2.CallingFeatures.CallerIDName"
"222" nocheck
set property "InternetGatewayDevice.Services.VoiceService.1.VoiceProfile.1.Line.2.DirectoryNumber" "222" nocheck
set property "InternetGatewayDevice.Services.VoiceService.1.VoiceProfile.1.Line.2.Enable" "Enabled" nocheck
set property "InternetGatewayDevice.Services.VoiceService.1.VoiceProfile.1.Line.2.SIP.AuthPassword" "222"
nocheck
set property "InternetGatewayDevice.Services.VoiceService.1.VoiceProfile.1.Line.2.SIP.AuthUserName" "222"
nocheck
set property "InternetGatewayDevice.Services.VoiceService.1.VoiceProfile.1.SIP.OutboundProxy" "test.ru" nocheck
set property "InternetGatewayDevice.Services.VoiceService.1.VoiceProfile.1.SIP.RegistrarServer" "test.ru"
nocheck
set property "InternetGatewayDevice.Services.VoiceService.1.VoiceProfile.1.SIP.UserAgentDomain" "test.ru"
nocheck

```

APPENDIX C. RS-232 null-modem cable pin designation

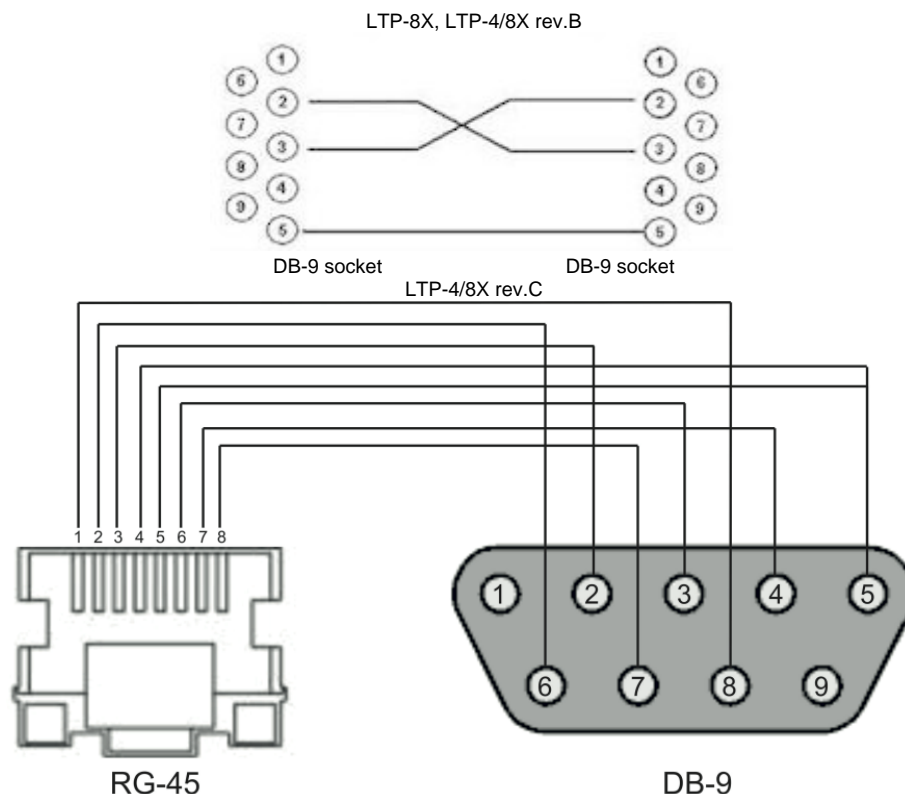

Appendix D. ONT NTU-1 configuration

Objective:

Configure the terminal in bridge mode, data transmission to the ONT side will be carried out in VLAN 2149.

Solution

A distinctive feature of ONT NTU-1 is its operation only in bridge mode; full configuration is performed by OLT using OMCI protocol without using an ACS server.

Add the required VLAN to the LTP switch configuration.

```
Switch to the SWITCH mode
LTP-X# switch

SWITCH configuration mode
LTP-X(switch)# configure

Add the required VLAN
LTP-X(switch)(config)# vlan 2149

Receive traffic in VLAN from front-port 0
LTP-X(switch)(config-vlan)# tagged front-port 0

Transmit tagged to all pon ports*
LTP-X(switch)(config-vlan)# tagged pon-port 0 - 7
LTP-X(switch)(config-vlan)# exit

Apply the configuration
LTP-X(switch)(config)# commit
LTP-X(switch)(config)# exit
LTP-X(switch)# exit
```

** Command is applicable for:*

LTP-8 rev.B HW_revision 2v.
LTP-8 rev. HW_revision 1v.

For LTP-8X HW_revision 1vX version, the following command applies: **tagged pon-port 0 – 1** .

For LTP-4X rev.B, the following command applies: **tagged pon-port 0 – 3**.

Cross-connect and Ports profile configuration

```
Switch to the configuration mode
LTP-X# configure terminal

Create and switch to the Cross-Connect profile for NTU-1
LTP-X(config)# profile cross-connect NTU1

Specify the bridge operation mode
LTP-X(config-cross-connect)("NTU1")# bridge

Assign this Cross-connect to the bridge group 20
LTP-X(config-cross-connect)("NTU1")# bridge group 20
```

```
Specify the service VLAN for this service
LTP-X(config-cross-connect)("NTU1")# outer vid 2149
LTP-X(config-cross-connect)("NTU1")# exit

Create and switch to the profile for NTU-1
LTP-X(config)# profile ports NTU1

Add the port 0 in bridge group 20
LTP-X(config-ports)("NTU1")# port 0 bridge group 20

Apply the configuration
LTP-X(config-ports)("NTU1")# do commit

Save the configuration
LTP-X(config-ports)("NTU1")# do save
```

Adding and configuring ONT NTU-1.

```
Switch to the configuration mode
LTP-X# configure terminal

Switch to the tree 0 ONT ID 3
LTP-X(config)# interface ont 0/3

Assign the required ONT to this position
LTP-X(config)(if-ont-0/3)# serial 454C545862000078

Assign the ports profile to NTU-1
LTP-X(config)(if-ont-0/3)# profile ports NTU1

Assign the cross-connect profile to NTU-1
LTP-X(config)(if-ont-0/3)# service 0 profile cross-connect NTU1

Assign the default DBA profile
LTP-X(config)(if-ont-0/3)# service 0 profile dba dba-00

Apply the configuration
LTP-X(config)(if-ont-0/3)# do commit

Save the configuration
LTP-X(config)(if-ont-0/3)# do save
```

Configuration example for transmitting multiple VLANs in TRUNK mode via ONT NTU-1.

In the current firmware version, it is possible to transmit up to 8 VLANs in trunk mode via ONT NTU-1.

In the example, transmission of VLANs 100 and 200 will be considered.

Add the required VLAN to the LTP switch configuration.

```
Switch to the SWITCH mode
LTP-X# switch
```

```
SWITCH configuration mode
LTP-X(switch)# configure
```

```
Add the required VLAN
LTP-X(switch)(config)# vlan 100,200
```

```
Receive traffic in VLAN from front-port 0
LTP-X(switch)(config-vlan)# tagged front-port 0
```

```
Transmit tagged to all pon ports*
LTP-X(switch)(config-vlan)# tagged pon-port 0 - 7
LTP-X(switch)(config-vlan)# exit
```

```
Apply the configuration
LTP-X(switch)(config)# commit
LTP-X(switch)(config)# exit
LTP-X(switch)# exit
```

** Command is applicable for:*

LTP-8 rev.B HW_revision 2v.
LTP-8 rev. HW_revision 1v.

For LTP-8X HW_revision 1vX version, the following command applies: **tagged pon-port 0 – 1** .
For LTP-4X rev.B, the following command applies: **tagged pon-port 0 – 3**.

Cross-connect and Ports profile configuration

```
Switch to the configuration mode
LTP-X# configure terminal

Create and switch to the Cross-Connect profile for NTU-1
LTP-X(config)# profile cross-connect NTU100

Specify the bridge operation mode
LTP-X(config-cross-connect)("NTU100")# bridge

Assign this Cross-connect to the bridge group 20
LTP-X(config-cross-connect)("NTU100")# bridge group 20

Specify the service VLAN for this service
LTP-X(config-cross-connect)("NTU100")# outer vid 100

Specify the user VLAN for this service
LTP-X(config-cross-connect)("NTU100")# user vid 100
LTP-X(config-cross-connect)("NTU100")# exit

Create and switch to the Cross-Connect profile for NTU-1
LTP-X(config)# profile cross-connect NTU200

Assign this Cross-connect to the bridge group 20
LTP-X(config-cross-connect)("NTU200")# bridge group 20

Specify the service VLAN for this service
LTP-X(config-cross-connect)("NTU200")# outer vid 200

Specify the user VLAN for this service
LTP-X(config-cross-connect)("NTU200")# user vid 200
LTP-X(config-cross-connect)("NTU200")# exit
```

```
Create and switch to the profile for NTU-1
LTP-X(config)# profile ports NTU1

Add the port 0 in bridge group 20
LTP-X(config-ports)("NTU1")# port 0 bridge group 20

Apply the configuration
LTP-X(config-ports)("NTU1")# do commit

Save the configuration
LTP-X(config-ports)("NTU1")# do save
```

Adding and configuring ONT NTU-1.


```

Switch to the configuration mode
LTP-X# configure terminal

Switch to the tree 0 ONT ID 3
LTP-X(config)# interface ont 0/3

Assign the required ONT to this position
LTP-X(config)(if-ont-0/3)# serial 454C545862000078

Assign the ports profile to NTU1
LTP-X(config)(if-ont-0/3)# profile ports NTU1

Assign the cross-connect profile to NTU-1
LTP-X(config)(if-ont-0/3)# service 0 profile cross-connect NTU100

Assign the default DBA profile
LTP-X(config)(if-ont-0/3)# service 0 profile dba dba-00

Assign the cross-connect profile to NTU-1
LTP-X(config)(if-ont-0/3)# service 1 profile cross-connect NTU200

Assign the default DBA profile
LTP-X(config)(if-ont-0/3)# service 1 profile dba dba-00

Apply the configuration
LTP-X(config)(if-ont-0/3)# do commit

```

APPENDIX E. ONT SFP-ONU configuration

Objective:

Configure the terminal in bridge mode, data transmission to the ONT side will be carried out in VLAN 2149.

Solution

A distinctive feature of ONT SFP-ONU is its operation only in bridge mode; full configuration is performed by OLT using OMCI protocol without using an ACS server.

Add the required VLAN to the LTP switch configuration.

```

Switch to the SWITCH mode
LTP-X# switch

SWITCH configuration mode
LTP-X(switch)# configure

Add the required VLAN
LTP-X(switch)(config)# vlan 2149

Receive traffic in VLAN from front-port 0
LTP-X(switch)(config-vlan)# tagged front-port 0

Transmit tagged to all pon ports*
LTP-X(switch)(config-vlan)# tagged pon-port 0 - 7
LTP-X(switch)(config-vlan)# exit

Apply the configuration
LTP-X(switch)(config)# commit
LTP-X(switch)(config)# exit
LTP-X(switch)# exit

```

** Command is applicable for:*

LTP-8 rev.B HW_revision 2v.

LTP-8 rev. HW_revision 1v.

For LTP-8X HW_revision 1vX version, the following command applies: **tagged pon-port 0 – 1** .
For LTP-4X rev.B, the following command applies: **tagged pon-port 0 – 3**.

Cross-connect and Ports profile configuration

```
Switch to the configuration mode
LTP-X# configure terminal

Create and switch to the Cross-Connect profile for NTU-1
LTP-X(config)# profile cross-connect SFP

Specify the bridge operation mode
LTP-X(config-cross-connect)("NTU1")# bridge

Assign this Cross-connect to the bridge group 20
LTP-X(config-cross-connect)("NTU1")# bridge group 20
```

```
Specify the service VLAN for this service
LTP-X(config-cross-connect)("NTU1")# outer vid 2149
LTP-X(config-cross-connect)("NTU1")# exit

Create and switch to the profile for SFP-ONU
LTP-X(config)# profile ports SFPONU

Add the port 0 in bridge group 20
LTP-X(config-ports)("NTU1")# port 0 bridge group 20

Apply the configuration
LTP-X(config-ports)("NTU1")# do commit

Save the configuration
LTP-X(config-ports)("NTU1")# do save
```

Adding and configuring ONT SFP-ONU.

```
Switch to the configuration mode
LTP-X# configure terminal

Switch to the tree 0 ONT ID 3
LTP-X(config)# interface ont 0/3

Assign the required ONT to this position
LTP-X(config)(if-ont-0/3)# serial 454C545862000078

Assign the ports profile to SFPONU
LTP-X(config)(if-ont-0/3)# profile ports SFPONU

Assign the cross-connect profile to SFP-ONU
LTP-X(config)(if-ont-0/3)# service 0 profile cross-connect SFP

Assign the default DBA profile
LTP-X(config)(if-ont-0/3)# service 0 profile dba dba-00

Apply the configuration
LTP-X(config)(if-ont-0/3)# do commit

Save the configuration
LTP-X(config)(if-ont-0/3)# do save
```

Configuration example for transmitting multiple VLANs in TRUNK mode via ONT SFP-ONU.

In the current firmware version, it is possible to transmit up to 8 VLANs in trunk mode via ONT SFP-ONU.

In the example, transmission of VLANs 100 and 200 will be considered.

Add the required VLAN to the LTP switch configuration.

```
Switch to the SWITCH mode
LTP-X# switch
```

```
SWITCH configuration mode
LTP-X(switch)# configure
```

```
Add the required VLAN
LTP-X(switch)(config)# vlan 100,200
```

```
Receive traffic in VLAN from front-port 0
LTP-X(switch)(config-vlan)# tagged front-port 0
```

```
Transmit tagged to all pon ports
LTP-X(switch)(config-vlan)# tagged pon-port 0 - 7
LTP-X(switch)(config-vlan)# exit
```

```
Apply the configuration
LTP-X(switch)(config)# commit
LTP-X(switch)(config)# exit
LTP-X(switch)# exit
```

Cross-connect and Ports profile configuration

```
Switch to the configuration mode
LTP-X# configure terminal
```

```
Create and switch to the Cross-Connect profile for SFP-ONU
LTP-X(config)# profile cross-connect SFP100
```

```
Specify the bridge operation mode
LTP-X(config-cross-connect)("SFP100")# bridge
```

```
Assign this Cross-connect to the bridge group 20
LTP-X(config-cross-connect)("SFP100")# bridge group 20
```

```
Specify the service VLAN for this service
LTP-X(config-cross-connect)("SFP100")# outer vid 100
```

```
Specify the user VLAN for this service
LTP-X(config-cross-connect)("SFP100")# user vid 100
LTP-X(config-cross-connect)("SFP100")# exit
```

```
Create and switch to the Cross-Connect profile for SFP-ONU
LTP-X(config)# profile cross-connect SFP200
```

```
Assign this Cross-connect to the bridge group 20
LTP-X(config-cross-connect)("SFP200")# bridge group 20
```

```
Specify the service VLAN for this service
LTP-X(config-cross-connect)("SFP200")# outer vid 200
```

```
Specify the user VLAN for this service
LTP-X(config-cross-connect)("SFP200")# user vid 200
LTP-X(config-cross-connect)("SFP200")# exit
```

```
Create and switch to the profile for SFP-ONU
LTP-X(config)# profile ports SFPONU
```

```
Add the port 0 in bridge group 20
LTP-X(config-ports)("SFPONU")# port 0 bridge group 20
```

```
Apply the configuration
LTP-X(config-ports)("SFPONU ")# do commit
```

```
Save the configuration
LTP-X(config-ports)("SFPONU ")# do save
```

Adding and configuring ONT SFP-ONU.

```
Switch to the configuration mode
LTP-X# configure terminal

Switch to the tree 0 ONT ID 3
LTP-X(config)# interface ont 0/3

Assign the required ONT to this position
LTP-X(config)(if-ont-0/3)# serial 454C545862000078

Assign the ports profile to SFPONU
LTP-X(config)(if-ont-0/3)# profile ports SFPONU

Assign the cross-connect profile to SFP-ONU
LTP-X(config)(if-ont-0/3)# service 0 profile cross-connect SFP100

Assign the default DBA profile
LTP-X(config)(if-ont-0/3)# service 0 profile dba dba-00

Assign the cross-connect profile to SFP-ONU
LTP-X(config)(if-ont-0/3)# service 1 profile cross-connect SFP200

Assign the default DBA profile
LTP-X(config)(if-ont-0/3)# service 1 profile dba dba-00

Apply the configuration
LTP-X(config)(if-ont-0/3)# do commit
```

Configuration example for transmission via ONT SFP-ONU VLANs in TRUNK mode, several VLANs in Selective-tunnel mode and other VLANs in Tunnel mode

In firmware versions older than 3.26.0, it is possible to organize the so-called trunk tunnel services through SFP-ONU.

VLAN 300 (multicast) and QinQ VLAN 1100 and 1200 (Internet) come to the uplink OLT. It is necessary to let them pass to the switch integrated in the OLT via SFP-ONU.

Consider the procedure of OLT configuration for the above diagram.

- **Step 1.** Configure the switch.

```
LTP-X(switch)(config)# vlan 300,1100,1200
LTP-X(switch)(config-vlan-range)# tagged pon-port 0
LTP-X(switch)(config-vlan-range)# front-port 0
LTP-X(switch)(config-vlan-range)# commit
```

- **Step 2.** Configure cross-connect profiles.

```
LTP-X(config)# profile cross-connect cc-tunnel
LTP-X(config-cross-connect)("cc-tunnel")# bridge
LTP-X(config-cross-connect)("cc-tunnel")# bridge group 10
LTP-X(config-cross-connect)("cc-tunnel")# tag-mode tunnel
LTP-X(config-cross-connect)("cc-tunnel")# exit
LTP-X(config)# profile cross-connect "cc-selecttunnel"
LTP-X(config-cross-connect)("cc-selecttunnel")# bridge
LTP-X(config-cross-connect)("cc-selecttunnel")# bridge group 10
LTP-X(config-cross-connect)("cc-selecttunnel")# tag-mode selective-tunnel
LTP-X(config-cross-connect)("cc-selecttunnel")# exit
LTP-X(config)# profile cross-connect "cc-single"
LTP-X(config-cross-connect)("cc-single")# bridge
LTP-X(config-cross-connect)("cc-single")# bridge group 10
LTP-X(config-cross-connect)("cc-single")# user vid 300
LTP-X(config-cross-connect)("cc-single")# exit
```

- **Step 3.** Configure ports profiles.

```
LTP-X(config)# profile ports bridge-10
LTP-X(config-ports)("bridge-10")# port 0 bridge group 10
```

- **Step 4.** Set up the address-table profile by specifying the VLANs used for tunnels and assign the profile to GPON ports.

```
LTP-X(config)# profile address-table at-tunnel
LTP-X(config-address-table)("at-tunnel")# s-vlan 1100 use c-vlan
LTP-X(config-address-table)("at-tunnel")# s-vlan 1200 use c-vlan
LTP-X(config-address-table)("at-tunnel")# exit
LTP-X(config)# interface gpon-port 0
LTP-X(config)(if-gpon-0)# profile address-table at-tunnel
```

- **Step 5.** Set up the SFP-ONU to be used for switch connection.

```
LTP-X(config)# interface ont 0/0
LTP-X(config)(if-ont-0/0)# serial "454C545300000001"
LTP-X(config)(if-ont-0/0)# service 0 profile cross-connect cc-tunnel dba dba-00
LTP-X(config)(if-ont-0/0)# service 1 profile cross-connect cc-selecttunnel dba dba-00
LTP-X(config)(if-ont-0/0)# service 2 profile cross-connect cc-single dba dba-00
LTP-X(config)(if-ont-0/0)# profile ports "bridge-10"
LTP-X(config)(if-ont-0/0)# service 0 custom svid 1100
LTP-X(config)(if-ont-0/0)# service 1 custom svid 1200
LTP-X(config)(if-ont-0/0)# service 1 selective-tunnel uvid 201-203
LTP-X(config)(if-ont-0/0)# service 2 custom svid 300
```

APPENDIX F. ONT/GPON interface status table

ONT status description

ONT status	Description
UNACTIVATED	ONT has no configurations
ALLOCATED	ONT detected
AUTHINPROGRESS	ONT authentication is in progress
AUTHFAILED	Authentication failed
AUTHOK	Authentication successfully completed
PRECONFIG	Preparing ONT for configuration
CFGINPROGRESS	ONT configuration is in progress

CFGFAILED	Configuration failed
OK	ONT is in operation
BLOCKED	ONT is blocked
MIBRESET	ONT MIB reset
FAILED	ONT has a critical failure
FWUPDATING	ONT firmware update is in progress
DISABLED	ONT is disabled (technically blocked)

GPON interface states

Value	Description
INITED	The channel is initialised
CFGINPROGRESS	The channel configuration is in progress
CFGFAILED	The channel configuration completed with error
OK	The channel is in operation
FAILED	The channel is out of operation
DISABLED	The channel is disabled